#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- onerbl /
- onerbl AC/DC Power Adapter Instruction Manual for OGORI Cordless Electric Mop Model B07

#### onerbl B07

# onerbl AC/DC Power Adapter Instruction Manual

For OGORI Cordless Electric Mop Model B07

#### 1. Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC/DC Power Adapter. This adapter is specifically designed to provide power and charge the OGORI Cordless Electric Mop, Model B07. Please read this manual thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

To prevent electric shock, fire, or damage to the product, always observe the following safety precautions:

- Use the adapter only with compatible devices as specified (OGORI Cordless Electric Mop Model B07).
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not attempt to disassemble, modify, or repair the adapter. Refer servicing to qualified personnel.
- Ensure the power outlet voltage matches the adapter's input specifications (AC 100-240V).
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep the adapter away from children.



Image: The onerbl AC/DC Power Adapter incorporates multiple protection features, including safeguards against short-circuit, over-voltage, and over-current conditions to ensure electrical safety.

## 3. PRODUCT OVERVIEW

The onerbl AC/DC Power Adapter is a high-quality replacement charger designed for reliable performance. It features a durable construction and incorporates safety mechanisms to protect your device.

# **Key Features:**

- Input: AC 100-240V 50/60Hz (Worldwide AC Input)
- Over Voltage Protection
- Over Heat Protection
- Tested Units for reliable operation

## What's in the Box:

• 1 x AC Adapter



Image: The onerbl AC/DC Power Adapter, showing the main unit and its integrated power cord with a barrel connector.



Image: Front view of the adapter, displaying the input voltage (100-240VAC, 50/60Hz) and regulatory marks.



# 4. SETUP

Follow these steps to set up your onerbl AC/DC Power Adapter:

- 1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
- 2. **Connect to Device:** Insert the barrel connector end of the adapter cable into the charging port of your OGORI Cordless Electric Mop Model B07. Ensure a secure connection.
- 3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard wall power outlet (AC 100-240V).



Image: The onerbl AC/DC Power Adapter shown correctly plugged into a power strip, ready for use.

# 5. OPERATING INSTRUCTIONS

Once the adapter is properly connected to both the OGORI Cordless Electric Mop and a power outlet, it will begin to supply power or charge the device. The charging indicator on your mop (if available) will typically illuminate to confirm charging status.

- Allow the mop to charge fully as per its own instruction manual for optimal battery life.
- Disconnect the adapter from the mop and the wall outlet once charging is complete or when the mop is not in use.

## 6. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power adapter:

- Cleaning: Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use. Avoid tightly coiling the cable to prevent damage.
- Cable Care: Do not bend, twist, or pull the cable excessively. Avoid placing heavy objects on the cable.

# 7. TROUBLESHOOTING

If you encounter issues with your power adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not charging/powering on	Adapter not properly connected; Power outlet issue; Damaged adapter/cable; Incompatible device.	Ensure all connections are secure. Test the power outlet with another device. Inspect adapter and cable for damage. Confirm compatibility with OGORI Mop Model B07.
Adapter feels hot	Normal operation; Overload; Poor ventilation.	A slight warmth is normal. Ensure the adapter is not covered and has adequate ventilation. If excessively hot, disconnect immediately and cease use.
Sparking when plugging in	Normal inrush current; Faulty outlet/adapter.	A small spark is often normal. If sparking is excessive or persistent, discontinue use and check the outlet or adapter for faults.

If troubleshooting steps do not resolve the issue, discontinue use and contact customer support.

#### 8. Specifications

Detailed technical specifications for the onerbl AC/DC Power Adapter:

• Brand: onerbl

• Manufacturer: Shenzhen Waweis Technology Co., Ltd

• Compatible Devices: OGORI Cordless Electric Mop Model B07

Input Voltage: AC 100-240V, 50/60Hz
Connector Type: Barrel Connector

• Main Power Connector Type: 2 Pin (US Plug)

Special Feature: Travel-friendly design
Included Components: 1 x AC Adapter

• Portable: Yes



Image: Visual representation of the adapter's dimensions (1.6 inch width, 2.6 inch length, 1.2 inch height) and the cable length (76 inches).

## 9. WARRANTY AND SUPPORT

Specific warranty information for this product may vary. Please refer to the product packaging or contact the seller directly for details regarding warranty coverage and customer support. For technical assistance or inquiries, please reach out to the manufacturer or seller through your purchase platform.

© 2023 onerbl. All rights reserved.

#### **Related Documents - B07**



