

[Manuals.plus](#) /

› [Eureka](#) /

› Eureka NEN180 Bagless Canister Vacuum Cleaner User Manual

Eureka NEN180

Eureka NEN180 Bagless Canister Vacuum Cleaner User Manual

Model: NEN180

INTRODUCTION

Thank you for choosing the Eureka NEN180 Bagless Canister Vacuum Cleaner. This manual provides important information for the safe and efficient operation of your vacuum. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury.

- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

WHAT'S IN THE BOX



The Eureka NEN180 Bagless Canister Vacuum Cleaner, along with its various attachments and filters.

Your Eureka NEN180 package includes:

- Vacuum cleaner unit
- Floor nozzle
- Pet tool
- Crevice tool
- Dust brush
- HEPA filter (pre-installed or separate)
- Hose and telescopic wand assembly

SETUP

Follow these steps for initial assembly:

1. **Attach the Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
2. **Assemble the Wand:** Connect the telescopic wand to the hose handle. Extend the wand to a comfortable length by pressing the release button and pulling.
3. **Attach the Floor Nozzle:** Connect the desired floor nozzle or accessory to the end of the telescopic wand. Ensure it is firmly attached.
4. **Check Filters:** Verify that the dust cup and HEPA filters are correctly installed before first use.

OPERATING INSTRUCTIONS

Powering On and Off

Plug the power cord into a suitable electrical outlet. Press the power button located on the main unit to turn the vacuum on or off.

Adjusting Suction Power

The Eureka NEN180 features stepless suction control with an adjustable knob. Rotate the knob to increase or decrease suction power, allowing for customized cleaning performance on different surfaces and controlling noise levels.



STEPLESS SPEED REGULATION

Freely controls the suction power

Adjust the suction power using the knob for optimal cleaning on various surfaces.

Multi-Floor Cleaning

Switch seamlessly between floor and carpet cleaning modes. The versatile floor nozzle features a foot-activated switch to extend or retract bristles, adapting to different floor types without bending over.



MULTI-FLOOR CLEANING

Step on the footswitch to extend the bristles of the floor brush to cut through dry stains stuck to the floor.

The foot switch on the floor nozzle allows for easy transition between hard floors and carpets.

Swivel Steering

The floor brush is designed with flexible swivel steering, making it easy to maneuver around furniture and obstacles for thorough home cleaning.



SWIVEL STEERING

Flexible steers floor brush for easy home cleaning

Swivel steering provides enhanced maneuverability for cleaning tight spaces.

Automatic Cord Rewind

To retract the power cord, simply press the cord rewind button. The cord will automatically retract into the unit for convenient storage.

Automatic Cord Rewind

The power cord can be inserted into the machine with a single touch, making storage easier and keep your home organized.



The automatic cord rewind feature simplifies storage and keeps your home organized.

MAINTENANCE

Emptying the Dust Cup

The large 2-liter dust cup provides ample capacity for extended cleaning sessions. To empty, detach the dust cup from the main unit, open the bottom lid, and dispose of collected debris. Reattach securely.

Small and Light, Easy To Store

Compact and small with a portable design that makes NEN180 canister vacuum easy to move, and with an automatic cord rewind is convenient and simple for daily storage.



The easy-empty dust cup simplifies debris disposal.

Cleaning the Filters

The Eureka NEN180 features a three-stage filtration system, including a washable HEPA filter. Regular cleaning of the filters is essential for maintaining optimal suction and filtration efficiency.

- **Washable Pre-Motor Filter:** Clean monthly, replace every 3 months.
- **Washable HEPA Filter:** Clean every 6 months, replace yearly.

To clean, remove the filters and rinse them under running water until clean. Allow them to air dry completely for at least 24 hours before reinserting into the vacuum. Do not use a brush or any abrasive materials to clean the filters.



POWERFUL CLEANING

960w motor and 16kpa suction power

The dust cup and filters are washable for convenient maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner will not run.	Power cord not firmly plugged in.	Plug unit firmly into outlet.
	Blown fuse or tripped circuit breaker.	Replace fuse or reset circuit breaker.
Vacuum cleaner will not pick up or suction is low.	Dust cup is full.	Empty dust cup.

Problem	Possible Cause	Solution
	Filters need cleaning or replacement.	Clean or replace filters as per maintenance section.
	Hose or nozzle is clogged.	Remove hose/nozzle and check for obstructions. Clear any blockages.
Dust escapes from vacuum cleaner.	Dust cup not installed correctly.	Ensure dust cup is securely latched.
	Filters are missing or installed incorrectly.	Check and correctly install all filters.

SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Name	Bagless Canister Vacuum Cleaner
Model Number	NEN180
Special Feature	Automatic Cord Rewind, Bagless, Compact, HEPA, Washable Filter
Filter Type	HEPA Filter
Included Components	Accessory Kit, Crevice Tool, Dusting Brush
Capacity	2 Liters
Wattage	1000 watts
Recommended Uses	Carpet, Floor
Color	Silver With Black
Product Dimensions	16.14"L x 10.43"W x 9.45"H
Noise Level	80 dB
Item Weight	13.23 pounds
UPC	840296504949

WARRANTY & SUPPORT

For warranty information or technical support, please contact Eureka customer service.

Customer Service: 1-800-282-2886

You can also visit the official Eureka website for more resources and FAQs.

www.eureka.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCV2DX37>

More documents and user manuals: <https://manuals.plus/>