

## PPLEE CR1021

# PPLEE CR1021 Portable White Noise Machine User Manual

Model: CR1021

## INTRODUCTION

---

The PPLEE CR1021 Portable White Noise Machine is designed to create a peaceful and soothing environment, aiding in sleep, relaxation, and focus. It features 42 non-looping sounds, a rechargeable battery, night light, and timer functions, making it suitable for home, office, and travel use.

This manual provides detailed instructions for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.

## SAFETY INFORMATION

---

Please observe the following safety precautions to prevent damage to the device or injury to yourself or others:

- Do not expose the device to water or excessive moisture.
- Keep the device away from heat sources and direct sunlight.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only the provided Type-C charging cable and a compatible power adapter (DC 5V/1A).
- Keep out of reach of small children when not in use, especially the charging cable.
- Ensure proper ventilation; do not cover the speaker grille during operation.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1x PPLEE CR1021 Portable White Noise Machine
- 1x Type-C Power Cable
- 1x Hanging Loop

- 1x User Manual (this document)

## SETUP

---

### Charging the Device

Before first use, fully charge the white noise machine. The device features a built-in 2200mAh rechargeable battery.

1. Connect the provided Type-C charging cable to the charging port on the device.
2. Connect the other end of the cable to a compatible USB power adapter (DC 5V/1A) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.

*A full charge provides approximately 33-58 hours of playtime, depending on volume level and night light usage.*

## TYPE-C RECHARGEABLE

Built-in 2200mAh battery powered, and memory playback function

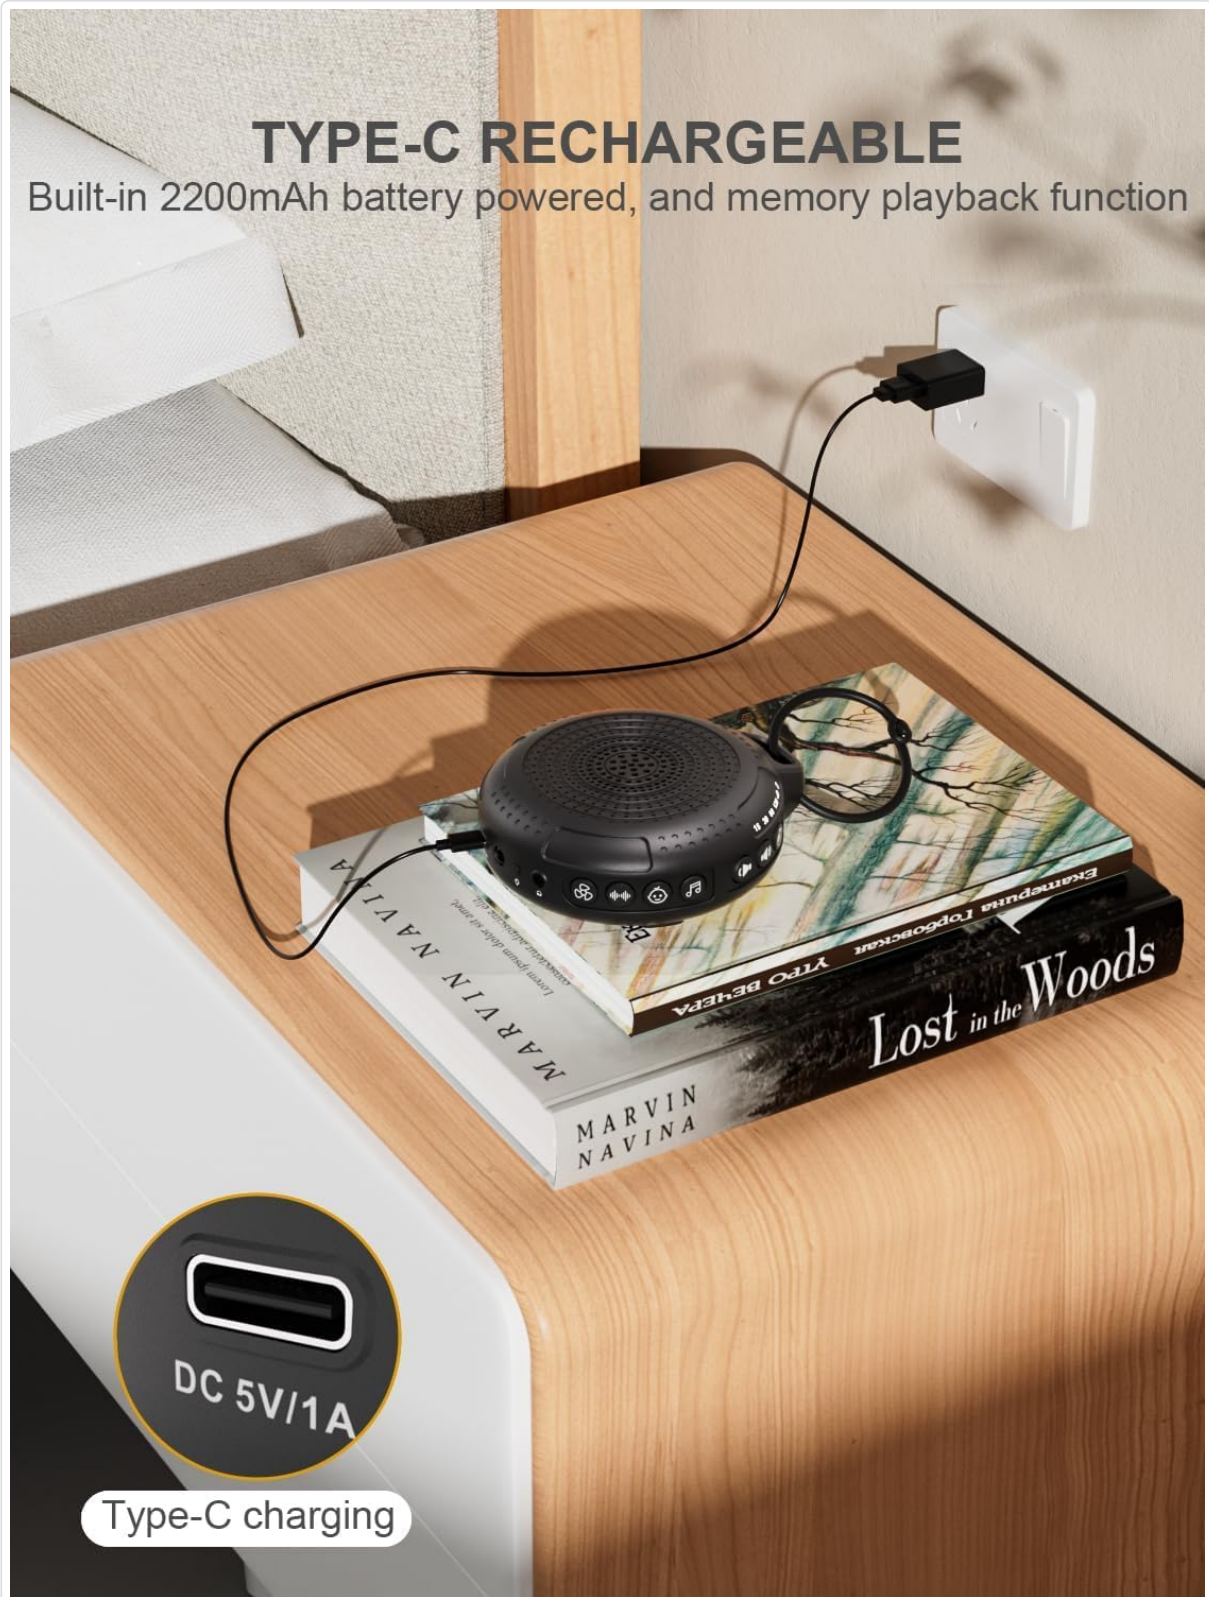


Image: The PPLEE CR1021 White Noise Machine connected to a Type-C charger, demonstrating how to charge the device.

### Placement

Place the device on a stable, flat surface or use the included hanging loop to attach it to a stroller, car seat, or crib. Ensure the speaker is not obstructed for optimal sound projection.

# PORTABLE BABY TRAVEL ESSENTIAL

Small and lightweight makes the outdoors is perfect



Image: The PPLEE CR1021 White Noise Machine hanging from a stroller, highlighting its compact and portable design for travel.

## OPERATING INSTRUCTIONS

---

### Controls Overview

# COMPACT BUT MULTIFUNCTIONAL



 **58 Hours Playtime**

 **42 Soothing Sounds**

 **8-Levels Volume adjustment**

 **15, 60, 90, 120 Mins Timer**

 **2-levels Nightlight**

 **Type-C Rechargeable**

 **Memory Function**

 **Child Lock**

Image: A detailed view of the PPLEE CR1021 White Noise Machine, illustrating the location of its various control buttons and features.

## Power On/Off

- Press and hold the Power button ( ) for 2 seconds to turn the device ON or OFF.
- The device will remember your last sound, volume, and timer settings upon powering on.

## Sound Selection

The device offers 42 non-looping soothing sounds across four categories:

- **White Noises:** 5 sounds
- **Fan Sounds:** 6 sounds
- **Lullabies:** 15 sounds

- **Natural Sounds:** 16 sounds

1. Press the Sound Category buttons (e.g., White Noise, Fan, Lullaby, Nature) to switch between sound categories.
2. Once a category is selected, press the Sound Selection button (↻) to cycle through the sounds within that category.



Image: The PPLEE CR1021 White Noise Machine displaying the variety of 42 soothing sounds available, categorized for easy selection.

## Volume Control

Adjust the sound volume using the dedicated volume buttons:

- Press the Volume Up button (↗) to increase the volume.
- Press the Volume Down button (↘) to decrease the volume.
- There are 8 distinct volume levels.



Image: The PPLEE CR1021 White Noise Machine highlighting its volume adjustment and timer functions, showing options for 15, 30, 60, and 120 minutes.

### Timer Function

The device can play continuously or automatically turn off after a set period:

- Press the Timer button ( ) to cycle through the available timer settings: 15 minutes, 30 minutes, 60 minutes, 120 minutes, or continuous play.
- An indicator light will show the selected timer duration.

## Night Light

The integrated night light offers two brightness levels:

- Press the Night Light button ( ) once for the first brightness level.
- Press it again for the second, brighter level.
- Press a third time to turn the night light off.

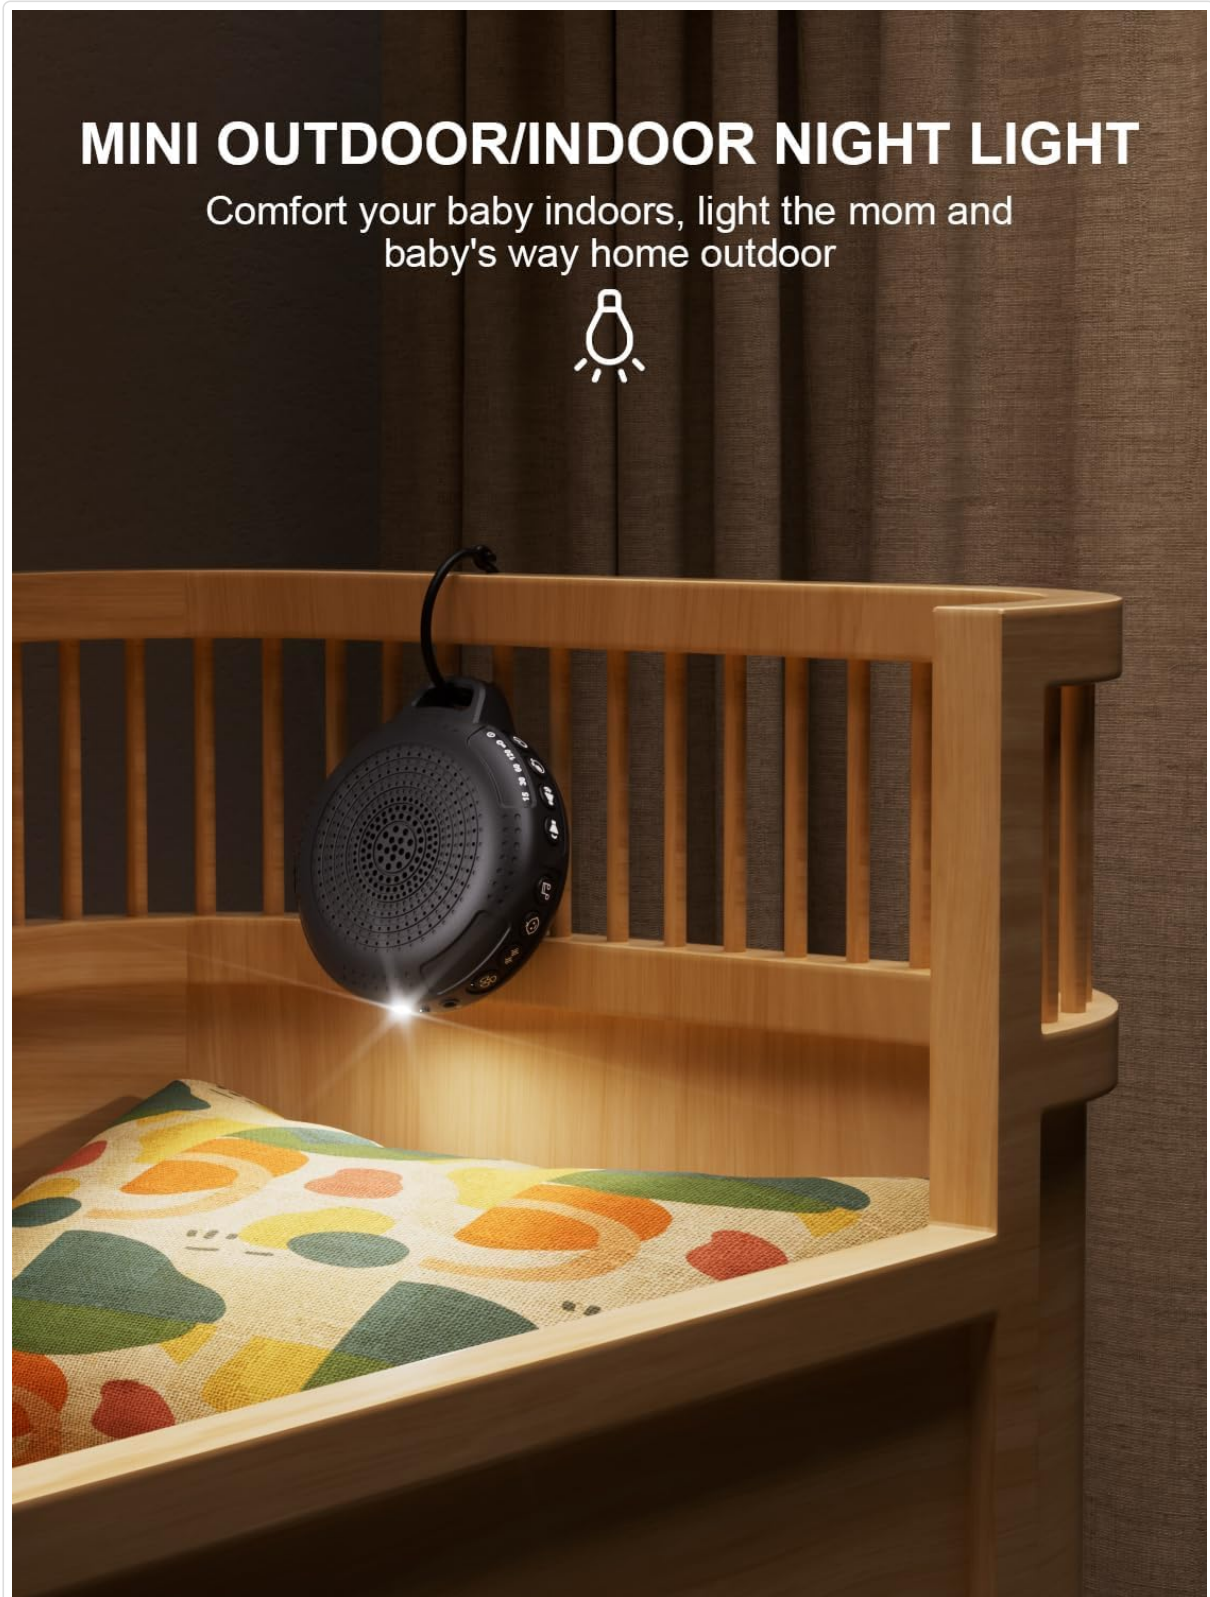


Image: The PPLEE CR1021 White Noise Machine with its night light illuminated, shown hanging on a crib, providing gentle illumination.

## Child Lock Function

To prevent accidental changes to settings, activate the child lock:

- Press and hold the Child Lock button ( ) for 2 seconds to activate or deactivate the child lock.
- When activated, all other buttons will be unresponsive until the child lock is deactivated.



Image: The PPLEE CR1021 White Noise Machine with a visual representation of its child lock feature, designed to maintain settings and prevent tampering.

## Headphone Jack

For private listening, connect standard 3.5mm headphones to the headphone jack located on the side of the device. The speaker will automatically mute when headphones are connected.

## MAINTENANCE

---

### Cleaning

- Ensure the device is turned off and unplugged before cleaning.
- Wipe the exterior with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

### Storage

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its lifespan.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device using the provided Type-C cable.
No sound.	Volume is too low or muted. Headphones are connected.	Increase the volume. Disconnect headphones if not needed.
Buttons are unresponsive.	Child Lock is activated.	Deactivate the Child Lock by pressing and holding the Child Lock button for 2 seconds.
Battery life is shorter than expected.	High volume level or continuous night light use. Battery degradation over time.	Reduce volume or night light usage. Ensure full charge.
Charging is slow or not working.	Faulty cable or power adapter. Charging port issue.	Try a different Type-C cable and a known working 5V/1A USB power adapter.

## SPECIFICATIONS

---

Feature	Detail
Model Name	CR1021
Brand	PPLLEE
Power Source	Battery Powered (2200mAh rechargeable)
Charging Port	Type-C (DC 5V/1A)
Number of Sounds	42 (5 White Noise, 6 Fan, 15 Lullabies, 16 Natural)
Volume Levels	8
Timer Options	15, 30, 60, 120 minutes, Continuous
Night Light	2 Brightness Levels
Dimensions (L x W x H)	12.5 x 11 x 4.3 cm (4.92 x 4.3 x 1.69 inches)
Weight	177 g (0.39 lbs)
Included Components	Device, Type-C Cable, Hanging Loop, User Manual

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official PPLLEE website. Keep your purchase receipt as proof of purchase.