

Aigostar AIG-8719138832460

Aigostar 8L XXL Air Fryer Instruction Manual

Model: AIG-8719138832460

[Safety](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

INTRODUCTION

Thank you for purchasing the Aigostar 8L XXL Air Fryer. This appliance uses advanced 360° hot air circulation technology to cook your favorite foods with significantly less oil, offering a healthier alternative to traditional frying. Its large 8-liter capacity and transparent viewing window make cooking convenient and efficient for families and gatherings. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The air fryer is equipped with non-slip feet for stability.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Aigostar Air Fryer.



Figure 1: Aigostar 8L XXL Air Fryer, showcasing its sleek design and transparent viewing window in a modern kitchen environment.

Key Features:

- **Transparent Viewing Window:** Monitor cooking progress without opening the basket.
- **8L XXL Capacity:** Ideal for large families (6-8 people) or entertaining.
- **1700W Power:** Ensures fast and efficient cooking.
- **LED Touch Screen with Dual Knobs:** Intuitive control for temperature, time, and preset functions.
- **12 Preset Programs:** Optimized settings for various dishes.
- **360° Hot Air Circulation:** For even cooking and up to 80% less fat.

- **BPA-Free Materials:** For safe and healthy cooking.
- **Removable Non-Stick Basket:** Easy to clean and dishwasher safe.



Figure 2: The spacious 8L XXL basket, demonstrating its capacity with a whole roasted chicken, suitable for large family meals.

Double knob design is easy and convenient to operate

Tip: Press to switch temperature and time



Figure 3: Close-up of the LED touch screen and dual knob controls, showing various preset cooking functions like chicken, fries, steak, and cake.

SETUP AND FIRST USE

- Unpacking:** Carefully remove the air fryer and all packaging materials. Keep packaging for future storage or disposal.
- Cleaning:** Before first use, clean the basket and drawer thoroughly with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
- Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
- Power Connection:** Plug the power cord into a grounded wall outlet.
- Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the basket firmly back into the air fryer until it clicks into place.
3. **Power On:** Plug in the appliance. The display will light up.
4. **Select Function:**
 - **Preset Programs:** Use the "Function" knob to cycle through the 12 preset cooking programs. Once a program is selected, the air fryer will automatically set the optimal temperature and time.
 - **Manual Mode:** Alternatively, use the "Time/Temp" knob to manually adjust the temperature (80°C - 200°C) and cooking time (1-60 minutes). Press the knob to switch between temperature and time settings.
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Monitor Progress:** Use the transparent viewing window and internal light to check on your food without interrupting the cooking process.
7. **Shake/Flip Food:** For even cooking, especially for items like fries or chicken wings, it is recommended to shake or flip the food halfway through the cooking time. The air fryer may beep to remind you. Carefully pull out the basket, shake/flip, and reinsert. The cooking will resume automatically.
8. **End of Cooking:** The air fryer will beep several times when the cooking cycle is complete. The display will show "OFF".
9. **Remove Food:** Carefully pull out the basket using the handle. Place the basket on a heat-resistant surface. Use tongs to remove the cooked food.
10. **Power Off:** Unplug the appliance from the wall outlet after use.

With large windows and independent lighting

You can check the cooking status at any time



Figure 4: The transparent viewing window with internal lighting allows you to monitor your food's cooking progress without opening the basket, ensuring consistent results.

Preheating Function:

The air fryer features an intelligent preheating function. When selecting a preset program, the appliance may automatically preheat to the recommended temperature. For manual cooking, you can preheat by setting the desired temperature and time (e.g., 5 minutes) and starting the cycle before adding food.

Cooking Tips:

- For crispy results, lightly brush or spray food with oil.
- Smaller food items usually require shorter cooking times than larger ones.
- Do not cook excessively greasy foods in the air fryer.
- For homemade fries, soak potato sticks in water for 30 minutes, dry thoroughly, then toss with a small amount of oil before air frying.



Figure 5: Access the Aigostar recipe community by scanning the QR code to discover a wide range of recipes and cooking ideas for your air fryer. [Visit the Aigostar Recipe Community](#)



Figure 6: Your air fryer includes a recipe book with 100 original recipes, providing inspiration for various meals and desserts.

MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and extend the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Drawer:** The removable basket and drawer are dishwasher safe. Alternatively, wash them with warm water and a non-abrasive sponge with a small amount of dish soap. Ensure all food residue is removed.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles.

6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Figure 7: The removable basket design facilitates easy cleaning. The non-stick coating ensures food slides out easily, and the basket is dishwasher safe.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working. Basket not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Check the power outlet with another appliance. Push the basket firmly into the main unit until it clicks into place.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overcrowded. Food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
Food is not crispy.	Too much moisture in food. Not enough oil (for some foods). Temperature too low or time too short.	Pat food dry before cooking. Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Cooking greasy food. Residue from previous use.	This is normal for greasy foods. Ensure the basket is clean. Clean the basket and the interior thoroughly after each use.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C (350°F) in a well-ventilated area.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	AIG-8719138832460
Model Name	JOY
Capacity	8 Litres
Power Output	1700 Watts
Voltage	240 Volts
Dimensions (L x W x H)	32.7 x 36.8 x 41.2 cm
Weight	7.22 kg
Color	Silver
Material	Plastic, Glass, Non-stick coating
Control Method	Touch (LED Touch Screen)
Temperature Range	80°C - 200°C
Special Features	Transparent viewing window, 12 preset programs, Intelligent preheating
Dishwasher Safe Parts	Basket, Drawer
Country of Origin	China

WARRANTY AND SUPPORT

Aigostar products are manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Aigostar website.

If you encounter any issues or have questions regarding your Aigostar 8L XXL Air Fryer, please contact our customer support team. Contact details can typically be found on the Aigostar website or on the product packaging.

- **Online Support:** Visit the Aigostar official website for FAQs, troubleshooting guides, and contact forms.
- **Email Support:** Refer to your product documentation for the customer service email address.
- **Phone Support:** Refer to your product documentation for customer service phone numbers.