



Manuals.plus /

› PWOSUN /

› PWOSUN 15.6-inch Digital Photo Frame User Manual

PWOSUN 156N2-M-Z

PWOSUN 15.6-inch Digital Photo Frame User Manual

Model: 156N2-M-Z



INTRODUCTION

This user manual provides detailed instructions for setting up, operating, and maintaining your PWOSUN 15.6-inch Digital Photo Frame. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.



The PWOSUN 15.6-inch Digital Photo Frame features a Full HD touchscreen and 32GB of internal storage, designed for easy sharing of photos and videos.

PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x PWOSUN 15.6-inch Digital Photo Frame
- 1 x Power Adapter
- 1 x Detachable Bracket
- 1 x Remote Control
- 1 x User Manual (this document)



The digital photo frame comes with essential accessories for immediate use, including a power adapter and a detachable bracket.

SETUP GUIDE

1. Powering On and Initial Setup

1. **Connect Power:** Plug the power adapter into the DC port on the back of the frame, then plug the adapter into a wall outlet. The frame will automatically power on.

2. **Language Selection:** Follow the on-screen prompts to select your preferred language.
3. **Wi-Fi Connection:** Select your Wi-Fi network from the list and enter the password. A stable Wi-Fi connection is required for sharing photos and videos via the app.

2. Installing the Vphoto App

The Vphoto app allows you to easily share photos and videos to your digital photo frame from your smartphone.

1. **Download the App:** Search for "Vphoto" in the Google Play Store (for Android devices) or the Apple App Store (for iOS devices).
2. **Install and Open:** Download and install the app, then open it on your smartphone.
3. **Register/Login:** Create a new account or log in if you already have one.

Vphoto APP Instruction

Preserve Precious Moments Forever

1. Download Vphoto app
2. Add devices by code

3. Share photo and videos
4. Invite your beloved ones to share with you




The Vphoto app facilitates easy photo and video sharing to your frame. Download it from your device's app store.

3. Pairing Your Device

1. **Get Pairing Code:** On your digital photo frame, navigate to the "Settings" menu and find the "Device Binding" or "Add Device" option. A unique pairing code will be displayed.

2. **Enter Code in App:** In the Vphoto app on your smartphone, select "Add Device" and enter the pairing code displayed on your frame.
3. **Confirm Connection:** Once the code is entered, the frame and app will connect. You can now begin sharing media.

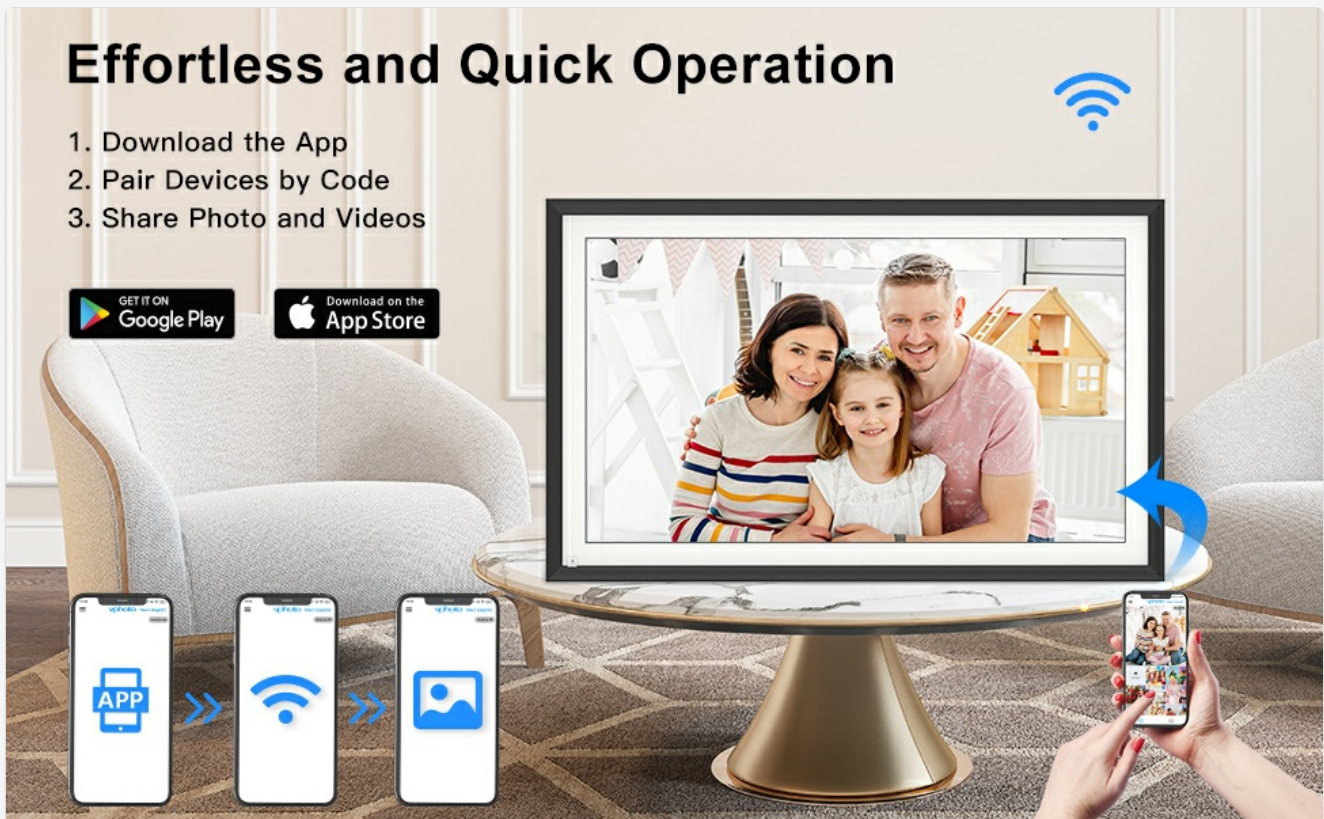


The pairing process is straightforward, allowing quick connection between your smartphone and the digital photo frame.

4. Mounting Options

The frame supports both tabletop display and wall mounting.

- **Tabletop:** Attach the included detachable bracket to the back of the frame for stable tabletop placement. The frame can be oriented in landscape or portrait mode.
- **Wall Mount:** The frame has mounting holes on the back for wall installation. Ensure you use appropriate wall anchors and screws (not included) for secure mounting. Consider the power cable routing for a clean installation.

Wall Mounted and Detachable Bracket Support

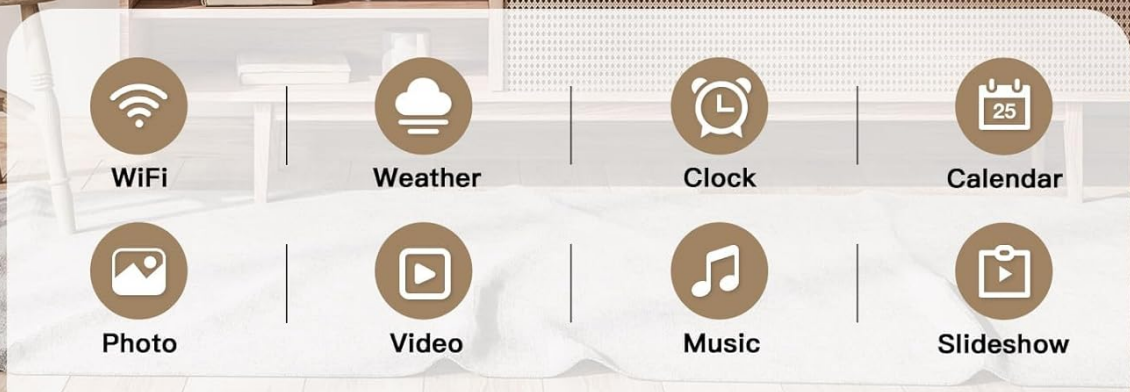

The frame offers versatile placement options, including wall mounting and tabletop display with the detachable bracket.

OPERATING INSTRUCTIONS

1. Navigating the Touchscreen Interface

The 15.6-inch Full HD touchscreen allows for intuitive navigation. Tap icons to select options, swipe to browse, and pinch to zoom (if supported by the specific media viewer).

2. Sharing Photos and Videos

- **Via Vphoto App:** Open the Vphoto app, select the photos or videos you wish to share, choose your connected frame, and tap "Send." Media will appear on your frame shortly.
- **Via SD Card/USB Drive:** Insert an SD card or USB drive into the designated slot on the frame. The frame will detect the storage device, allowing you to import media to the internal 32GB storage or play directly from the external source.



The frame supports external storage via SD card and USB drive for additional media input.

32GB Built-in Storage

Share 50 Images at a Time
Extended SD&TF Card/Unlimited Cloud Storage



With 32GB of built-in storage and support for extended cards, the frame offers ample space for your memories.


3. Using the Remote Control

The included remote control provides convenient access to various functions without touching the screen.

- **Navigation:** Use arrow keys to move between options.
- **Selection:** Press the OK/Enter button to confirm.
- **Playback Control:** Play, pause, skip, and adjust volume for videos and music.
- **Settings Access:** Quickly access common settings like slideshow mode, display brightness, and motion sensor activation.

4. Key Features and Settings

- **Slideshow Mode:** Customize transition effects, display duration for each photo, and playback order.
- **Auto-Rotate:** The frame automatically adjusts the display orientation (landscape or portrait) based on how it is positioned.
- **Motion Sensor:** Enable the motion sensor to automatically turn the screen on when movement is detected and off when the area is clear, saving power.
- **Clock & Calendar:** Display the current time and date on the screen.
- **Weather Forecast:** View local weather information (requires internet connection).
- **Alarm Clock:** Set alarms for reminders.

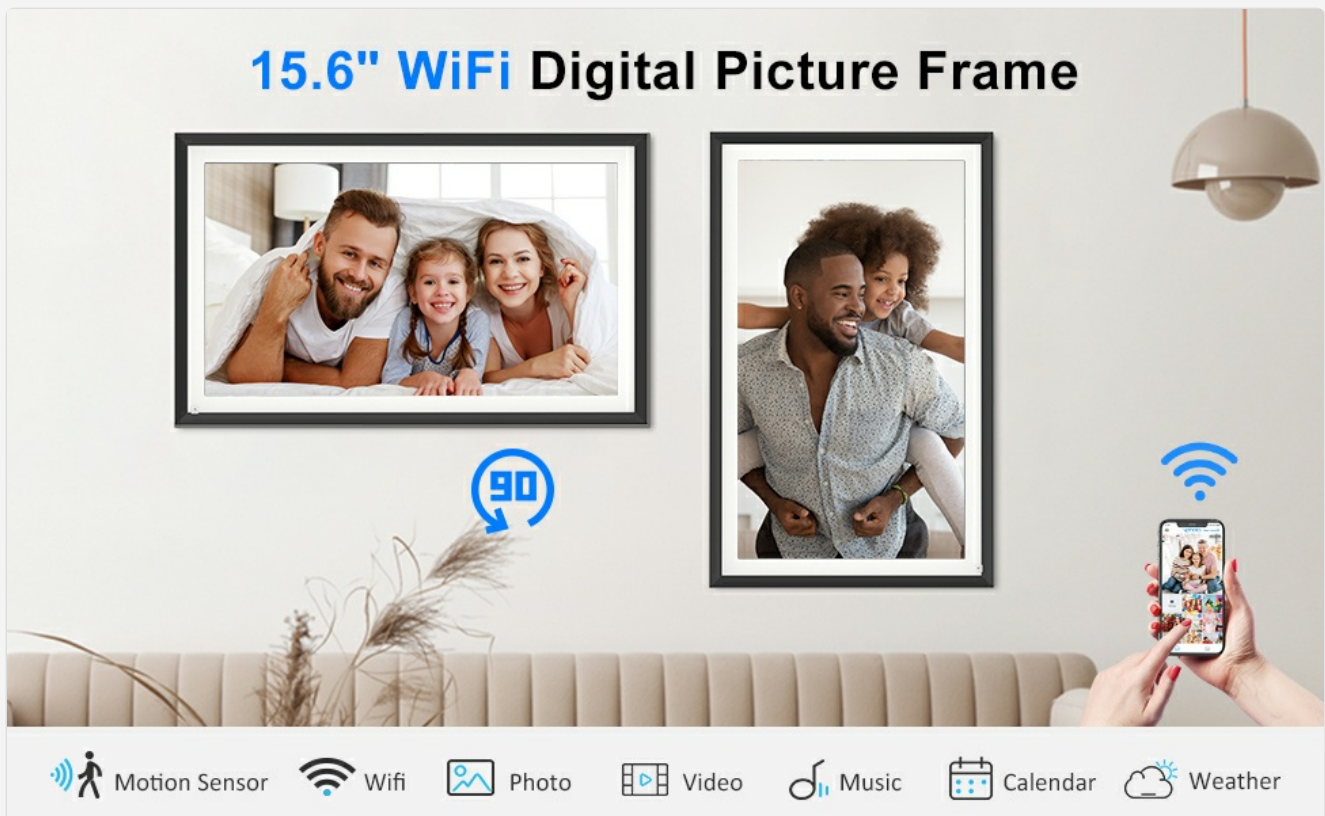

The frame offers multiple functions including motion sensing, Wi-Fi connectivity, and display of photos, videos, music, calendar, and weather.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Frame:** Wipe the frame's body with a dry, soft cloth.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight and extreme temperatures.

- **Software Updates:** Periodically check for firmware updates in the settings menu to ensure optimal performance and access to new features.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty; power outlet issue.	Ensure the power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect password; Wi-Fi signal too weak; router issue.	Double-check the Wi-Fi password. Move the frame closer to the router. Restart your router.
Photos/Videos not appearing on frame.	Not properly paired with app; media format not supported; network issue.	Verify the frame is correctly paired with the Vphoto app. Ensure media files are in supported formats (e.g., JPG, PNG for photos; MP4 for videos). Check your internet connection.
Screen is unresponsive.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the frame.
Motion sensor not working.	Motion sensor feature is disabled in settings; sensor obstructed.	Check the settings to ensure the motion sensor is enabled. Ensure there are no obstructions in front of the sensor.

SPECIFICATIONS

Feature	Detail
Model Number	156N2-M-Z
Screen Size	15.6 Inches
Resolution	1920x1080 IPS Display
Internal Storage	32GB
Connectivity	Wi-Fi (2.4GHz)
External Storage	SD Card, USB Drive
Color	Black
Product Dimensions	12.84 x 16.24 x 0.99 inches
Item Weight	2.76 pounds

WARRANTY AND SUPPORT

PWOSUN provides comprehensive after-sales service for your digital photo frame.

- **Warranty Period:** This product is covered by a 12-month warranty from the date of purchase.

- **Customer Service:** For any questions, technical support, or warranty claims, please contact our 24-hour customer service team. Refer to the contact information provided on the product packaging or the official PWOSUN website.

Please retain your proof of purchase for warranty purposes.