

[Manuals.plus](#) /

> [ElecSmart](#) /

> ElecSmart JR02 Wireless Earbuds User Manual

ElecSmart JR02

ElecSmart JR02 Wireless Earbuds User Manual

Model: JR02 | Brand: ElecSmart

INTRODUCTION

Thank you for choosing the ElecSmart JR02 Wireless Earbuds. These earbuds are designed to provide a high-quality audio experience with features tailored for sports, gaming, and everyday use. With advanced Bluetooth technology, low latency, and a comfortable over-ear design, the JR02 earbuds offer reliable performance and extended playback time. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure you get the most out of your device.

WHAT'S IN THE BOX

- ElecSmart JR02 Wireless Earbuds
- Wireless Charging Case
- User Manual (this document)
- USB Charging Cable
- Ear Caps (3 pairs)



Image: Contents of the ElecSmart JR02 package, showing the earbuds and their charging case.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the charging case to a USB power source using the provided USB cable. The LED indicator on the charging case will display the battery level (0-100%).



Image: ElecSmart JR02 earbuds inside their charging case, showing the digital battery display.

2. Pairing with Your Device

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode, and their indicator lights will flash.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "JR02" from the list.
5. Once connected, the earbud indicator lights will turn off or show a steady light, indicating successful pairing.

3. Wearing the Earbuds

The JR02 earbuds feature an over-ear design for a secure and comfortable fit, especially during physical activity. Gently place the earbud over your ear, ensuring the earhook rests comfortably behind your ear and the speaker part is positioned correctly in your ear canal. Adjust for optimal comfort and sound quality.

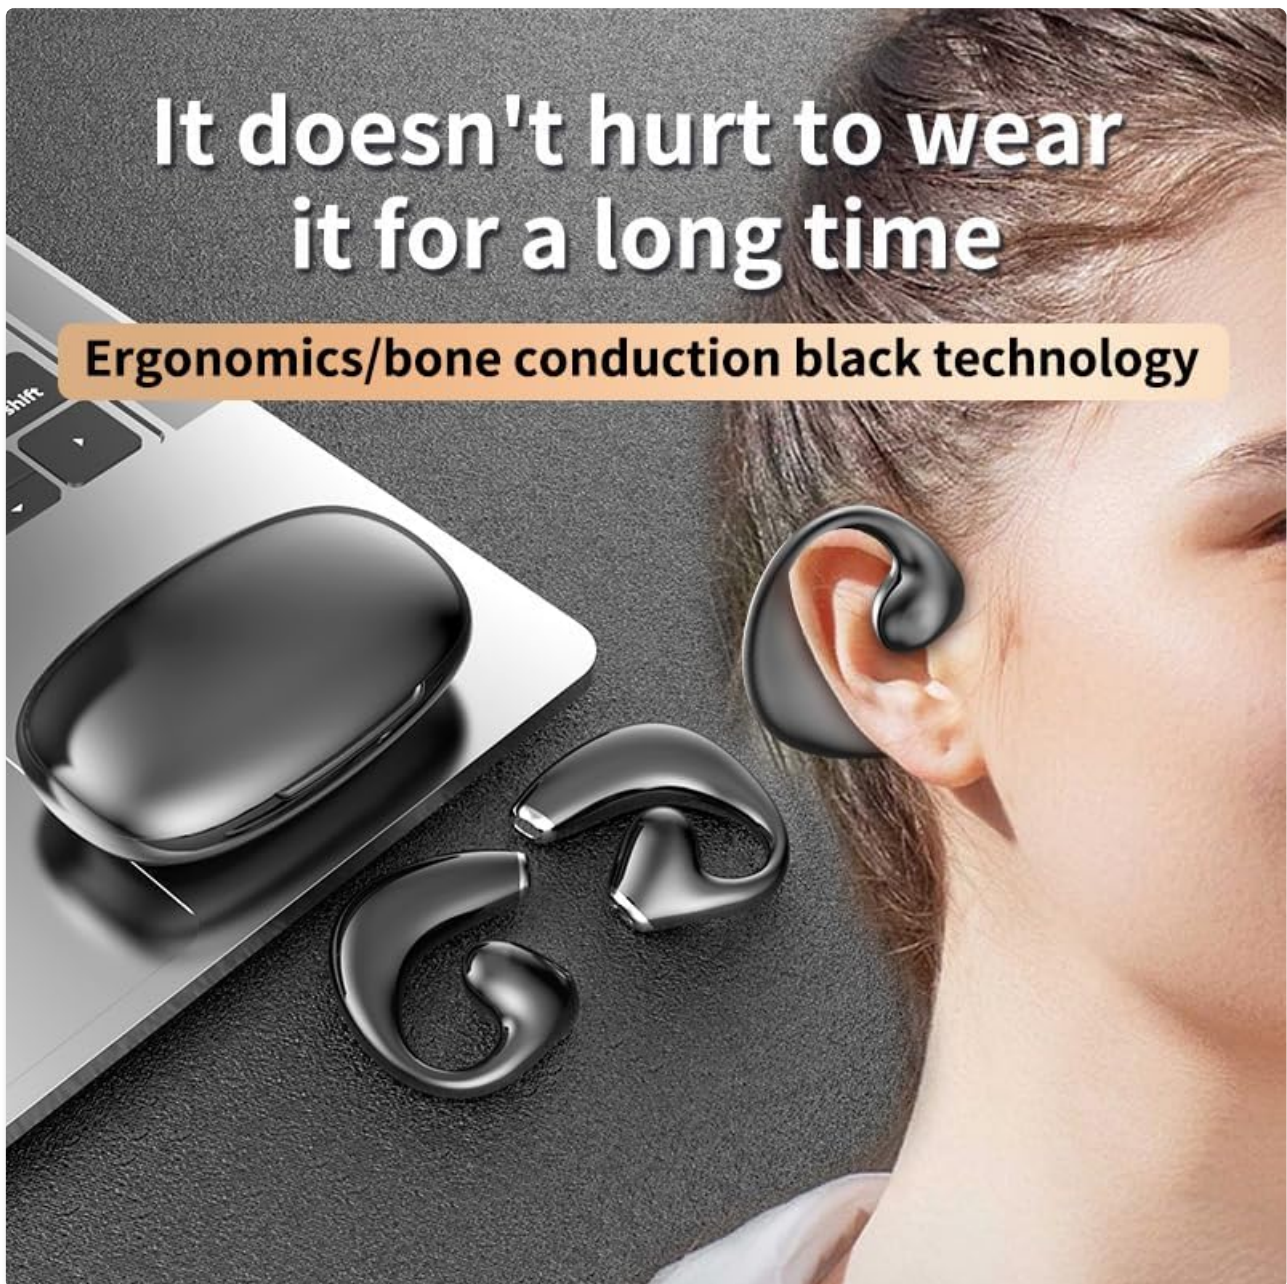


Image: A person demonstrating the comfortable and secure fit of the ElecSmart JR02 earbuds with their over-ear design.

OPERATING INSTRUCTIONS

Touch Controls

The JR02 earbuds utilize touch controls for various functions. The touch sensitive area is typically located on the outer surface of each earbud.

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track
Triple Tap (Left/Right)	Activate Voice Assistant
Long Press (Left/Right, 2 seconds)	Reject Call
Long Press (Right, 3 seconds)	Increase Volume
Long Press (Left, 3 seconds)	Decrease Volume
Four Taps (Left/Right)	Toggle Gaming Mode (Low Latency)

Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on and attempt to connect to the last paired device.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically disconnect and power off.

Battery Status

The charging case features a digital LED display that shows the battery percentage of the case and the charging status of the individual earbuds. This allows for real-time monitoring of power levels.

Bone-conductive blue earphones

Three true intelligent digital display

Outdoor Sports



Black technology,
not to the ear, really painless

Image: The ElecSmart JR02 earbuds and charging case highlighting the digital battery display and bone conduction design.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The earbuds are IPX4 waterproof, meaning they are resistant to splashing water from any direction. Do not submerge them in water or expose them to heavy rain. Dry them thoroughly if they get wet.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Earbuds not pairing/connecting	Low battery; Earbuds not in pairing mode; Device Bluetooth off; Interference.	Charge earbuds and case. Ensure case lid is open for pairing. Turn device Bluetooth off and on. Move closer to device. Forget "JR02" in device Bluetooth settings and re-pair.
Only one earbud working	One earbud not charged; Earbuds not properly synced.	Ensure both earbuds are charged. Place both earbuds back in the case, close the lid, wait a few seconds, then open again to re-sync.
No sound or low volume	Device volume too low; Earbuds not properly seated; Protective film on charging contacts.	Increase volume on your device and earbuds. Adjust earbud position. Ensure any protective film on earbud charging contacts has been removed.
Charging case not charging	Faulty cable/adapter; Loose connection.	Try a different USB cable and power adapter. Ensure the cable is securely connected to the case and power source.
Poor sound quality / Static	Interference; Distance from device; Low battery.	Move closer to your device. Avoid environments with strong Wi-Fi or other Bluetooth signals. Ensure earbuds are charged.

SPECIFICATIONS

Feature	Detail
Model Name	JR02
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Audio Latency	45 Milliseconds
Battery Life (Earbuds)	Up to 5 Hours (single charge)
Total Playtime (with case)	Up to 20 Hours
Charging Time	Approx. 1 Hour
Water Resistance Level	IPX4 (Splashproof)
Control Method	Touch
Earpiece Shape	In Ear (Over-Ear design for secure fit)
Frequency Range	20 Hz - 20,000 Hz
Impedance	40 Ohm
Material	Polycarbonate (PC)
Item Weight	3.2 ounces

WARRANTY AND SUPPORT

ElecSmart products are designed for reliability and performance. For specific warranty information and support, please refer to the warranty card included with your product or visit the official ElecSmart website. If you encounter any issues not covered in this manual, please contact ElecSmart customer service for assistance.

Please retain your proof of purchase for warranty claims.