

[Manuals.plus](#) /

› [IWEGGO](#) /

› IWEGGO YQ10S Android 15 Tablet User Manual

IWEGGO YQ10S

IWEGGO YQ10S Android 15 Tablet User Manual

Model: YQ10S | Brand: IWEGGO

1. INTRODUCTION

Welcome to the user manual for your IWEGGO YQ10S Android 15 Tablet. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. The IWEGGO YQ10S is a versatile 10.1-inch tablet featuring the Android 15 operating system, a quad-core processor, 8GB RAM, and 64GB internal storage, expandable up to 1TB. It comes with a suite of accessories to enhance its functionality as a 2-in-1 device.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- IWEGGO YQ10S Android 15 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- Foldable Protective Case
- USB-C Charging Cable
- Stylus

10.1 Inch 1280*800 HD Large Screen Display



10.1 Inch
HD Screen



1280*800
Resolution



2MP Front
Camera



8MP Rear
Camera



Image: The IWE GGO YQ10S tablet displayed with its accompanying accessories, including a Bluetooth keyboard, wireless mouse, protective case, stylus, and USB-C charging cable.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your IWE GGO YQ10S tablet.

3.1 Front View



Image: The front of the IWECCO YQ10S tablet, showcasing its 10.1-inch HD display with 1280x800 resolution. Icons indicate a 2MP front camera and an 8MP rear camera.

3.2 Rear View



Image: The back panel of the IWECCO YQ10S tablet, featuring a textured black finish and the integrated rear camera.

3.3 Buttons and Ports

- **Power Button:** Located on the side, used to power on/off or wake/sleep the device.
- **Volume Buttons:** Adjust audio levels.

- **USB-C Port:** For charging and data transfer.
- **Micro SD Card Slot:** For storage expansion.
- **Headphone Jack:** For audio output.
- **Speakers:** Dual speakers for audio output.
- **Cameras:** Front (2MP) and Rear (8MP) cameras.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's charging port and the other end to a power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power off" from the options on the screen.
- **To Restart:** Press and hold the Power button, then select "Restart" from the options.

4.3 Connecting Accessories

Your tablet comes with a Bluetooth keyboard, wireless mouse, and stylus for enhanced usability.

4.3.1 Bluetooth Keyboard and Mouse

1. Ensure the keyboard/mouse is charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth and scan for available devices.
4. Select the keyboard or mouse from the list to pair. Follow any on-screen prompts.

4.3.2 Stylus

The included stylus can be used for precise input on the touchscreen. No pairing is required for basic touch functionality.



Image: The IWEGGO YQ10S tablet positioned in its protective case, connected to a Bluetooth keyboard, illustrating its use as a portable workstation.

4.4 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi. The tablet will scan for available networks.
3. Select your desired network and enter the password if prompted.

4.5 Google Account Setup

During the initial setup process, you will be prompted to sign in with your Google account or create a new one. A Google account is required to access the Google Play Store and other Google services.

5. OPERATING INSTRUCTIONS

5.1 Navigation

The tablet uses a multi-touch HD IPS screen. Common gestures include:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through pages or lists.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

5.2 Using the Keyboard and Mouse

Once paired, the Bluetooth keyboard and mouse function similarly to a desktop computer. Use the keyboard for typing and shortcuts, and the mouse for precise cursor control and clicking.



Image: A user interacting with the IWECCO YQ10S tablet, utilizing the connected Bluetooth keyboard and mouse for tasks, highlighting its versatility.

5.3 Camera Usage

The tablet features an 8MP rear camera and a 2MP front camera. Open the Camera app to take photos or record videos. You can switch between the front and rear cameras within the app interface.

5.4 Storage Expansion

The tablet supports Micro SD cards up to 1TB. Insert a Micro SD card into the designated slot to expand your storage for apps, photos, videos, and documents.

5.5 Battery Management

The 6000mAh battery provides up to 10 hours of mixed use. To optimize battery life:

- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings > Battery**.



Image: The tablet display illustrating estimated battery life for different activities, including 5 hours for video playback, 6 hours for gaming, 8 hours for music, and 8 hours for reading.

5.6 Google GMS and Applications

Your tablet is Google GMS certified, providing access to a full suite of Google services and the Google Play Store. You can download and install a wide range of applications, including YouTube, Netflix, Facebook, and more.



Image: The tablet screen showcasing a variety of application icons, including Google Play, YouTube, Netflix, and other popular apps, signifying Google GMS certification.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the tablet screen and body. Avoid using harsh chemicals or abrasive materials, which can damage the device.

6.2 Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for available updates.

6.3 Storage Management

To maintain performance, periodically manage your tablet's storage. You can uninstall unused apps, clear cache data (**Settings > Storage**), and transfer large files to external storage (Micro SD card).

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet Not Turning On:** Ensure the tablet is charged. Connect it to a power source and try powering on again.
- **Slow Performance:** Close background apps, clear cache, or restart the tablet. Consider a factory reset if issues persist (back up data first).
- **Wi-Fi Connectivity Issues:** Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
- **Battery Drains Quickly:** Reduce screen brightness, disable unused features (Bluetooth, GPS), and close background apps.
- **Touchscreen Unresponsive:** Restart the tablet. If the issue persists, ensure the screen is clean and free of debris.

For persistent issues not covered here, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model	YQ10S

Feature	Specification
Operating System	Android 15
Screen Size	10.1 Inches
Screen Resolution	1280x800 IPS HD
Processor	1.8GHz Quad-core
RAM	8GB (2GB fixed, 6GB virtual)
Internal Storage	64GB ROM
Expandable Storage	Up to 1TB via Micro SD Card
Rear Camera	8MP
Front Camera	2MP
Battery Capacity	6000mAh
Wireless Connectivity	5G WiFi 6 (802.11ax), Bluetooth 5.0
Dimensions (LxWxH)	9.5 x 6.5 x 0.3 inches
Item Weight	2.75 pounds

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact IWECCGO customer service through their official channels. Keep your proof of purchase for warranty claims.