

Qzanyee Life RMF-TX800U

Qzanyee Life RMF-TX800U Voice Remote Control User Manual for Sony Bravia Smart TVs

Brand: Qzanyee Life

Model: RMF-TX800U

[Introduction](#)[Setup](#)[Operating Instructions](#)[Specifications](#)[Troubleshooting](#)[Warranty &](#)[Support](#)

1. INTRODUCTION

This manual provides instructions for the Qzanyee Life RMF-TX800U Voice Remote Control, designed as a replacement for various Sony Bravia Smart TV models. This remote offers voice control capabilities and dedicated app buttons for enhanced user experience.

1.1 Compatible TV Models

The RMF-TX800U remote control is compatible with a wide range of Sony Bravia 4K and 8K LED Ultra HD Smart TVs, including 2022 models and specific series:

- **Sony BRAVIA XR 4K Full Array Smart TV Series:**XR-42A90K, XR-48A90K, XR-50X90S, XR-50X92K, XR-50X94S, XR-55A75K, XR-55A80K, XR-55A80CK, XR-55A83K, XR-55A84K, XR-55A95K, XR-55X90K, XR-55X90CK, XR-55X92K, XR-55X93K, XR-55X94K, XR-65A75K, XR-65A80K, XR-65A80CK, XR-65A83K, XR-65A84K, XR-65A95K, XR-65X90K, XR-65X90CK, XR-65X92K, XR-65X93K, XR-65X94K, XR-65X95K, XR-75X90K, XR-75X90CK, XR-75X92K, XR-75X93K, XR-75X94K, XR-75X95K, XR-77A80K, XR-77A80CK, XR-77A83K, XR-77A84K, XR-85X90K, XR-85X90CK, XR-85X95K, XR-75Z9K, XR-85Z9K.
- **Sony LED 4K Smart TV 2022 Models:**KD-43X72K, KD-43X73K, KD-43X80K, KD-43X81K, KD-43X82K, KD-43X85K, KD-43X89K, KD-50X72K, KD-50X73K, KD-50X80K, KD-50X81K, KD-50X82K, KD-50X85K, KD-50X89K, KD-55X80K, KD-55X80CK, KD-55X81K, KD-55X82K, KD-55X85K, KD-55X89K, KD-65X80K, KD-65X80CK, KD-65X81K, KD-65X82K, KD-65X85K, KD-65X89K, KD-75X80K, KD-75X80CK, KD-75X81K, KD-75X82K, KD-75X85K, KD-75X89K, KD-85X85K, KD-85X89K, KD-43X85TK, KD-50X85TK, KD-55X85TK, KD-65X85TK, KD-75X85TK, KD-85X85TK.

This remote is also suitable for Sony 4K UHD Crystal HDR TVs, Sony OLED Ultra HD TVs, and other Sony Bravia Series TVs.

RMF-TX800U RMF-TX810U

Voice Remote Replacement for All Sony Smart TVs

XR-65X95K KD-75X80K KD-65X85K
KD-65X80K XR-75X95KXR-85X90K
XR-55X90CK XR-65X90CKXR-75X90CK
XR-75X90CKXR-75X90CK XR-75X90CK
XR-75X90CKCK XR-85 X90CK
KD-75X80CK KD-65X80CK KD-55X80CK
KD-50X85K KD-75X85K KD-85X85K
XR-65X90KKD-55X80KKD-50X80K
XR-65A80K XR-55X90K XR-80KXR-80KXR-80K
XR-80K XR-80K XR-80K5X95K KD-55X85K
KD-43X85KKD-43X80K XR-77A80K
XR-55A80KXR-75X90K MG3-TX800U



Image 1.1: The RMF-TX800U remote control, highlighting its compatibility with numerous Sony Smart TV models.

RMF-TX800U RMF-TX810U



Voice Remote Replacement for All Sony Smart TVs

Fit for Sony 4K UHD Crystal HDR TVs

Fit for Sony OLED Ultra HD TVs

Fit for Sony Bravia Series TVs

Fit for Sony Bravia TV XR KD
A80K A90K A95K X80K X85K
X90K X95K Z9K Series Smart TVs

Image 1.2: A visual representation of the remote control and a list of compatible Sony TV series, including 4K UHD, OLED Ultra HD, and Bravia XR models.

2. SETUP

2.1 Battery Installation

The RMF-TX800U remote control requires two (2) new 1.5V AAA alkaline batteries for operation. Ensure correct polarity when inserting the batteries.

Your browser does not support the video tag.

Video 2.1: This video demonstrates how to open the battery compartment and correctly install AAA batteries into the RMF-TX800U remote control.

2.2 Pairing Instructions

To enable voice control and full functionality, the remote must be paired with your Sony Smart TV. Follow these steps for proper pairing:

1. **Step 1:** On your TV's homepage, navigate to **Settings**.

 
2. **Step 2:** Select **Remote & Accessories** from the Settings menu.
3. **Step 3:** Choose **Connect a new remote**.
4. **Step 4:** On the RMF-TX800U remote, press and hold the **Volume Down (-)** button and the **Microphone (Google Assistant)** button simultaneously for 3 seconds to initiate pairing.
5. **Step 5:** The TV display will show "Connecting..." indicating the pairing process is in progress.
6. **Step 6:** Once connected, a confirmation message will appear. Press the **OK** button on the remote to finalize pairing.

Pairing Instructions


How to operate the RMF-TX800U remote control for proper pairing with your TV (The following specific detailed steps are explained)



STEP1:
Click Settings on the tv homepage

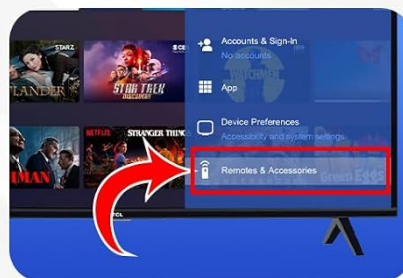

 STEP2:
Select Remote & Accessories
→ Remote Control

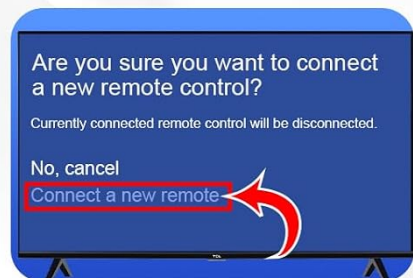

STEP3:
Select Connect a new remote.



STEP4:
4. Press and hold the  and  for 3s to start pairing




STEP5:
The display shows pairing in progress.



STEP6:
Press the Ok button to finish pairing.

Image 2.2: A visual guide detailing the six steps required to pair the RMF-TX800U remote with your television, including screenshots of the TV interface.

 Pairing Instructions

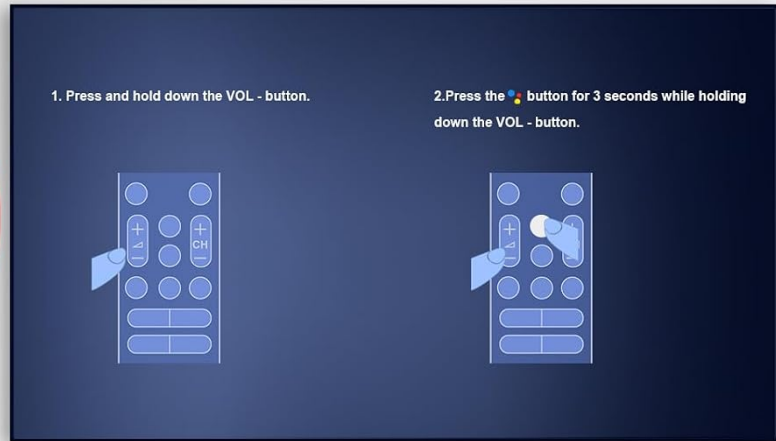

Press the ( + ) button for 3 seconds while holding down the Vol button

Image 2.3: This image illustrates the specific buttons (Volume Down and Google Assistant/Microphone) on the remote that need to be pressed simultaneously for 3 seconds to begin the pairing process.

Your browser does not support the video tag.

Video 2.2: This video demonstrates the pairing process of the remote control with a Sony TV, showing the button presses and on-screen prompts.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

Familiarize yourself with the functions of each button on your RMF-TX800U remote control:

- **Power (Green Button):** Turns the TV on or off, or sets it to standby/networked standby mode.
- **TV:** Switches to a TV channel or input, and displays the TV menu.
- **Microphone (MIC):** Activates the voice input feature. An LED above the microphone indicates activity.
- **Quick Settings (Gear Icon):** Displays Quick Settings for quick adjustments.
- **Input (Arrow into Box):** Displays and selects the input source.

- **123 (Control Menu):** Displays a menu on the TV to use functions not present on the remote.
- **Navigation D-Pad (Up/Down/Left/Right/Enter):** Navigates on-screen menus and selections.
- **BACK (Curved Arrow):** Returns to the previous screen.
- **HOME (House Icon):** Displays the TV Home Menu.
- **Volume (+/-):** Adjusts the volume level.
- **Google Assistant (Microphone Icon):** Accesses Google Assistant for voice commands and searches. Note: Google Assistant availability may vary by country/region.
- **Mute (Muted Speaker Icon):** Mutes the sound. Press again to restore sound.
- **CH+/- (Channel):** Selects the next or previous channel.
- **Play/Pause (Triangle/Two Vertical Bars):** Operates media content on the TV and connected BRAVIA Sync-compatible devices.
- **Guide (Three Horizontal Lines):** Displays the digital program guide for TV or cable/satellite box.



(Power)

Turns on or switches to standby/networked standby mode.

(TV)

Switch to a TV channel or input and display the TV menu. For details, refer to Using the TV menu page.

(MIC)

Speak into here to use the microphone in the remote control. There is an LED above the microphone.

(Quick Settings)

Display Quick Settings. For details, refer to Using the Quick Settings page.

(Input)

Display and select the input source, etc. For details, refer to Selecting inputs page.

123 (Control menu)

Display a menu on the TV to use button functions that are not on the remote control on the screen.

▲ (up)/ ▼ (Down)/ ◀ (Left)/ ▶ (Right)/ -⏏- (Enter) (Navigation D-Pad) on screen menu navigation and selection.

↶ (BACK) Return to the previous screen.

🏠 (HOME) Display the TV Home Menu For details, refer to Home menu page.

🔊 +/- (Volume) Adjust the volume.

🗨️ (Google Assistant)/ 🎤 (Microphone)

Ask Google for a little help on the big screen. Press the Google Assistant (or MIC) button on the remote to get started. For details, refer to Using the remote control microphone page. Google Assistant is not available in certain languages/countries/regions.

🔇 (Mute) Mute the sound. Press again to restore the sound.

Hint

- The accessibility shortcut service can be turned on or off by pressing and holding **🔇 (Mute)**.

CH+/- (Channel) Select the channel.

▶ (Play)/ || (Pause) Select the channel.

(Guide)

Display the digital program guide of the TV or cable/satellite box. For details, refer to Using the program guide page.

App buttons (online service)

Enjoy various video streaming services with one push. Press to watch your desired service.

Image 3.1: A comprehensive diagram illustrating all buttons on the RMF-TX800U remote control and their corresponding functions.

3.2 Dedicated App Buttons

The remote features dedicated shortcut buttons for popular streaming applications, allowing quick access to your

desired services:

- **YouTube:** Direct access to the YouTube application.
- **Netflix:** Direct access to the Netflix application.
- **Disney+:** Direct access to the Disney+ application.
- **Prime Video:** Direct access to the Amazon Prime Video application.



Image 3.2: The remote control highlighting its four dedicated application buttons for quick access to YouTube, Netflix, Disney+, and Prime Video.

3.3 Voice Control Usage

After successful pairing, you can use the voice control feature by pressing the Google Assistant (Microphone) button and speaking your command. Examples include:

- "Search [movie/show name]"
- "How's the weather today?"
- "Watch sports channels"
- "Play next episode"

WHY CHOOSE OUR PRODUCTS

OURS



- ✓ High quality chips
- ✓ Soft & High Resilience Button
- ✓ Long control distance strong signal
- ✓ Lightweight and easy to use
- ✓ Anti drop and wear-resistant

OTHERS

- ✗ Poor compatibility
- ✗ Slow button response
- ✗ Material roughness



Image 3.3: This image illustrates the voice control feature, showing the remote and a TV screen with example voice commands like "Search Harry Potter movies" and "How's the weather today?".

4. SPECIFICATIONS

Feature	Detail
Model Number	RMF-TX800U
Brand	Qzanyee Life
Connectivity Technology	Infrared
Compatible Devices	Television (Sony Bravia Smart TVs)
Max Number of Supported Devices	1
Special Feature	Ergonomic, Voice Control

Feature	Detail
Item Weight	2.28 ounces
Package Dimensions	7.68 x 2.52 x 0.71 inches

5. TROUBLESHOOTING

If you encounter issues with your RMF-TX800U remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace with new AAA alkaline batteries if necessary.
 - Verify that there are no obstructions between the remote and the TV's infrared receiver.
 - Re-attempt the pairing process as described in Section 2.2.
- **Voice control not working:**
 - Confirm the remote is successfully paired with the TV (refer to Section 2.2).
 - Ensure your TV's internet connection is stable, as voice commands often require online processing.
 - Check TV settings to ensure Google Assistant or voice input is enabled.
- **Specific buttons unresponsive:**
 - Clean the remote control surface, especially around the unresponsive button, to remove any debris.
 - If only certain app buttons are not working, ensure the corresponding apps are installed and updated on your TV.

6. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Qzanyee Life RMF-TX800U Voice Remote Control, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for warranty claims.