

[manuals.plus](#) /

› [Melitta](#) /

› [Melitta AromaFresh Therm Pro X Coffee Machine Instruction Manual](#)

**Melitta 1030-12**

# Melitta AromaFresh Therm Pro X Coffee Machine Instruction Manual

Model: 1030-12

## 1. INTRODUCTION

Thank you for choosing the Melitta AromaFresh Therm Pro X coffee machine. This appliance is designed to provide freshly ground and brewed filter coffee with maximum convenience and advanced technology. Please read this instruction manual carefully before using the appliance for the first time to ensure safe operation and optimal performance. Keep this manual for future reference.

## 2. SAFETY INSTRUCTIONS

Please observe the following safety precautions to prevent injury or damage:

- Always connect the appliance to a properly grounded power outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Unplug the appliance from the power outlet before cleaning and when not in use.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Use the appliance only for its intended purpose: brewing coffee.
- Avoid contact with hot surfaces. Use handles and knobs.
- Ensure the insulated jug is properly seated before brewing.

## 3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Melitta AromaFresh Therm Pro X coffee machine:

- **Ceramic Grinder:** For grinding fresh coffee beans. Features eleven variable grind settings.
- **Removable Water Tank:** Transparent tank with cup markings for easy filling.
- **Insulated Jug:** Double-walled stainless steel jug to keep coffee warm.
- **Filter Holder:** Removable filter basket for coffee grounds.

- **Control Panel with TFT Display:** For setting grind, intensity, timer, and starting the brewing process.
- **Bean Container:** Located above the grinder for storing coffee beans.



Image 3.1: Overview of the Melitta AromaFresh Therm Pro X coffee machine, showing the bean container, grinder, filter holder, insulated jug, and removable water tank.

## 4. SETUP

### 4.1 Unpacking and Initial Cleaning

1. Remove all packaging materials and protective films from the appliance.
2. Clean the removable water tank, insulated jug, and filter holder with warm water and a mild detergent. Rinse thoroughly and dry.
3. Wipe the exterior of the machine with a damp cloth.

## 4.2 Positioning the Machine

Place the coffee machine on a stable, level, and heat-resistant surface, away from water sources and direct heat.



Image 4.1: The Melitta AromaFresh Therm Pro X coffee machine positioned on a kitchen counter.

## 4.3 Filling the Water Tank

1. Remove the water tank by pulling it upwards.
2. Fill the tank with fresh, cold water up to the desired cup marking (2 to 8 cups).
3. Place the water tank back onto the machine, ensuring it is securely seated.



Image 4.2: A hand demonstrating the removal of the water tank for filling.

#### 4.4 Adding Coffee Beans or Ground Coffee

- For Coffee Beans:** Open the lid of the bean container and fill with whole coffee beans. Close the lid securely.
- For Ground Coffee:** If using pre-ground coffee, ensure the grinder function is deactivated (refer to operating instructions). Place the desired amount of ground coffee into the filter holder.



Image 4.3: A hand demonstrating the removal of the filter holder.

## 5. OPERATING INSTRUCTIONS

### 5.1 Adjusting Grind Settings

The ceramic grinder offers eleven variable grind settings. Rotate the dial on top of the bean container to select your preferred grind fineness. A finer grind is suitable for stronger coffee, while a coarser grind is for milder coffee.

## 5.2 Adjusting Coffee Intensity

The coffee intensity can be adjusted to five levels via the control panel. Use the '+' and '-' buttons on the display to select your desired strength. This feature allows for personalized coffee taste.

## 5.3 Brewing Coffee

1. Ensure the water tank is filled and coffee beans are in the container (or ground coffee in the filter).
2. Place the insulated jug correctly on the warming plate.
3. Select the desired number of cups (2-8) and coffee intensity using the control panel.
4. Press the start button to begin the brewing process. The machine will automatically grind the beans (if selected) and brew the coffee.
5. Once brewing is complete, the machine will keep the coffee warm in the insulated jug.



Image 5.1: A hand holding the insulated jug, ready to serve coffee.

## 5.4 Using the Timer Function

The Melitta AromaFresh Therm Pro X features two integrated timer functions. Set the desired brewing time using the control panel. The machine will automatically start brewing at the programmed time, allowing you to wake up to fresh coffee.

# 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your coffee machine.

## 6.1 Daily Cleaning

- After each use, empty and rinse the filter holder and insulated jug with warm water.
- Wipe the exterior of the machine with a damp cloth.
- Empty and rinse the removable water tank.

## 6.2 Grinder Cleaning

Periodically clean the ceramic grinder to prevent blockages and maintain optimal grinding performance. Refer to the detailed instructions in the full user manual for specific steps on disassembling and cleaning the grinder components.

## 6.3 Descaling

Depending on water hardness and frequency of use, descaling is necessary to remove mineral deposits. The machine may indicate when descaling is required. Use a suitable descaling agent designed for coffee machines and follow the product's instructions carefully. Regular descaling prevents damage and ensures consistent coffee quality.

# 7. TROUBLESHOOTING

If you encounter issues with your Melitta AromaFresh Therm Pro X, refer to the following common solutions:

Problem	Possible Cause	Solution
Coffee is too weak	Incorrect grind setting, low coffee intensity, insufficient coffee quantity.	Adjust to a finer grind, increase coffee intensity, ensure correct coffee-to-water ratio.
Machine not brewing	Water tank empty, jug not correctly placed, power issue.	Fill water tank, ensure jug is seated, check power connection.
Grinder is noisy or blocked	Foreign object in grinder, coffee bean residue buildup.	Unplug and carefully inspect/clean the grinder. Do not force operation.
Water leaks	Water tank not properly seated, filter holder overflowing.	Re-seat water tank, ensure correct coffee quantity in filter.

If the problem persists, please contact customer support.

# 8. SPECIFICATIONS

- **Brand:** Melitta
- **Model Number:** 1030-12
- **Color:** Black
- **Dimensions (L x W x H):** 25.2 x 26.8 x 46.3 cm
- **Weight:** 5.45 Kilograms
- **Capacity:** 1 Liter (up to 8 cups)
- **Power:** 1000 Watts
- **Material:** Stainless Steel
- **Special Features:** Automatic shut-off, Timer, Integrated coffee grinder, Programmable, Removable water tank

- **Country of Origin:** China

## 9. WARRANTY AND SUPPORT

---

Your Melitta AromaFresh Therm Pro X coffee machine comes with a manufacturer's warranty. Please refer to the warranty card included in the original packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, spare parts, or service inquiries, please contact Melitta customer service. Contact information can typically be found on the Melitta official website or on the warranty documentation.

**Online Resources:** For additional information, FAQs, and product registration, visit the official Melitta website: [www.melitta.com](http://www.melitta.com)