

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Next](#) /

› [Next Start 4K Media Player 16 GB TV Box User Manual](#)

Next Next Start 4K

Next Start 4K Media Player 16 GB TV Box User Manual

Model: Next Start 4K

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your Next Start 4K Media Player 16 GB TV Box. Please read this guide thoroughly before using the device to ensure optimal performance and longevity. The Next Start 4K TV Box transforms your television into a smart entertainment hub, offering access to streaming services, apps, and media playback in stunning 4K resolution.

PRODUCT OVERVIEW

Package Contents

- Next Start 4K Media Player (TV Box)
- Remote Control
- HDMI Cable
- Power Adapter
- User Manual (this document)

Key Features

- **Operating System:** Android V. 11 with Google TV interface
- **Processor:** Amlogic S905Y4 4-Core Cortex-A35, 2.0 GHz
- **Graphics:** High-performance GPU for 4K content
- **Internal Storage:** 16 GB
- **Resolution:** Supports up to 4K Ultra HD
- **Audio:** Dolby Atmos support
- **Connectivity:** Wi-Fi (5GHz WPA3 supported), Ethernet (100 Mbps), HDMI, USB, IR
- **Control:** Bluetooth and IR Remote Control with Voice Assistant

Device Layout

Familiarize yourself with the ports and buttons on your Next Start 4K TV Box.



Image: Front view of the Next Start 4K Media Player. This image shows the compact, black TV box with the "Next START 4K" logo and an HDMI port visible on the front/side.



Image: Rear view of the Next Start 4K Media Player, displaying the connectivity ports. From left to right, these include an S/PDIF optical audio output, an HDMI output, an Ethernet (LAN) port, and a DC 12V power input.



Image: Side view of the Next Start 4K Media Player, showing two USB ports for connecting external storage devices or peripherals.

Remote Control

The included remote control supports both Bluetooth and IR for versatile operation. It features dedicated buttons for popular streaming services and a voice assistant button for convenient control.



Image: The remote control for the Next Start 4K Media Player. It features a power button, navigation pad, volume controls, a Google Assistant button, and dedicated shortcut buttons for YouTube, Netflix, Prime Video, and Disney+.

SETUP GUIDE


- 1. Connect to TV:** Connect one end of the HDMI cable to the HDMI port on the Next Start 4K TV Box and the other end to an available HDMI input on your television.
- 2. Connect to Power:** Plug the power adapter into the DC 12V input port on the TV Box, then plug the adapter into a wall outlet.
- 3. Power On:** The device should power on automatically. If not, press the power button on the remote control.
- 4. Select Input:** On your TV, select the correct HDMI input source using your TV's remote control.
- 5. Initial Setup:** Follow the on-screen instructions to complete the initial setup, which includes:

- Language selection.
- Connecting to a Wi-Fi network or plugging in an Ethernet cable for wired internet access.
- Signing in with your Google account.
- Accepting terms and conditions.
- Pairing the Bluetooth remote control (if prompted).

OPERATING INSTRUCTIONS

Navigating Google TV

The Next Start 4K TV Box runs on Android 11 with the Google TV interface, providing a personalized experience with content recommendations.

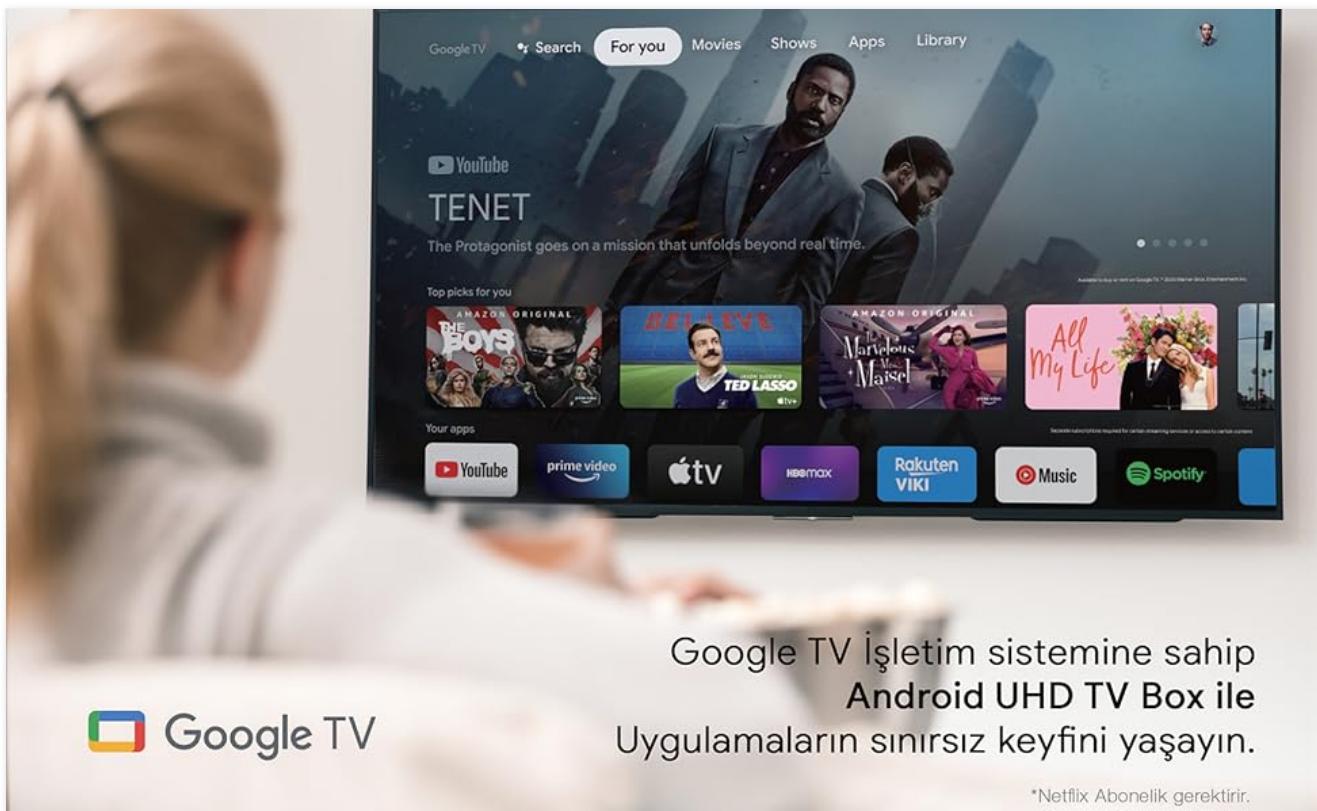

Google TV İşletim sistemine sahip
Android UHD TV Box ile
Uygulamaların sınırsız keyfini yaşayın.

*Netflix Abonelik gerektirir.

Image: A television screen displaying the Google TV interface, showing various streaming app icons and content recommendations.
This illustrates the user interface of the Next Start 4K Media Player.

- Use the **navigation pad** on the remote to move between menu items.
- Press the **center button** to select an item.
- The **Home button** returns you to the main Google TV screen.
- The **Back button** navigates to the previous screen.

Voice Control

Press the **Google Assistant button** on your remote and speak into the microphone to search for content, open apps, control playback, and more.

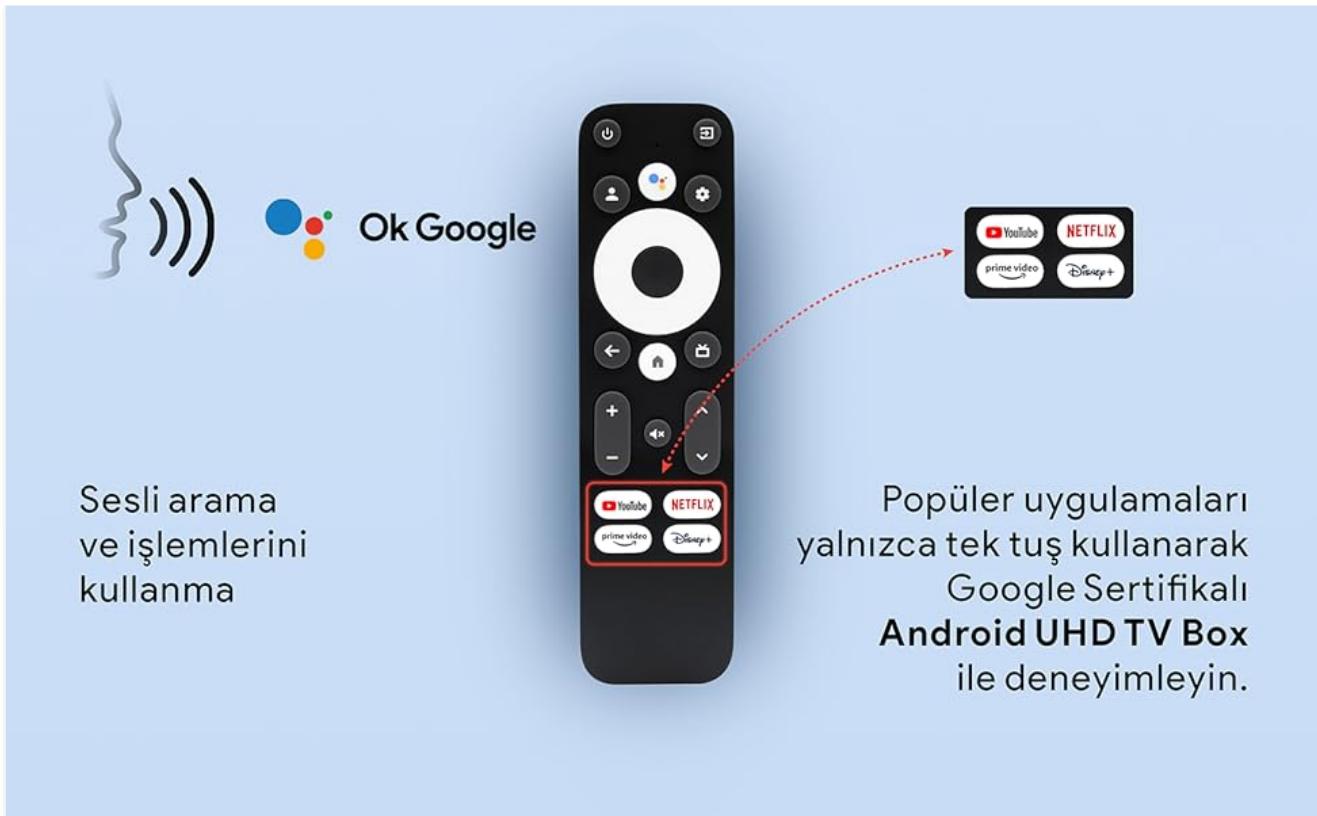


Image: An illustration showing the remote control with an emphasis on the Google Assistant button for voice search and the dedicated app buttons for quick access to streaming services.

Streaming and Media Playback

- **Pre-installed Apps:** Use the dedicated buttons or navigate to launch apps like YouTube, Netflix, Prime Video, and Disney+.
- **Installing Apps:** Access the Google Play Store from the Google TV interface to download and install additional applications.
- **4K HDR Content:** The device supports 4K HDR playback for compatible content and displays. Ensure your TV also supports 4K HDR for the best visual experience.

4K HDR Yüksek Çözünürlük
4K HDR görüntülerin keyfini çıkarın.



Image: A split image demonstrating the visual difference between standard resolution and 4K HDR, highlighting enhanced detail and color. This illustrates the capability of the Next Start 4K Media Player.

Audio Settings (Dolby Atmos)

The Next Start 4K TV Box supports Dolby Atmos for immersive audio. To experience Dolby Atmos, connect your TV Box to an audio system or soundbar that also supports Dolby Atmos via HDMI (eARC/ARC recommended) or S/PDIF optical output.

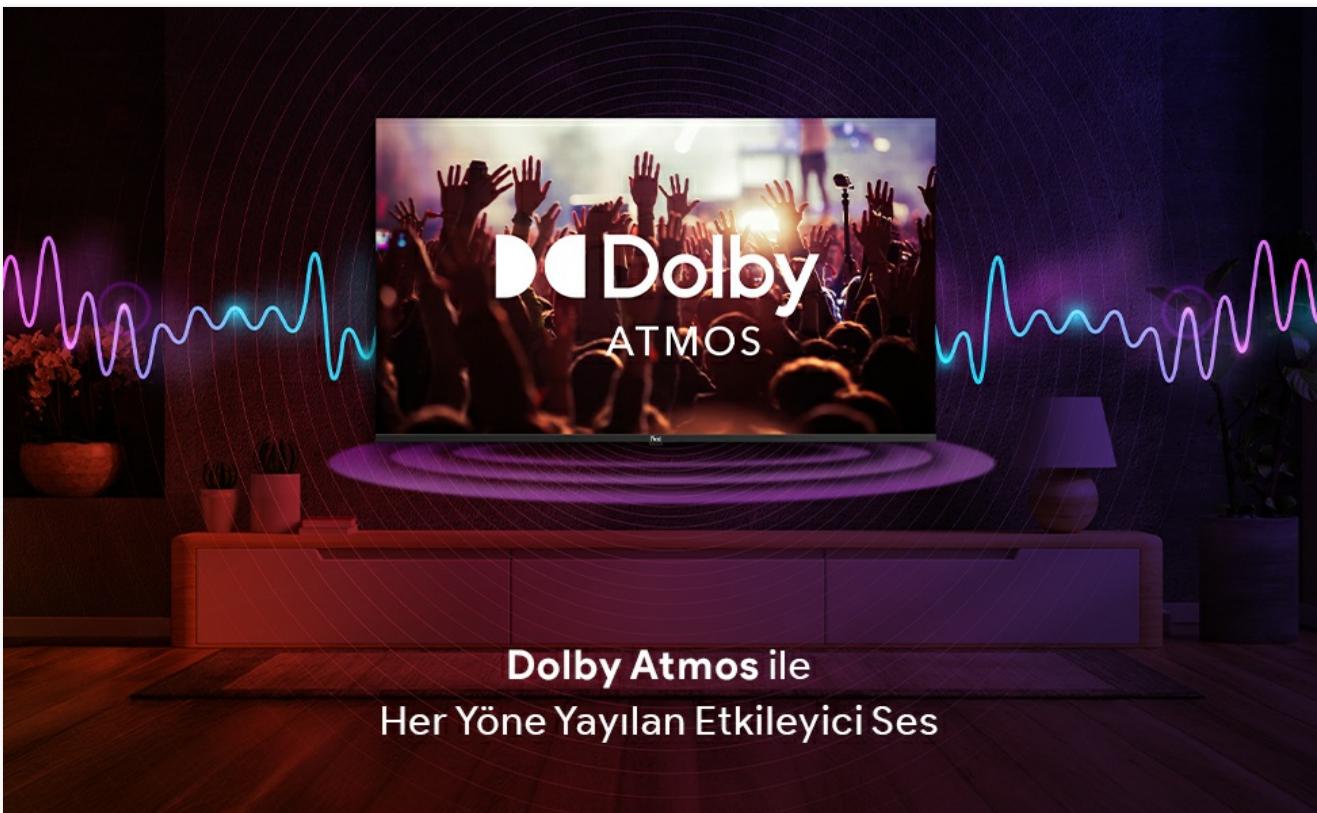


Image: A graphic illustrating the immersive sound experience of Dolby Atmos, with sound waves emanating from a television screen towards an audience. This highlights the audio capability of the Next Start 4K Media Player.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or abrasive materials.
- Software Updates:** The device may receive automatic software updates. Ensure your device is connected to the internet to receive these updates, which can improve performance and add new features.
- Resetting:** If you encounter persistent issues, you may perform a factory reset through the device settings. Be aware that this will erase all personal data and installed applications.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No Power	<ul style="list-style-type: none">Ensure the power adapter is securely connected to the device and a working power outlet.Check if the power outlet is functional.Press the power button on the remote.
No Video / Black Screen	<ul style="list-style-type: none">Verify the HDMI cable is securely connected to both the TV Box and the TV.Ensure your TV is set to the correct HDMI input source.Try a different HDMI port on your TV or a different HDMI cable.If experiencing color issues with HDR content, adjust the display settings on the TV Box to SDR or a lower HDR version if your TV does not fully support HDR10.
Remote Control Not Responding	<ul style="list-style-type: none">Check the remote control batteries and replace them if necessary.Ensure there are no obstructions between the remote and the TV Box (for IR control).Re-pair the Bluetooth remote control in the device settings if it's disconnected.
Network Connection Issues	<ul style="list-style-type: none">Check your Wi-Fi router and ensure it is working correctly.Restart the TV Box and your Wi-Fi router.If using Wi-Fi, ensure the device is within range of your router.If using Ethernet, ensure the cable is properly connected.
Performance Issues with Large 4K Files	<ul style="list-style-type: none">The device performs optimally with streaming services and moderately sized local files. Very large 4K files (e.g., 70GB+) from local storage may experience stuttering or freezing due to hardware limitations.Consider using smaller file sizes or streaming content directly.Avoid connecting large external HDDs directly if they cause instability; use smaller USB flash drives for local media.
Bluetooth Audio Delay	<ul style="list-style-type: none">When using Bluetooth headphones with media players like VLC, you may experience audio-video synchronization issues.Adjust the audio delay settings within the media player application (e.g., VLC has a setting to remember delay for Bluetooth headphones).

Problem	Possible Cause / Solution
No Audio Output	<ul style="list-style-type: none"> Check the volume level on both the TV Box and your television/audio system. Ensure the correct audio output is selected in the TV Box settings. Verify that your TV or audio system is compatible with the audio output format (e.g., some older TVs may not support certain Dolby formats). Note: DTS Core audio is not supported by this device.

SPECIFICATIONS



Image: A diagram illustrating the Amlogic S905Y4 chipset, highlighting its role in the high performance of applications on the Next Start 4K TV Box.

Feature	Detail
Brand	Next
Model Name	Next Start 4K
Operating System	Android V. 11
Chipset	Amlogic S905Y4 16500DMIPS
CPU	Amlogic S905Y4 4-Core Cortex-A35, 2.0 GHz
Internal Storage	16 GB
Resolution	4K
Compatible Devices	Television

Feature	Detail
Connectivity Technology	HDMI, IR, Wi-Fi (5GHz WPA3 supported)
Connector Type	HDMI
Setup Hardware	Remote, HDMI Cable, Power Cable
Form Factor	TV Box
Product Dimensions	20 x 12.6 x 5.7 cm; 420 grams (Package Dimensions)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Next website. Keep your proof of purchase for warranty claims.

© 2024 Next. All rights reserved.