



[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack NT38076PP01W Analog Digital Watch User Manual

Fastrack NT38076PP01W

Fastrack NT38076PP01W Analog Digital Watch User Manual

Model: NT38076PP01W

INTRODUCTION

This user manual provides comprehensive instructions for the Fastrack NT38076PP01W Analog Digital Watch. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your timepiece. Please read this manual thoroughly before using your watch.

PRODUCT OVERVIEW

Key Features

- **Analog-Digital Navigation:** Combines traditional analog hands with precise digital displays.
- **Compass-Inspired Bezel:** Features directional indicators (N, S, E, W, NE, NW, SE, SW) for an adventurous aesthetic.
- **Luminous Visibility:** Luminous accents on analog hands enhance readability in low-light conditions.
- **Multi-Function Mastery:** Equipped with day, date, and seconds displays, along with multiple pushers for various functions.
- **Durable Construction:** Robust black case and durable black plastic strap designed for active use.

Watch Components

Familiarize yourself with the various parts of your Fastrack NT38076PP01W watch:



Figure 1: Front view of the Fastrack NT38076PP01W watch, displaying both analog hands and digital readouts for time, day, and date. The compass-inspired bezel is also visible.



Figure 2: Side view of the watch, highlighting the functional buttons. From top to bottom on the left side: AS/LIGHT and MODE. On the right side: START and RESET. The crown for analog time adjustment is also visible.

- **Analog Display:** Hour, minute, and second hands with luminous accents.
- **Digital Displays:** Multiple segments showing time (hour, minute, second), day, and date.
- **Bezel:** Rotatable ring with directional markings (N, S, E, W, etc.).
- **AS/LIGHT Button:** Activates the backlight for digital display illumination.
- **MODE Button:** Cycles through different digital functions (Time, Alarm, Stopwatch).
- **START Button:** Used to start/stop stopwatch, adjust settings in setting mode.
- **RESET Button:** Used to reset stopwatch, select items in setting mode.
- **Crown:** Used to set the analog time.
- **Plastic Strap:** Durable and comfortable black plastic strap with a buckle clasp.

SETUP

Initial Power-Up

Your watch comes with a pre-installed battery. If the digital display is blank or the analog hands are not moving, the battery may need replacement. Refer to the Maintenance section for battery information.

Setting Analog Time

1. Pull the crown out to the first click position.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog timekeeping.

Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital time display starts flashing (indicating setting mode).
2. Press the **RESET** button to cycle through the settings: seconds, hour, minute, month, date, day.
3. Use the **START** button to adjust the flashing value. Hold **START** to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

Setting Alarm

1. Press the **MODE** button until the alarm time is displayed.
2. Press the **RESET** button to select the hour or minute setting.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **MODE** to confirm and exit the alarm setting.
5. To activate/deactivate the alarm, press **START** while in alarm mode. An alarm icon will appear/disappear.

OPERATING YOUR WATCH

Mode Selection

Press the **MODE** button to cycle through the available functions:

- Time Display (Hour, Minute, Second, Day, Date)
- Alarm Setting
- Stopwatch

Using the Backlight

Press the **AS/LIGHT** button (top left) to illuminate the digital display for a few seconds, allowing for visibility in low-light conditions.

Using the Stopwatch

1. Press the **MODE** button until the stopwatch display appears (usually showing 00:00:00).
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the timing.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

Water Resistance

Your Fastrack NT38076PP01W watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid operating buttons when the watch is wet or submerged to prevent water ingress.

MAINTENANCE

Cleaning

To maintain the appearance of your watch:

- Wipe the case and strap regularly with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

Battery Replacement

The watch is powered by a battery. When the digital display becomes dim or the analog hands stop moving, it indicates a low battery. Battery replacement should be performed by a qualified watch technician or an authorized service center to ensure proper sealing and water resistance.

Water Resistance Care

- Ensure the crown is fully pushed in at all times, especially after setting the analog time.
- Avoid exposing the watch to extreme temperature changes (e.g., hot shower followed by cold water), as this can compromise seals.
- If the watch is exposed to saltwater, rinse it with fresh water and dry thoroughly.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Issue	Possible Cause	Solution
Analog hands not moving	Low battery; Crown not pushed in; Mechanical fault.	Check if crown is fully pushed in. If not, push it in. If still not working, battery may need replacement. Contact service center for mechanical issues.
Digital display blank or dim	Low battery; Display fault.	Battery needs replacement. If issue persists after battery change, contact service center.
Time inaccurate (analog or digital)	Incorrect setting; Low battery; Exposure to strong magnetic fields.	Re-set the time following instructions in the Setup section. Replace battery if low. Keep watch away from strong magnets.
Water inside watch (condensation)	Compromised water resistance; Extreme temperature change.	Stop using the watch immediately and contact an authorized service center. Do not attempt to open the watch yourself.

SPECIFICATIONS

Technical details for the Fastrack NT38076PP01W watch:

Model Number	NT38076PP01W
Display Type	Analog-Digital
Movement Type	Quartz
Water Resistance Depth	30 Metres (3 ATM)
Band Material	Plastic
Case Material	Plastic
Crystal Material	Acrylic
Case Diameter	48.37 Millimetres
Band Width	26 Millimetres
Case Thickness	17.5 Millimetres
Band Length	26 Centimetres
Item Weight	200 Grams
Included Components	Battery

WARRANTY INFORMATION

Manufacturer's Warranty

Your Fastrack NT38076PP01W watch comes with a 12-month manufacturer warranty covering manufacturing defects. This warranty is provided by Titan Company Limited.

How to Avail Warranty

To avail warranty services, present your original purchase invoice at any authorized Titan Service Center. A warranty card is not required. The invoice serves as proof of purchase and warranty eligibility.

CUSTOMER SUPPORT

For any service-related queries, warranty claims, or technical assistance, please contact Fastrack/Titan customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** customercare@titan.co.in
- **Manufacturer Address:** Titan Co Ltd No -03 Sipcot Industries Complex, Hosur, Tamil Nadu - 635126, India