

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fastrack](#) /

› [Fastrack Analog Digital Watch NT38076PP05W User Manual](#)

Fastrack NT38076PP05W

Fastrack Analog Digital Watch User Manual

Model: NT38076PP05W

INTRODUCTION

This manual provides detailed instructions for the Fastrack Analog Digital Watch, Model NT38076PP05W. This timepiece combines traditional analog timekeeping with modern digital functionalities, featuring a black dial, luminous blue analog hands, and multiple digital readouts for day, date, and seconds. It is designed for durability and versatility, suitable for various activities.



Figure 1: Front view of the Fastrack Analog Digital Watch (Model NT38076PP05W).

PRODUCT OVERVIEW

Components

- **Analog Display:** Traditional hour and minute hands for primary timekeeping.
- **Digital Displays:** Multiple segments showing day, date, and seconds.
- **Compass-Inspired Bezel:** Rotatable bezel with directional indicators (N, S, E, W, NE, NW, SE, SW).
- **Pushers/Buttons:** Four functional buttons for mode selection, setting, and feature activation.
- **Crown:** Used for setting analog time.
- **Plastic Strap:** Durable blue plastic strap for comfortable wear.
- **Case Back:** Stainless steel back providing water resistance.



Figure 2: Angled view of the watch, showing the dial and strap.

Button Functions



Figure 3: Side view illustrating the watch's control buttons.

- **A/S (Adjust/Light) Button (Top Left):** Used to adjust settings in setting mode and activate the backlight.
- **Mode Button (Bottom Left):** Cycles through different digital modes (Time, Alarm, Chronograph).
- **Start Button (Top Right):** Used to start/stop the chronograph or increment values during setting.
- **Reset Button (Bottom Right):** Used to reset the chronograph or confirm settings.

SETUP

Initial Time Setting (Analog)

1. Pull the crown out to the first click position.
2. Rotate the crown to set the analog hour and minute hands to the correct time.
3. Push the crown back in to its normal position to start the analog timekeeping.

Initial Time Setting (Digital)

1. Press the **Mode** button repeatedly until the digital display shows the time setting mode (usually indicated by flashing digits).
2. Press the **A/S** button to select the digit you wish to adjust (e.g., hours, minutes).
3. Use the **Start** button to increment the selected digit. Hold the button to rapidly advance.
4. Repeat steps 2 and 3 for all time components (hours, minutes, 12/24-hour format).
5. Press the **Mode** button to exit the setting mode and save changes.

Date and Day Setting

1. From the normal time display, press the **Mode** button until you reach the date setting mode.
2. Use the **A/S** button to select the year, month, or day.
3. Use the **Start** button to adjust the selected value.
4. Press the **Mode** button to confirm and exit.

OPERATING THE WATCH

Time Display Modes

- Press the **Mode** button to cycle through the main digital display modes: Time, Alarm, and Chronograph.
- The default display shows the current time, day, and date.

Using the Alarm Function

1. Press the **Mode** button until the alarm time is displayed.
2. Press and hold the **A/S** button until the alarm digits flash.
3. Use the **A/S** button to select hours or minutes.
4. Use the **Start** button to adjust the alarm time.
5. Press the **Mode** button to set the alarm.
6. To turn the alarm ON/OFF, press the **Start** button while in alarm mode. An alarm icon will appear/disappear.

Using the Chronograph (Stopwatch)

1. Press the **Mode** button until the chronograph (00:00:00) is displayed.
2. Press the **Start** button to begin timing.
3. Press the **Start** button again to pause timing.
4. Press the **Reset** button to clear the chronograph to zero.

Activating the Backlight

- Press the **A/S** button briefly to illuminate the digital display. The backlight will remain on for a few seconds.

Water Resistance Guidelines

This watch is water resistant up to 30 meters (WR 30M). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is not recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

MAINTENANCE

Cleaning

- Wipe the watch regularly with a soft, dry cloth to remove dust and dirt.
- For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Battery Replacement

- The watch uses 1 Lithium Polymer battery.
- When the digital display becomes dim or the watch stops functioning, the battery may need replacement.
- Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage

- Store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid exposing the watch to strong magnetic fields, as this can affect accuracy.



Figure 4: Back view of the watch, showing the case back.

TROUBLESHOOTING

- **Digital Display is Blank or Dim:**

Solution: The battery may be low or depleted. Replace the battery.

- **Analog Hands Not Moving:**

Solution: Check if the crown is pushed in completely. If it is, the battery may be depleted or there might be an internal issue. Seek professional service.

- Time is Inaccurate:

Solution: Re-set both analog and digital times according to the instructions in the Setup section. Ensure the watch is not exposed to strong magnetic fields.

- Buttons Are Unresponsive:

Solution: Ensure the watch is dry. If the issue persists, there may be an internal malfunction.

- **Condensation Under Crystal:**

Solution: This indicates a breach in water resistance. Avoid further contact with water and seek immediate professional service to prevent damage.

SPECIFICATIONS

Feature	Detail
Brand	Fastrack
Model Name	Ana Digi
Model Number	NT38076PP05W

Display Type	Analog-Digital
Power Source	Battery Powered
Battery Type	1 Lithium Polymer battery (included)
Special Features	Alarm, Chronograph, Light Up
Water Resistance	30 Meters (WR 30M)
Product Dimensions	14 x 7 x 10 cm
Item Weight	150 g

WARRANTY AND SUPPORT

Warranty Information

This Fastrack watch comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For any technical assistance, service, or inquiries regarding your Fastrack watch, please contact Fastrack customer support or visit an authorized service center. Contact details can typically be found on the Fastrack official website or in the product packaging.

Related Documents - NT38076PP05W

	<p>Fastrack S06 Smartwatch User Manual</p> <p>Comprehensive user manual for the Fastrack S06 Smartwatch, covering setup, features, maintenance, and safety information.</p>
	<p>Fastrack Reflex Play Smartwatch User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the Fastrack Reflex Play smartwatch, covering setup, app connection, features like fitness tracking, heart rate monitoring, notifications, and troubleshooting guides.</p>
	<p>Fastrack Reflex Beat+ Smartwatch User Manual: Features, Pairing & Setup</p> <p>Comprehensive user manual for the Fastrack Reflex Beat+ Smartwatch. Learn about its features, app installation, watch pairing, health tracking, and technical specifications.</p>

	<p>Fastrack FPods FT7 Truly Wireless Earpods Quick Start Guide</p> <p>Get started with your Fastrack FPods FT7 Truly Wireless Earpods. This guide covers setup, controls, features like 3C NitroFast Charge, Quad Mic ENC, and low latency gaming mode.</p>
	<p>Fastrack FPods FZ100 Truly Wireless Earbuds Quick Start Guide</p> <p>Learn how to set up, use, and care for your Fastrack FPods FZ100 Truly Wireless Earbuds. This guide covers pairing, controls, features like gaming mode and voice assistant, charging, and specifications.</p>
	<p>Fastrack FPods FS100: Quick Start Guide, Features, and Specifications</p> <p>Comprehensive quick start guide for Fastrack FPods FS100 Truly Wireless Earbuds. Learn about setup, controls, features like Quad Mic ENC, 60ms gaming mode, 40-hour playtime, and product specifications.</p>