



[Manuals.plus](#) /

› [Tasty](#) /

› Tasty Mini Nonstick Waffle Maker TY11697-5 Instruction Manual

Tasty TY11697-5

Tasty Mini Nonstick Waffle Maker Instruction Manual

Model: TY11697-5

Brand: Tasty

INTRODUCTION

Thank you for choosing the Tasty Mini Nonstick Waffle Maker. This compact and versatile appliance is designed to provide quick and consistent results for perfectly cooked mini waffles, hash browns, brownies, cookies, and more. Its small size makes it ideal for any kitchen, apartment, dorm, or RV, offering convenience for on-the-go meals. The dual-sided cooking surface ensures even heating, and the nonstick coating simplifies cleanup.



Image: The Tasty Mini Waffle Maker in yellow, ready to make delicious waffles.

SAFETY INFORMATION

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.

SETUP

Unpacking and First Use

1. Carefully remove the waffle maker from its packaging.
2. Wipe down the cooking surfaces with a damp cloth or sponge. Dry thoroughly.
3. Place the waffle maker on a stable, heat-resistant surface.

Product Overview

The Tasty Mini Waffle Maker features a compact design with a 4-inch by 4-inch cooking surface. It includes an indicator light to signal preheating and a locking latch for secure cooking and storage.



Image: The compact dimensions of the yellow Tasty Mini Waffle Maker, highlighting its 4-inch cooking surface.

EVERYTHING YOU NEED FOR TASTY WAFFLES



Image: Key features of the waffle maker, including the indicator light and locking latch, with a 600W power rating.

OPERATING INSTRUCTIONS

Making Waffles

1. Plug in the waffle maker. The indicator light will illuminate, signaling that the unit is preheating.
2. Wait 1-3 minutes for the indicator light to shut off. This indicates the waffle maker has reached its optimal cooking temperature and is ready for use.
3. Carefully open the lid and pour your desired batter onto the nonstick cooking surface. Ensure not to overfill.
4. Close the lid and secure the locking latch.
5. Cook for a few minutes until your waffle is golden brown and cooked to your preference. The indicator light may cycle on and off during cooking to maintain temperature.
6. Once cooked, carefully open the lid and remove the waffle using a non-metallic utensil to avoid damaging the nonstick surface.
7. Unplug the appliance when finished.



Image: Demonstrating how to pour batter into the waffle maker for perfect results, highlighting the nonstick surface.

Versatile Cooking Options

This mini waffle maker is not limited to just waffles. You can also use it to prepare:

- Hash browns
- Cookies
- Brownies
- And more creative dishes!

RECIPE IDEAS



The Ultimate Waffle



Hash-Brown Waffles



Waffle Omelet



Cinnamon Roll Waffles

Image: Recipe ideas showcasing the versatility of the mini waffle maker, from classic waffles to hash browns and omelets.

Official Product Videos

Video: Watch how to make perfect waffles every time with the Tasty Mini Waffle Maker. This video demonstrates the ease of use and consistent results.

Video: Learn to make delicious poke waffles using the Tasty Mini Waffle Maker. This short video highlights a creative use for the appliance.

Video: A step-by-step guide on how to make amazing waffles with the Tasty Mini Waffle Maker, covering the full process from batter to finished product.

MAINTENANCE AND CLEANING

Cleaning the Waffle Maker

1. Always unplug the waffle maker and allow it to cool completely before cleaning.
2. The 4" x 4" nonstick cooking surface, made without PFAS & PFOA, easily wipes clean. Use a damp cloth or sponge with mild soap to clean the cooking plates.
3. For stubborn residue, a small amount of cooking oil can be applied to the cooled plates, left for a few minutes, then wiped clean.
4. Wipe the exterior of the appliance with a damp cloth. Do not immerse the waffle maker in water or any other

liquid.

5. Ensure all parts are completely dry before storing.

TROUBLESHOOTING

- **Waffle maker not heating:** Ensure the appliance is properly plugged into a working electrical outlet. Check if the indicator light is on.
- **Waffles sticking:** Although the surface is nonstick, a light spray of cooking oil or butter can be applied before adding batter, especially for the first use or if using certain recipes. Ensure the waffle maker is fully preheated.
- **Waffles not cooking evenly/browning:** Ensure the waffle maker is fully preheated until the indicator light turns off. Adjust cooking time as needed for desired crispness.
- **Indicator light not turning off:** The indicator light turns off when the unit is preheated and may cycle on and off during cooking to maintain temperature. If it never turns off after initial plug-in, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Tasty
Model Number	TY11697-5
Color	Yellow
Special Feature	Non Stick Coating
Material	Aluminum
Product Dimensions	7.68"D x 3.54"W x 4.92"H
Wattage	600 watts
Included Components	Tasty Mini Waffle Maker
Number of Settings	1
Item Weight	2.26 pounds
Manufacturer	Epoca
UPC	741393008456

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product at the time of purchase or contact the manufacturer, Epoca, directly. Keep your proof of purchase for any warranty claims.