

Asixxsix Asixxsixwqchnzr4yt-12

Asixxsix HD Camera User Manual

Model: Asixxsixwqchnzr4yt-12

INTRODUCTION

Thank you for choosing the Asixxsix HD Camera. This compact and versatile camera is designed for discreet monitoring in various environments such as homes, offices, or vehicles. It features 1080P HD video recording, a wide-angle lens, and a magnetic back cover for easy placement. This manual provides detailed instructions to help you set up, operate, and maintain your camera effectively.

PRODUCT OVERVIEW

Package Contents

- 1 x Asixxsix HD Camera
- 1 x Charging Cable (Micro USB)
- 1 x Magnetic Stand
- 1 x Instruction Manual (this document)

Camera Components

Familiarize yourself with the camera's main components:

- **Lens:** Front-facing camera lens.
- **ON/OFF Button:** Powers the camera on or off.
- **MODE Button:** Switches between operating modes.
- **Micro USB Port:** For charging and power supply.
- **Micro SD Card Slot:** For inserting a memory card (up to 128GB, not included).
- **Magnetic Back Cover:** Allows attachment to ferrous surfaces.



Image: The Asixsix HD Camera, magnetic stand, and Micro USB charging cable included in the package.



Image: Close-up view of the ON/OFF and MODE buttons located on the top of the camera.

SETUP

1. Charging the Camera

Before first use, fully charge the camera. Connect the supplied Micro USB cable to the camera's charging port and the other end to a 5V 1A USB power adapter (not included). The charging time is approximately 30 minutes for a full charge (0%-100%). A full charge provides about 45 minutes of Ultra HD video recording.

2. Inserting a Micro SD Card

The camera supports a Micro SD card up to 128GB (not included) for storing recorded footage. Insert the Micro SD card into the designated slot on the side of the camera until it clicks into place. Ensure the card is inserted correctly to avoid damage.



Image: The camera with a Micro SD card inserted into its slot, indicating readiness for recording and Wi-Fi connectivity.

3. App Download and Wi-Fi Connection

To access live video and control the camera remotely, download the dedicated mobile application. The app is available for both Android and iOS devices. Refer to the QR code provided in the camera's packaging or search for the app name (usually mentioned in the quick start guide) in your device's app store.

1. Download and install the app on your smartphone.
2. Power on the camera by pressing the ON/OFF button.
3. Open the app and follow the on-screen instructions to add a new device.
4. Connect the camera to your router's Wi-Fi network. This typically involves selecting your Wi-Fi network and entering the password within the app.

Once connected, you can view live video feeds from anywhere in the world.

4. Mounting the Camera

The camera features a magnetic back cover and comes with a magnetic stand for flexible placement.

- **Direct Magnetic Attachment:** The built-in magnet allows the camera to attach directly to any ferrous metal surface (e.g., refrigerator, metal shelf).
- **Using the Magnetic Stand:** Attach the camera to the magnetic stand. The stand can then be placed on a flat surface or mounted using its adhesive pad or screw holes (screws not included) for a more permanent installation.



Image: Illustration of the camera's magnetic back cover, highlighting its ability to adhere to any iron material for easy placement.



Image: The Asixxix HD Camera securely attached to its magnetic stand, demonstrating a typical mounting configuration.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the **ON/OFF** button until the indicator light illuminates.
- **To Power Off:** Press and hold the **ON/OFF** button until the indicator light turns off.

Recording Video

The camera automatically records video to the inserted Micro SD card when powered on and configured for recording. You can also initiate recording manually via the mobile app.

- **Continuous Recording:** If a Micro SD card is inserted, the camera will typically begin continuous recording upon power-on.
- **App Control:** Use the mobile app to start/stop recording, change recording settings (e.g., resolution, loop recording), and view recorded footage.

Live View and Remote Monitoring

Once the camera is connected to your Wi-Fi network and paired with the app, you can access a live video feed from your smartphone. Open the app and select your camera to view real-time footage.

Motion Detection

The camera supports motion-only alerts. When motion is detected, the camera can be configured to send notifications to your smartphone and/or begin recording. Adjust motion detection sensitivity and alert settings within the mobile app.

Video Demonstration

Your browser does not support the video tag.

Video: A demonstration of the Asixxsix HD Camera's features and compact design. This video showcases the camera's appearance and potential uses.

MAINTENANCE

Cleaning

Gently wipe the camera lens and body with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the lens or casing.

Battery Care

To prolong battery life, avoid exposing the camera to extreme temperatures. If storing the camera for an extended period, ensure it is partially charged (around 50%) and recharge it every few months.

Firmware Updates

Check the mobile app periodically for any available firmware updates. Keeping your camera's firmware updated ensures optimal performance and access to new features.

TROUBLESHOOTING

If you encounter issues with your Asixxsix HD Camera, please refer to the following common solutions:

Problem	Solution
Camera does not power on.	Ensure the camera is fully charged. Connect it to a power source using the Micro USB cable and allow it to charge for at least 30 minutes.
Cannot connect to Wi-Fi or app.	• Verify your Wi-Fi network is 2.4GHz (5GHz networks are often not supported by these devices). • Ensure the camera is within range of your Wi-Fi router. • Restart both the camera and your router. • Check that you have downloaded the correct mobile application and are using the correct QR code for pairing, if applicable. • Reset the camera (refer to the manual for reset button location, if available, or power cycle).
No video recording or footage missing.	• Ensure a Micro SD card is properly inserted and formatted (if required by the app). • Check if the Micro SD card is full. • Verify recording settings in the mobile app. • The camera supports up to 128GB Micro SD cards. Ensure your card is compatible.

Problem	Solution
Poor video quality.	• Ensure the camera lens is clean and free from dust or smudges. • Check your network connection speed if viewing live stream. • Verify the video resolution settings in the app are set to 1080P HD.

SPECIFICATIONS

Feature	Detail
Model Name	Asixxsixwqchnzr4yt-12
Video Resolution	1080p, 720p
Connectivity Technology	Wired, Wireless (Wi-Fi)
Compatible Devices	Smartphone (Android, iOS)
Power Source	Battery Powered (Built-in 240 mAh Lithium-ion Battery)
Battery Life	Approx. 45 minutes (Ultra HD Video Format)
Charging Time	Approx. 30 minutes (0%-100%)
Charging Interface	Micro USB
Memory Expansion	Up to 128GB Micro SD Card (not included)
Control Method	Mobile App
Alert Type	Motion Only
Mount Type	Magnetic, Wall Mount
Item Weight	128 g
Color	White

WARRANTY AND SUPPORT

Asixxsix is committed to ensuring customer satisfaction. If you have any questions, concerns, or require assistance with your Asixxsix HD Camera, please do not hesitate to contact our customer support. We are ready to offer support and solutions for any issues you may encounter with your purchase.

Please refer to your purchase documentation or the official Asixxsix website for specific warranty details and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question