

[Manuals.plus](#) /

› [CHiQ](#) /

› CHiQ ROKU TV L32G5NK 32 Inch Smart TV User Manual

CHiQ L32G5NK

CHiQ ROKU TV L32G5NK 32 Inch Smart TV User Manual

Model: L32G5NK

WELCOME TO YOUR NEW CHiQ Roku TV

Congratulations on your purchase of the CHiQ Roku TV L32G5NK. This 32-inch Smart TV is designed to provide an intuitive and immersive entertainment experience, powered by the Roku OS. With access to a vast library of streaming content, seamless smart home integration, and vibrant picture quality, your new TV is ready to transform your viewing.

PACKAGE CONTENTS

Please ensure all items listed below are present in your package. If any items are missing or damaged, please contact customer support.

- 1 x CHiQ 32 inch Roku TV
- 1 x Metal Stand (2 pieces)
- 1 x User Manual (this document)
- 1 x Remote Control
- 2 x AAA Batteries (for remote)
- Screws for Stand Assembly



Image: The CHI Q Roku TV L32G5NK, showcasing its sleek design and display.

INITIAL SETUP

1. Attaching the Stand

Carefully place the TV screen-down on a soft, clean surface to prevent scratches. Align the metal stand pieces with the designated slots on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached before proceeding.



Image: Detail of the TV stand, showing how it attaches to the television unit.

2. Connecting Peripherals

Connect your external devices such as cable boxes, gaming consoles, or Blu-ray players to the HDMI ports. For antenna connection, use the RF input. The TV also features USB 2.0 ports for media playback.



Image: Side view of the TV illustrating its dimensions and the location of various input ports.

3. Powering On and Initial Configuration

Plug the power cord into an electrical outlet. Press the power button on the remote control or on the TV. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and channel scanning.



Image: The intuitive Roku TV home screen, showing various input options and streaming channels.

OPERATING YOUR CHI Q Roku TV

Remote Control Overview

The included remote control provides easy access to all TV functions and streaming services. It features dedicated buttons for popular streaming channels and a simple layout for intuitive navigation.



Brand:	CHI Q	Model:	L32G5NK
Resolution:	1366*768	Refresh Rate:	60 Hz
Contrast Ratio:	3000 : 1	Display colors:	16.7 M
Wall Support:	200*200/M6	Without Stand:	733*180*480mm

Pacakage List:
Bluetooth remote, stand, user manual

Image: The CHI Q Roku TV remote control, highlighting its simple design and dedicated app buttons.

Navigating the Roku OS

The Roku OS offers an intuitive home screen where you can quickly access your favorite streaming services, TV inputs, and free live TV channels. Use the directional pad on your remote to navigate through menus and select options.



Image: The Roku TV home screen displaying various streaming application icons like Netflix, Disney+, and BBC iPlayer.

Streaming Content

Access over 150,000 movies and TV episodes across thousands of free and paid channels available through the Roku Channel Store. Easily search by title, actor, or genre to find content.

HDR10

more bright highlights & deep shadow details



Image: A visual representation of the vast content library available, showing logos of various streaming services.

Voice Control and Smart Home Integration

Your CHIQ Roku TV supports integration with popular voice assistants including Apple AirPlay, Apple Home, Alexa, and Google Home. Control your TV, search for content, and manage smart home devices using voice commands.

Immersive & Vivid Sound



Image: A family in a living room, demonstrating the use of voice commands with a smart speaker to control the CHiQ Roku TV.

Mobile App Control

Download the free Roku Mobile App for iOS and Android devices to use your smartphone as an extra remote. Enjoy features like voice search, private listening through headphones, and easy text input.



Image: Multiple smartphone screens displaying the interface of the Roku mobile application, showing remote control and voice search features.

Picture and Sound Enhancements

Experience enhanced visuals with HDR10 support, providing more bright highlights and deep shadow details. Dolby Audio technology delivers immersive and vivid sound for a theater-like experience.



Image: A split image demonstrating the visual difference between SDR (Standard Dynamic Range) and HDR10, highlighting improved brightness and detail.



CHiQ

L32G5NK


A

B



26 kWh/1000h

ABCD**E**FG
HDR
26 kWh/1000h

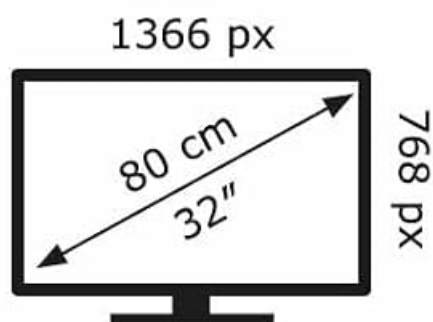

2019/2013

Image: A visual representation of sound waves emanating from the TV, indicating immersive audio powered by Dolby Audio technology.

To ensure the longevity and optimal performance of your CHiQ Roku TV, follow these maintenance guidelines:

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Avoid harsh chemicals or abrasive materials.
- **Cleaning the Cabinet:** Use a soft, dry cloth to clean the TV cabinet. Do not use liquid cleaners directly on the TV.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked. Allow adequate space around the TV for proper airflow.
- **Software Updates:** Your Roku TV will automatically check for and install software updates when connected to the internet. Ensure your TV is connected to a stable network for these updates.
- **Power Off When Not in Use:** For extended periods of inactivity, it is recommended to unplug the TV from the power outlet.

TROUBLESHOOTING

If you encounter any issues with your CHiQ Roku TV, please refer to the following common solutions:

- **No Power:** Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet. Check if the power indicator light on the TV is on.
- **No Picture/Sound:** Verify that the correct input source is selected (e.g., HDMI 1, TV). Check all cable connections. If using an external device, ensure it is powered on.
- **Poor Picture Quality:** Adjust picture settings (brightness, contrast, sharpness) in the TV menu. Ensure the input source is providing a high-quality signal.
- **No Network Connection:** Check your Wi-Fi router and modem. Restart them if necessary. Go to the TV's network settings to re-scan for networks or re-enter your Wi-Fi password. For wired connections, ensure the Ethernet cable is properly connected.
- **Remote Control Not Working:** Replace the batteries in the remote. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Apps Not Loading/Crashing:** Ensure your TV has a stable internet connection. Try restarting the TV by unplugging it for 30 seconds and plugging it back in.

For more detailed troubleshooting or persistent issues, please visit the CHiQ support website or contact customer service.

TECHNICAL SPECIFICATIONS

Below are the key technical specifications for the CHiQ Roku TV L32G5NK:

Feature	Specification
Brand	CHiQ
Model Number	Smart TV 32 Inch L32G5NK
Screen Size	32 Inches
Display Technology	LED
Resolution	720p (1366 x 768 pixels)

Refresh Rate	60 Hz
Aspect Ratio	16:9
Product Dimensions (with stand)	73.3W x 43.5H x 8.1D cm
Weight	5.62 kg
Connectivity Technology	Ethernet/Wi-Fi (2.4&5G)
Special Features	Works with Alexa, Apple Home, Google Home, Apple AirPlay, Roku Store
Energy Efficiency Class	E (SDR/HDR)

No.	Parameter	Parameter value and precision				Unit
1	Supplier's Trade mark	CHiQ				
	Supplier's address	No.1 North Xinye Rd,Nantou Town,Zhongshan, City,Guangdong,Province,China				
2	Model identifier	L32G5NK				
3	Energy efficiency class for standard Dynamic Range(SDR)	E				
4	On mode power demand in Standard Dynamic Range(SDR)	26.0				W
5	Energy efficiency class (HDR)	E				
6	On mode power demand in High Dynamic Range(HDR)	26.0				W
7	Off mode, power demand	n.a.				W
8	Standby mode, power demand	0.5				W
9	Networked standby mode power demand	0.6				W
10	Electronic display category	Television				
11	Size ratio	X	16	Y	9	integer
12	Screen resolution (pixels)	X	1366	y	768	pixels
13	Screen diagonal	80.0				cm
14	Screen diagonal	32				inches
15	Visible screen area	27.3				dm ²
15	Visible screen area	2731.1				Cm ²
16	Panel technology used	LED LCD				
	Automatic Brightness Control					

17	Automatic Brightness Control (ABC)available	No	
18	Voice recognition sensor available	No	
19	Room presence sensor available	No	
20	Image refresh frequency rate (default)	60	Hz
21	Minimum guaranteed availability of soft-ware and firmware updates (from the date of end of the placement on the market)	8	Years
22	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	7	Years
23	Minimum guaranteed product support	7	Years
	Minimum duration of the general guarantee offered by the supplier	2	Years
24	Power supply type:	Internal	

Image: The energy efficiency label for the CHiQ L32G5NK TV, indicating its energy class and consumption.



Image: A comprehensive table detailing various parameters and specifications of the CHiQ L32G5NK TV.

For a complete list of specifications, you may refer to the official product sheet:[CHiQ L32G5NK Product Sheet \(PDF\)](#)

WARRANTY AND SUPPORT

CHiQ is committed to providing high-quality products and excellent customer service.

Warranty Information

Your CHiQ Roku TV L32G5NK comes with a **2-year warranty** on all products from the date of purchase. This warranty covers manufacturing defects and ensures reliable operation. Please retain your proof of purchase for warranty claims.

Additionally, software updates are guaranteed until **28 July 2026**, ensuring your TV remains up-to-date with the latest features and security enhancements.



Image: An overview of CHiQ's service regulations, including refund, warranty, and replacement policies.

Customer Support

For any questions, technical assistance, or warranty claims, please contact CHiQ customer support. You can typically find contact details on the official CHiQ website or through the retailer where you purchased the product.

Online hotline support is available from professional staff during weekdays.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCY1NRR9>

More documents and user manuals: <https://manuals.plus/>