

[Manuals.plus](#) /

› [IBOWZ](#) /

› IBOWZ Rocking Chair Instruction Manual - Model B0CCYB8S3G

IBOWZ B0CCYB8S3G

IBOWZ Rocking Chair Instruction Manual

Model: B0CCYB8S3G

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your IBOWZ Rocking Chair. Designed for both indoor and outdoor use, this chair offers a comfortable and relaxing experience. Constructed with durable wood, it features an ergonomic design with wide armrests and a tall backrest for optimal support. The carefully calculated rocking arc ensures safe and smooth motion.



Image: The IBOWZ rocking chair positioned on a patio, showcasing its design and suitability for outdoor environments.

SAFETY INFORMATION

Please read and understand all safety instructions before assembling or using the rocking chair. Failure to follow these instructions may result in injury or damage to the product.

- Always ensure the chair is placed on a stable, level surface to prevent tipping.
 - Do not exceed the maximum weight capacity of 174.63 kg (385 lbs).
 - Keep children and pets away from the assembly area during setup.
 - Regularly inspect all bolts, screws, and structural components for tightness and wear. Retighten as necessary.
 - Avoid standing on the chair or using it for purposes other than its intended use as a rocking chair.
 - Do not allow children to play unsupervised on or around the rocking chair.
-

PACKAGE CONTENTS

Before beginning assembly, carefully unpack all components and verify that you have received all parts. Refer to the packaging list for a complete inventory. Typically, your package should include:

- Chair frame components (seat, backrest, legs)
- Armrests
- Rocking runners
- Assembly hardware (screws, bolts, washers, Allen wrench)
- Arm pads (if applicable)

If any parts are missing or damaged, please contact IBOWZ customer support immediately.

SETUP AND ASSEMBLY

The IBOWZ Rocking Chair is designed for straightforward assembly. Follow these steps carefully to ensure proper construction and stability.

1. Unpack all components and lay them out on a clean, flat, and soft surface to prevent scratching.
2. Identify the main frame pieces: seat, backrest, armrests, and legs.
3. Attach the backrest to the seat frame using the provided hardware. Ensure the connections are snug but do not fully tighten yet.
4. Secure the armrests to both the seat and backrest. Align all holes and insert the appropriate hardware.
5. Attach the rocking runners to the bottom of the chair legs. Ensure they are oriented correctly and firmly secured with the designated hardware.
6. Once all components are loosely assembled, gradually tighten all screws and bolts. Work in a cross-pattern if applicable to ensure even tension. Do not overtighten, as this can strip threads or crack wood.
7. After tightening all hardware, gently test the chair for stability. Ensure all connections are secure and the chair does not wobble before use.

Wooden Rocker

Our rocking chair upgraded by adding detachable rocker to the base, which provides a smooth rocking rhythm.



Image: This image shows the side profile of the rocking chair, highlighting its main components and how they fit together during assembly.

OPERATING INSTRUCTIONS

Using your IBOWZ Rocking Chair is simple and designed for maximum comfort.

1. **Placement:** Position the chair on a stable, level surface. Ensure there is sufficient clear space around the chair for safe rocking motion, free from walls, furniture, or other obstructions.
2. **Sitting:** Sit gently into the chair, distributing your weight evenly. The wide armrests and tall backrest are designed to provide ergonomic support for your arms and back.
3. **Rocking Motion:** Initiate a gentle rocking motion. The chair's carefully calculated rocking arc ensures a

smooth and safe experience, preventing excessive tilting.

4. **Versatility:** This rocking chair is suitable for various environments, including patios, gardens, balconies, and indoor spaces such as living rooms or nurseries.

105° Wide-angle Hypsokinesis

Ergonomic designs, you can sway the chair back and forth to
relax yourself.

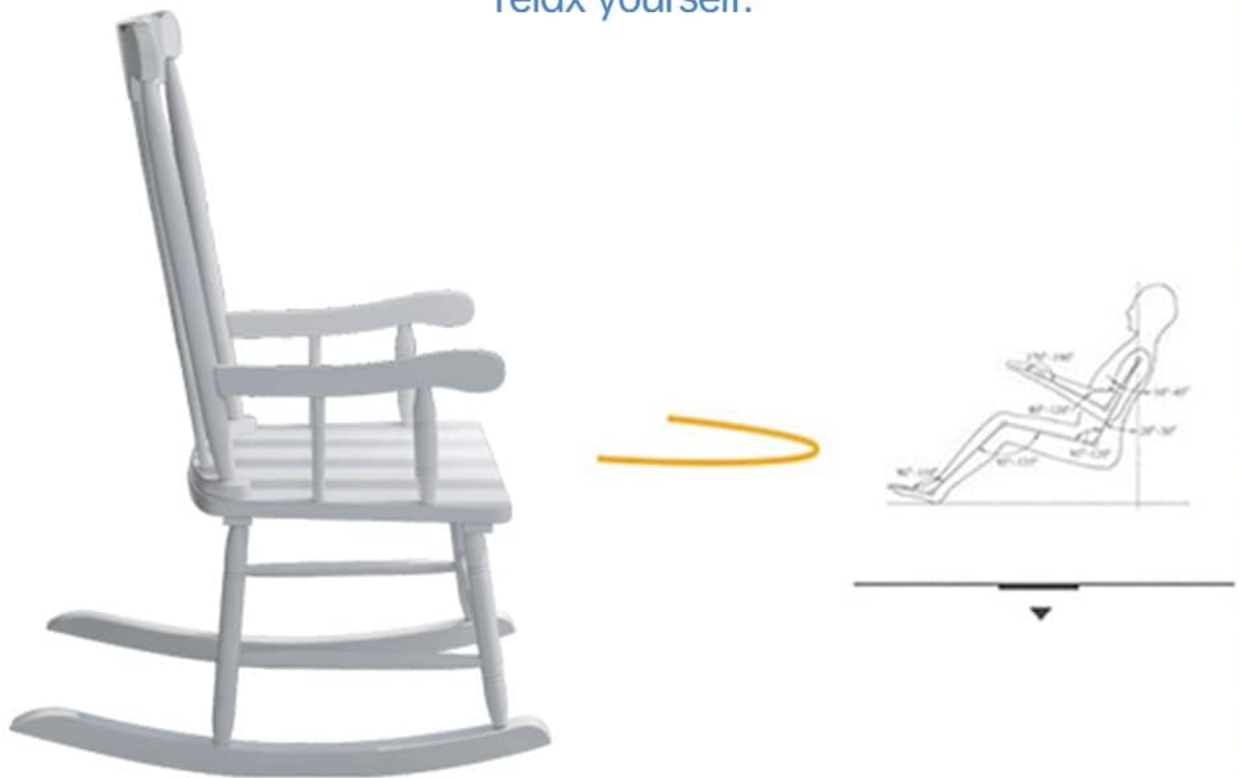


Image: This diagram demonstrates the ergonomic design of the rocking chair, showing the optimal angle for comfortable and relaxing motion.

Smooth Rocking

Gently sloped runners provide a smooth rocking rhythm,
guaranteed not to roll over



Image: A detailed view of the chair's base and runners, engineered to provide a smooth and stable rocking experience without tipping.

MAINTENANCE

Proper care and maintenance will extend the life of your IBOWZ Rocking Chair and ensure its continued performance and appearance.

- **Cleaning:** Wipe the chair clean with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth. Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the wood finish.
- **Hardware Inspection:** Periodically (e.g., monthly or seasonally) check all bolts, screws, and connections to ensure they remain tight. Retighten any loose hardware to maintain stability and safety.

- **Outdoor Use:** If the chair is used outdoors, consider storing it in a sheltered area or covering it with a protective furniture cover during periods of heavy rain, snow, or extreme temperatures to protect the wood from weathering.
- **Wood Care:** Depending on environmental exposure, the wood may benefit from occasional re-sealing or painting to maintain its protective finish and appearance. Follow manufacturer recommendations for wood treatment products.

TROUBLESHOOTING

If you encounter any issues with your rocking chair, refer to the following common problems and solutions:

- **Chair feels unstable or wobbly:**
 - Ensure all assembly hardware (screws, bolts) are fully tightened.
 - Verify that the chair is placed on a flat, level surface. Uneven surfaces can cause instability.
- **Rocking motion is not smooth or feels stiff:**
 - Check for any obstructions under the rocking runners.
 - Ensure the rocking runners are securely attached and undamaged.
 - Verify that all assembly hardware is tightened correctly, as overtightening can sometimes restrict movement.
- **Squeaking noises during rocking:**
 - Tighten any loose bolts or screws.
 - Apply a small amount of silicone-based lubricant to the joints where components meet, particularly where the runners attach to the legs, if squeaking persists.

If these troubleshooting steps do not resolve the issue, please contact IBOWZ customer support for further assistance.

SPECIFICATIONS

Detailed specifications for the IBOWZ Rocking Chair, Model B0CCYB8S3G:

Specifications



Weight Capacity:
175kg/ 385 lbs



Image: This image provides a detailed diagram of the rocking chair's dimensions in centimeters and inches, along with its maximum weight capacity of 175 kg (385 lbs).

Feature	Detail
Brand	IBOWZ
Model Number	B0CCYB8S3G
Colour	White
Frame Material	Wood
Special Features	Arm Rest, Ergonomic, Foldable
Product Care Instructions	Wipe Clean
Recommended Uses	Camping, Relaxing
Maximum Weight Recommendation	174.63 kg (385 lbs)

Room Type	Patio Garden
Age Range Description	Adult
Included Components	Arm Pad

WARRANTY AND SUPPORT

For specific warranty information regarding your IBOWZ Rocking Chair, please refer to the documentation included with your purchase or contact IBOWZ customer support directly. It is recommended to retain your purchase receipt as proof of purchase for any warranty claims.

For technical support, missing parts, or any other inquiries, please reach out to the manufacturer, IBOWZ, through their official contact channels. Contact information can typically be found on the product packaging or the manufacturer's website.

