

[Manuals.plus](#) /

› [AEG](#) /

› AEG Serie 7000 Dishwasher Instruction Manual

AEG FSE76727P

AEG Serie 7000 FSE76727P Built-in Dishwasher Instruction Manual

Model: FSE76727P

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing, operating, or performing maintenance on your appliance. Keep this manual for future reference.

- Ensure the appliance is properly installed by a qualified person.
- Do not allow children to play with the appliance.
- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, as hot steam may escape.

2. PRODUCT OVERVIEW AND KEY FEATURES

The AEG Serie 7000 FSE76727P is a fully integrated built-in dishwasher designed for efficient and gentle dishwashing. It features advanced technologies to ensure optimal cleaning results and user convenience.



Front view of the AEG Serie 7000 FSE76727P built-in dishwasher, showing the integrated design and control panel at the top edge of the door.

Key Features:

- **GlassCare System:** Equipped with SoftGrip and SoftSpikes to securely hold and protect delicate glassware during washing.



Detail of the SoftSpikes in the dishwasher basket, designed to gently secure glasses and prevent damage.

- **MaxiFlex Tray:** A flexible cutlery tray designed to accommodate utensils of various sizes and shapes, including larger items.
- **QuickSelect with Ecometer:** Intuitive touchscreen control for selecting wash cycles, with an Ecometer displaying real-time water and energy consumption.
- **ProClean Satellite Spray Arm:** Provides powerful and comprehensive water coverage, reaching every corner of the dishwasher for thorough cleaning.
- **Beam-on-Floor Technology:** Projects a light beam onto the floor to indicate the current status of the wash cycle.
- **AirDry Technology:** Automatically opens the dishwasher door slightly at the end of the cycle to allow natural air drying, improving drying performance and reducing energy consumption.

3. SETUP AND INSTALLATION

This appliance is designed for built-in installation. The front furniture panel is not included and must be installed separately to match your kitchen cabinetry.



Example of the built-in dishwasher seamlessly integrated into kitchen cabinets. Note that the decorative front panel is not supplied with the appliance.

Initial Use:

1. Before first use, ensure all packaging materials are removed from inside the appliance.
2. Fill the salt dispenser with dishwasher salt (if applicable for your water hardness).
3. Fill the rinse aid dispenser.
4. Run a short wash cycle without dishes to clean the interior.

4. OPERATING INSTRUCTIONS

Loading the Dishwasher:

Proper loading ensures optimal cleaning and drying results. Utilize the flexible baskets and the MaxiFlex tray for efficient space usage.



VASSOIO MAXIFLEX

Il vassoio può contenere facilmente posate di ogni misura, anche quelle di grandi dimensioni o dalle forme irregolari

The MaxiFlex tray provides ample space for various cutlery and kitchen tools, including larger items, ensuring they are thoroughly cleaned.

- Scrape off large food particles from dishes before loading.
- Place glasses and delicate items in the upper basket, utilizing the SoftGrip and SoftSpikes for stability.
- Arrange plates and larger items in the lower basket.
- Place cutlery in the MaxiFlex tray, ensuring items do not block the spray arms.

Adding Detergent and Rinse Aid:

Use appropriate amounts of dishwasher detergent and rinse aid according to the manufacturer's instructions and your water hardness.

Program Selection with QuickSelect and Ecometer:

The QuickSelect interface allows you to easily choose the desired wash cycle. The Ecometer provides visual feedback on energy and water consumption.



RISPARMIA ENERGIA


L'ecometro ti guida nella scelta del programma giusto per ridurre il consumo di energia e di acqua

The QuickSelect control panel with a slider to choose cycle duration and the Ecometer displaying energy and water consumption with a green bar.

1. Turn on the dishwasher.
2. Use the QuickSelect slider to choose the desired program duration.
3. Observe the Ecometer for consumption levels.
4. Select any additional options (e.g., Extra Silent, Extra Power, GlassCare).

Cleaning Performance with ProClean Satellite Spray Arm:

The unique ProClean Satellite Spray Arm ensures superior cleaning coverage for all items in the dishwasher.

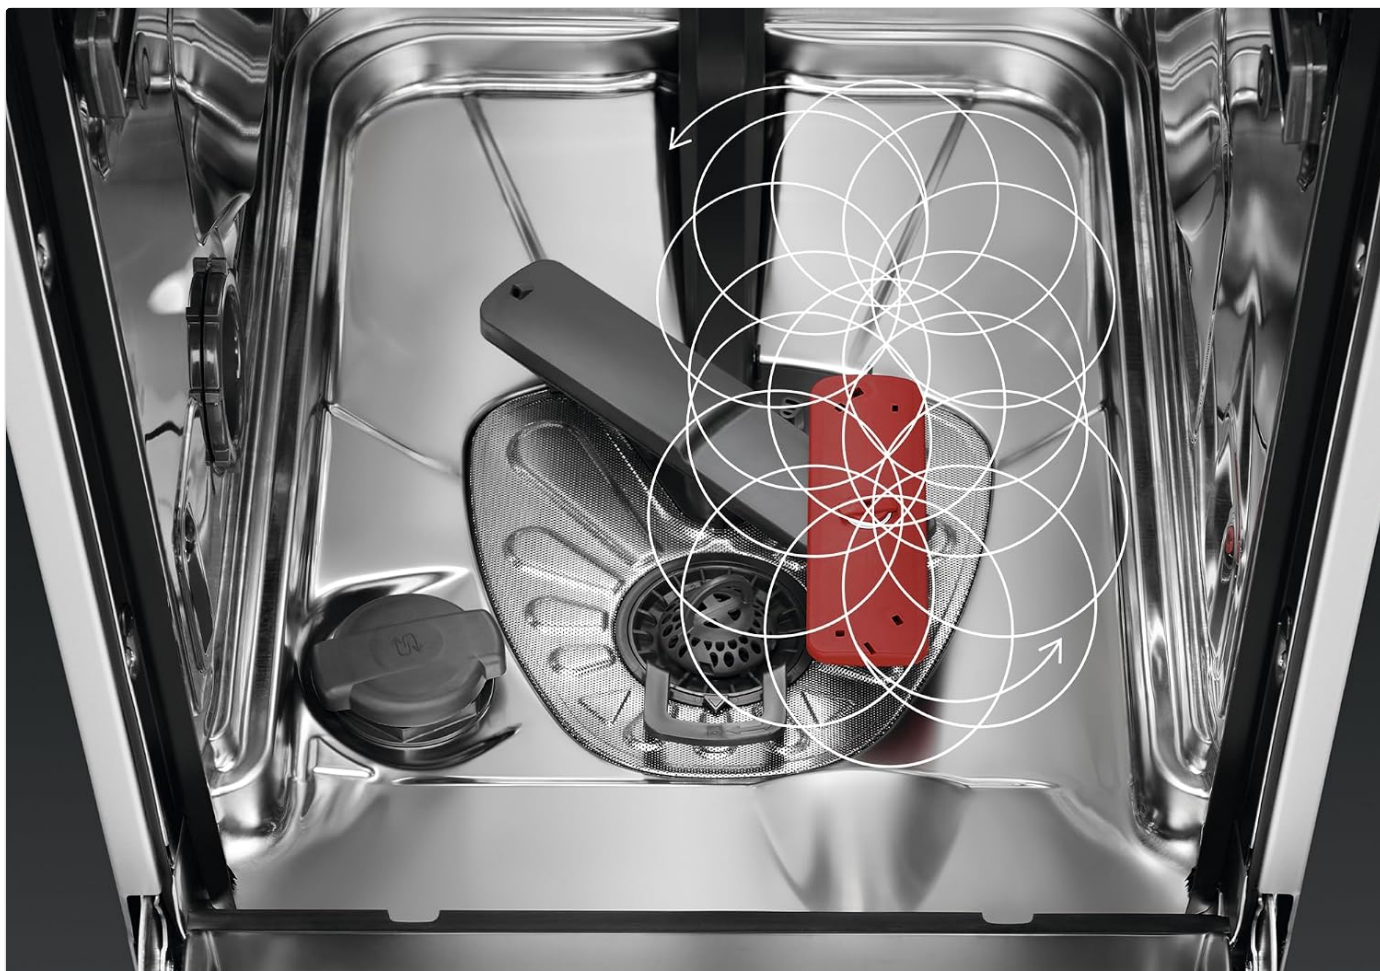

RISULTATI IMPECCABILI

Potente lavaggio delle stoviglie e copertura spray fino a tre volte superiore, senza bisogno di utilizzare acqua in più

An internal view of the dishwasher tub, highlighting the ProClean Satellite Spray Arm and its wide spray pattern for comprehensive cleaning.

AirDry Technology:

At the end of the cycle, the AirDry function automatically opens the door to allow natural air circulation, enhancing drying results and saving energy.



APERTURA AUTOMATICA

Fa circolare l'aria per completare l'asciugatura, socchiudendo delicatamente ed in maniera automatica l'anta della lavastoviglie

Comparison image showing dishes before and after AirDry, demonstrating improved drying performance. The AirDry feature automatically opens the dishwasher door slightly at the end of the cycle.

Beam-on-Floor Indicator:

The Beam-on-Floor projects a light onto the floor to indicate the dishwasher's operating status without needing to open the door.



A red light beam projected onto the floor, indicating that the dishwasher is currently running a cycle.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Filters:

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing.



A person cleaning the dishwasher filter under running water in a sink, demonstrating the ease of maintenance.

1. Twist and remove the filter assembly from the bottom of the dishwasher tub.
2. Separate the coarse and fine filters.
3. Rinse all filter components under running water to remove food debris.
4. Reassemble the filters and securely place them back into the dishwasher.

General Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the door seal regularly to remove any food residue.
- Run a dishwasher cleaning cycle periodically using a specialized dishwasher cleaner.


6. TROUBLESHOOTING

If your dishwasher is not functioning correctly, consult the following common issues before contacting service.

Problem	Possible Cause	Solution
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arm nozzles, add more detergent, clean filters (refer to Section 5).
Dishwasher is noisy	Items hitting spray arms, foreign objects in pump, improper installation.	Rearrange dishes, check for obstructions, ensure appliance is level.
Water not draining	Clogged filter, blocked drain hose, pump malfunction.	Clean filters, check drain hose for kinks or blockages.
Error code displayed	Specific malfunction detected by the appliance.	Refer to the full user manual for a list of error codes and their corresponding solutions. If the issue persists, contact customer support.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the AEG Serie 7000 FSE76727P dishwasher.

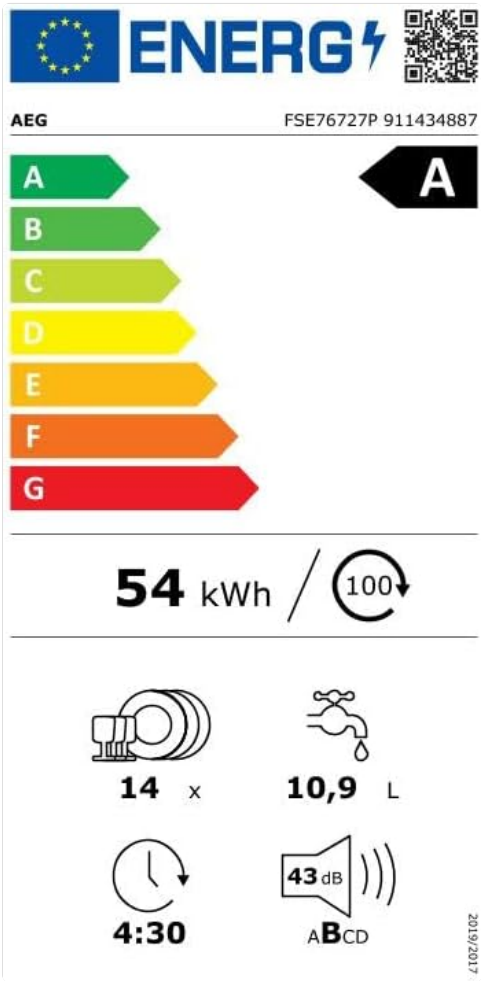

The energy label for the AEG FSE76727P dishwasher, showing its Class A energy efficiency, 14 place settings capacity, 43 dB noise level, and 10.9 liters water consumption per eco cycle.

Scheda informativa del prodotto				
Marchio o nome del fornitore:		AEG		
Indirizzo del fornitore:		Electrolux - 26 al. Powstancow Slaskich 30-570 - Krakow - PL		
Identificativo del modello:		FSE76727P 911434887		
Parametri di prodotto generali:				
Parametro	Valore	Parametro	Valore	
Capacità nominale ^(b) (ps)	14	Dimensioni in cm	Altezza	82
			Larghezza	60
			Profondità	56
IEE ^(b)	31,9	Classe di efficienza energetica ^(b)	A	
Indice di efficienza di lavaggio ^(b)	1,121	Indice di efficienza di asciugatura ^(b)	1,061	
Consumo di energia in kWh [per ciclo], con il programma eco e l'utilizzo di acqua fredda. Il consumo effettivo di energia dipende dalle modalità d'uso dell'apparecchio.	0,542	Consumo di acqua in litri [per ciclo] con il programma eco. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.	10,9	
Durata del programma ^(b) (h: min)	4:30	Tipo	da incasso	
Emissioni di rumore aereo ^(b) (dB(A) re 1 pW)	43	Classi di emissione di rumore aereo ^(b)	B	
Modo spento (W) (se del caso)	0,50	Modo stand-by (W) (se del caso)	0,50	
Avvio ritardato (W) (se del caso)	4,00	Modo stand-by in rete (W) (se del caso)	-	
Durata minima della garanzia offerta dal fornitore:			0 mesi	
Informazioni supplementari:			-	
Link verso il sito web del fornitore sul quale sono reperibili le informazioni di cui all'allegato II, punto 6, del regolamento 2019/2022 della Commissione: https://support.electroluxgroup.eu/external/PISlink/Products/911434887				
^(b) Per il programma eco.				

Product data sheet for the AEG FSE76727P, providing detailed technical parameters including dimensions, energy efficiency, and noise emissions.

Specification	Value
Model Name	FSE76727P
Installation Type	Built-In

Specification	Value
Dimensions (W x D x H)	59.6 cm x 56 cm x 81.8 cm
Weight	38.03 kg
Place Settings Capacity	14
Energy Efficiency Class	A
Noise Level	43 dB
Water Consumption (Eco program)	10.9 Liters/cycle
Power Cable Included	Yes
User Manual Included	Yes
Material	Stainless Steel
Controls Type	Touch

For more detailed information, please refer to the official product page and the full technical data sheet: [EPREL Product Information](#)

8. WARRANTY AND SUPPORT

Your AEG dishwasher is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your appliance or visit the official AEG support website.

- **Returns:** Products can typically be returned within 14 days of receipt if you change your mind. For defective or damaged products, specific return policies apply.
- **Customer Support:** For technical assistance, spare parts, or service requests, please contact AEG customer support.
- **Online Support:** Additional support resources, FAQs, and detailed manuals can be found on the Electrolux Group support website, which includes AEG products.

Official Support Link: support.electroluxgroup.eu

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CCYHF72R>

More documents and user manuals: <https://manuals.plus/>