

Cecotec ProClean 5110

Cecotec ProClean 5110 Retro Green Digital Microwave with Grill Instruction Manual

Model: ProClean 5110

1. INTRODUCTION

Thank you for choosing the Cecotec ProClean 5110 Retro Green Digital Microwave with Grill. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Do not operate the microwave if the door or door seals are damaged. Contact qualified service personnel.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Regularly clean the microwave and remove any food deposits. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Always ensure proper ventilation around the microwave.
- Use only utensils suitable for microwave ovens.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1 x Cecotec ProClean 5110 Digital Microwave with Grill
- 1 x Glass Turntable
- 1 x Grill Rack
- 1 x Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your microwave oven.



Front view of the Cecotec ProClean 5110 Retro Green Digital Microwave with Grill, highlighting its vintage design, 20L capacity, and grill function.



Close-up of the digital control panel and rotary dial on the Cecotec ProClean 5110 microwave, illustrating the various function buttons and digital display.

Components:

- **Door Handle:** For opening and closing the microwave door.
- **Viewing Window:** Allows you to monitor food during cooking.
- **Control Panel:** Digital display and buttons for setting functions.
- **Rotary Dial:** Used to adjust time, weight, or select programs.
- **Turntable:** Glass plate that rotates to ensure even cooking.
- **Turntable Support:** Holds the turntable in place.
- **Grill Rack:** Used for grilling food.

5. SETUP

5.1 Unpacking and Placement

1. Remove all packaging materials and accessories. Inspect the microwave for any damage, such as dents or

a broken door. Do not operate if damaged.

2. Place the microwave on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
3. Ensure adequate ventilation: leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on both sides. Do not block any ventilation openings.

5.2 Turntable Assembly

1. Place the turntable support ring in the center of the microwave cavity.
2. Position the glass turntable on top of the support ring, ensuring it sits securely in the center hub.



The Cecotec ProClean 5110 microwave with its door open, revealing the interior, glass turntable, and grill rack.

5.3 Initial Cleaning

Before first use, wipe the interior and exterior of the microwave with a damp cloth. Ensure the turntable and grill rack are clean.

6. OPERATING INSTRUCTIONS

Your Cecotec ProClean 5110 microwave offers various cooking functions. Always ensure the door is securely closed before starting any operation.

6.1 Setting the Clock

Upon plugging in, the display will show '0:00'.

1. Press the 'Clock' button (if available, otherwise consult the specific button for time setting).
2. Use the rotary dial to set the hour. Press 'Confirm' or 'Start'.
3. Use the rotary dial to set the minutes. Press 'Confirm' or 'Start' again.

6.2 Microwave Cooking

The microwave has 5 power levels and a maximum power of 700W.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door.
3. Press the 'Microwave' button or select the desired power level using the control panel.
4. Use the rotary dial to set the cooking time (up to 60 minutes).
5. Press the 'Start' button. The microwave will beep at the end of the cooking cycle.



A hand adjusting the rotary dial on the Cecotec ProClean 5110 microwave, demonstrating ease of use for setting time or power.

6.3 Grill Function

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack, which should be placed on the glass turntable.
2. Close the door.
3. Press the 'Grill' button.
4. Use the rotary dial to set the grilling time.
5. Press the 'Start' button.

6.4 Defrost Mode

The defrost mode allows for perfect defrosting based on food type.

1. Place the frozen food on the glass turntable.
2. Close the door.
3. Press the 'Defrost' button.
4. Use the rotary dial to select the weight or time for defrosting.
5. Press the 'Start' button.

6.5 Automatic Cooking Programs

The microwave features 8 automatic cooking programs for convenience.

1. Place food in the microwave.
2. Close the door.
3. Press the 'Auto Menu' or 'Program' button repeatedly to cycle through the 8 programs, or use the dial to select.
4. The display will show the program number or food type.
5. Press 'Start'. The microwave will automatically set the appropriate cooking time and power level.

6.6 Child Safety Lock

To prevent unsupervised operation by children, activate the child safety lock.

- **To activate:** Press and hold the 'Stop/Cancel' button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the 'Stop/Cancel' button for 3 seconds again. The lock indicator will disappear.

7. CLEANING AND MAINTENANCE

Regular cleaning helps maintain the performance and longevity of your microwave.

7.1 Exterior Cleaning

Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.2 Interior Cleaning

1. After each use, wipe the interior with a damp cloth to remove food splatters.
2. For stubborn stains, place a bowl of water with lemon slices inside and microwave on high for 5-10 minutes. The steam will loosen the stains, making them easier to wipe away.
3. Clean the door seals and surrounding areas regularly to ensure proper closure.

7.3 Turntable and Grill Rack

The glass turntable and grill rack can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the microwave.

8. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following table for common problems and solutions.

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Microwave does not start | Power cord not plugged in; Door not closed properly; Child lock activated. | Ensure plug is securely in outlet; Close door firmly; Deactivate child lock. |
| Food not heating evenly | Food not stirred or rotated; Incorrect power level/time; Turntable not rotating. | Stir or rearrange food during cooking; Adjust power/time; Check turntable assembly. |
| Unusual noise during operation | Turntable not correctly placed; Foreign object in cavity. | Re-position turntable; Remove any obstructions. |
| Smoke or sparks inside | Metal in microwave; Food residue; Damaged interior. | Immediately turn off and unplug. Remove metal objects. Clean interior. If damage persists, contact service. |

9. SPECIFICATIONS

- **Brand:** Cecotec
- **Model Number:** 01712
- **Capacity:** 20 Liters
- **Power:** 700 Watts
- **Power Levels:** 5
- **Grill Power:** (Not specified, but implied by 'Grill' feature)
- **Timer:** Up to 60 minutes
- **Dimensions (L x W x H):** 35 x 44.7 x 25.8 cm (13.78 x 17.6 x 10.16 inches)
- **Weight:** 10 Kilograms (22 lbs)
- **Installation Type:** Freestanding
- **Material:** Aluminum (exterior), Glass (interior coating)

- **Special Features:** Automatic cooking programs (8 modes), Defrost mode, Child Safety Lock, End-of-cooking signal.
- **Voltage:** 230 Volts (Standard European)

10. WARRANTY AND SUPPORT




Cecotec products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions.



Spare parts availability for this model is guaranteed for 10 years from the date of purchase.

For technical support, service, or warranty claims, please contact your retailer or the official Cecotec customer service. Contact information can typically be found on the Cecotec website or in your purchase documents.

© 2025 Cecotec. All rights reserved.

Related Documents - ProClean 5110

| | |
|---|--|
|  | <p>Cecotec Proclean 5110 Retro Digital Microwave with Grill - User Manual</p> <p>User manual for the Cecotec Proclean 5110 Retro digital microwave with grill, covering parts identification, operation modes, cooking functions, cleaning, maintenance, technical specifications, and disposal information.</p> |
|  | <p>Manual de Usuario Cecotec ProClean 5110 Inox</p> <p>Manual detallado de usuario para el microondas Cecotec ProClean 5110 Inox, cubriendo instrucciones de seguridad, funcionamiento, limpieza y especificaciones técnicas.</p> |
|  | <p>Cecotec Proclean 5110 Retro Microwave User Manual</p> <p>Comprehensive user manual for the Cecotec Proclean 5110 Retro microwave, covering safety instructions, operation, cleaning, maintenance, and technical specifications in multiple languages.</p> |

| | |
|---|---|
|  | <p>Manual de Instrucciones Cecotec PROCLEAN 5130: Guía Completa</p> <p>Descubra el microondas digital Cecotec PROCLEAN 5130 con función grill. Este manual de instrucciones proporciona una guía completa para el uso seguro y eficiente de su electrodoméstico. Conozca sus funciones, ajustes, consejos de mantenimiento y especificaciones técnicas para aprovechar al máximo su microondas.</p> |
|  | <p>Manual de Instrucciones Cecotec ProClean 4010 Microondas</p> <p>Manual de instrucciones completo para el microondas Cecotec ProClean 4010, cubriendo seguridad, funcionamiento, limpieza, especificaciones técnicas y garantía.</p> |
|  | <p>Cecotec Power Espresso 20 Retro Green Espresso Machine User Manual</p> <p>Comprehensive user manual for the Cecotec Power Espresso 20 Retro Green espresso machine, covering setup, operation, cleaning, maintenance, troubleshooting, technical specifications, and safety guidelines.</p> |