

[Manuals.plus](#) /

› [Hotpoint](#) /

› Hotpoint H7IHP40L Dishwasher User Manual

Hotpoint H7IHP40L

Hotpoint H7IHP40L Fully Integrated Dishwasher

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before installing and using the appliance. Keep this manual for future reference.

- This appliance is intended for household use only.
- Do not install or use the appliance if it has been damaged.
- Ensure the electrical supply matches the rating plate specifications.
- Keep children away from the appliance during operation.
- Do not touch the heating element during or immediately after operation.
- Always unplug the appliance before cleaning or maintenance.

2. PRODUCT OVERVIEW

The Hotpoint H7IHP40L is a fully integrated dishwasher designed for seamless integration into your kitchen cabinetry. It offers efficient cleaning and drying for up to 15 place settings.



Figure 2.1: Front view of the Hotpoint H7IHP40L fully integrated dishwasher with its control panel visible.

3. INSTALLATION AND SETUP

This dishwasher is designed for full integration. It does not come with a decorative front panel, which must be supplied and installed by the user to match kitchen cabinetry.

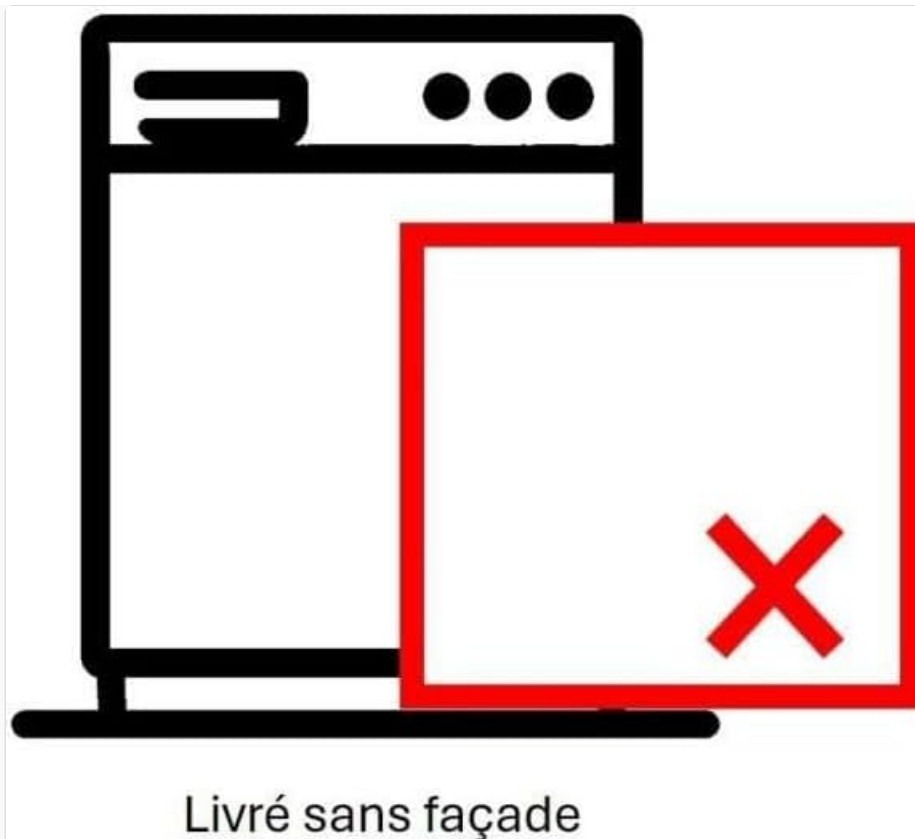


Figure 3.1: Illustration indicating that the appliance is delivered without a decorative front panel.

3.1 Unpacking

Carefully remove all packaging materials. Check the appliance for any transport damage. Report any damage immediately to your retailer.

3.2 Positioning

Place the dishwasher in the desired location, ensuring it is level. Adjust the feet if necessary. Leave adequate space for plumbing and electrical connections.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the drain hose is properly connected to a suitable drain pipe or sink trap, preventing kinks.

3.4 Electrical Connection

Connect the appliance to a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate. Do not use extension cords or multiple sockets.

3.5 Installing the Decorative Panel

Follow the instructions provided with your kitchen cabinetry for attaching the decorative front panel to the dishwasher door. Ensure the panel is securely fastened and aligned.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and available wash programs.



Figure 4.1: Interior view of the Hotpoint H7IHP40L dishwasher, showcasing its Maxi Space capacity with adjustable racks.

4.1 Loading the Dishwasher

For optimal cleaning results, load dishes according to the following guidelines:

- Scrape off large food particles before loading.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure items do not block the spray arms.
- Place cutlery in the cutlery basket with handles down for forks and spoons, and handles up for knives.

4.2 Adding Detergent, Rinse Aid, and Salt

Always use dishwasher-specific detergent. Fill the detergent dispenser before each wash cycle. Check the rinse aid and salt indicators regularly and refill as needed. Rinse aid improves drying, and salt prevents limescale buildup, especially in hard water areas.

4.3 Selecting a Wash Program

Refer to the program chart on the control panel or in this manual for available wash cycles. Select the program best suited for your load's soil level and type of dishes. Press the start button to begin the cycle.

4.4 End of Cycle

At the end of the cycle, the dishwasher will signal completion. Open the door slightly to allow steam to escape and dishes to cool before unloading.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your dishwasher.

5.1 Cleaning the Filters

The filter system should be checked and cleaned regularly (e.g., weekly). Remove the coarse filter, fine filter, and microfilter. Rinse them under running water to remove food particles. Reassemble and replace them correctly.

5.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes with a thin wire or toothpick.

5.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, use a dishwasher cleaner periodically to remove grease and limescale buildup.

5.4 Winterization (if applicable)

If the dishwasher is to be left in an unheated place during winter, drain all water from the appliance to prevent freezing and damage.

6. TROUBLESHOOTING

Before contacting customer service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power cord, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes, clean spray arms, add more detergent, clean filters.
Water not draining	Clogged drain hose or filter, drain pump issue.	Check and clear drain hose/filter, consult a technician if pump is faulty.
Excessive noise	Dishes rattling, foreign object in pump, improper installation.	Rearrange dishes, check pump area, ensure dishwasher is level.

7. SPECIFICATIONS

Feature	Specification
Model	H7IHP40L (HP40 L)

Feature	Specification
Type	Fully Integrated Dishwasher
Place Settings	15
Noise Level	40 dB
Energy Class	C
Material	Stainless Steel
Weight	35.5 kg
Voltage	230 V

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

This Hotpoint appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Hotpoint customer support. Contact details can typically be found on the Hotpoint official website or in the documentation provided with your appliance.

