

[Manuals.plus](#) /

> [Zopsc](#) /

> Zopsc MP3 MP4 Player (Model Zopsc5mzubk9v7r-11) User Manual

Zopsc Zopsc5mzubk9v7r-11

Zopsc MP3 MP4 Player User Manual

Model: Zopsc5mzubk9v7r-11

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Zopsc MP3 MP4 Player. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the device away from water and other liquids.
- Use only the provided charging cable and earphones.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Zopsc MP3 MP4 Player
- Earphones
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

The Zopsc MP3 MP4 Player is a compact and portable device designed for audio and video playback, featuring an 8GB internal memory, expandable storage, and a long battery life.



Image: The Zopsc MP3 MP4 Player shown with its included wired earphones and charging cable connected.

Controls and Ports

- **Display Screen:** Shows menus, playback information, and video content.
- **M (Menu) Button:** Accesses main menu or returns to previous screen.
- **Play/Pause Button:** Starts or pauses playback.
- **Previous/Next Buttons:** Navigates through tracks or menu options.
- **VOL (Volume) Button:** Adjusts volume.
- **Headphone Jack:** 3.5mm port for earphones.
- **USB Port:** For charging and data transfer.
- **Micro SD Card Slot:** For memory expansion.

SETUP

1. Charging the Device

Before first use, fully charge the player. Connect the provided USB charging cable to the player's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge takes approximately 2 to 3 hours and provides up to 30 hours of playback.

2. Inserting a Micro SD Card (Optional)

The player has 8GB of built-in memory. To expand storage up to 64GB, insert a Micro SD card (not

included) into the designated slot.

Memory Card Interface Design Support 64G memory card expansion

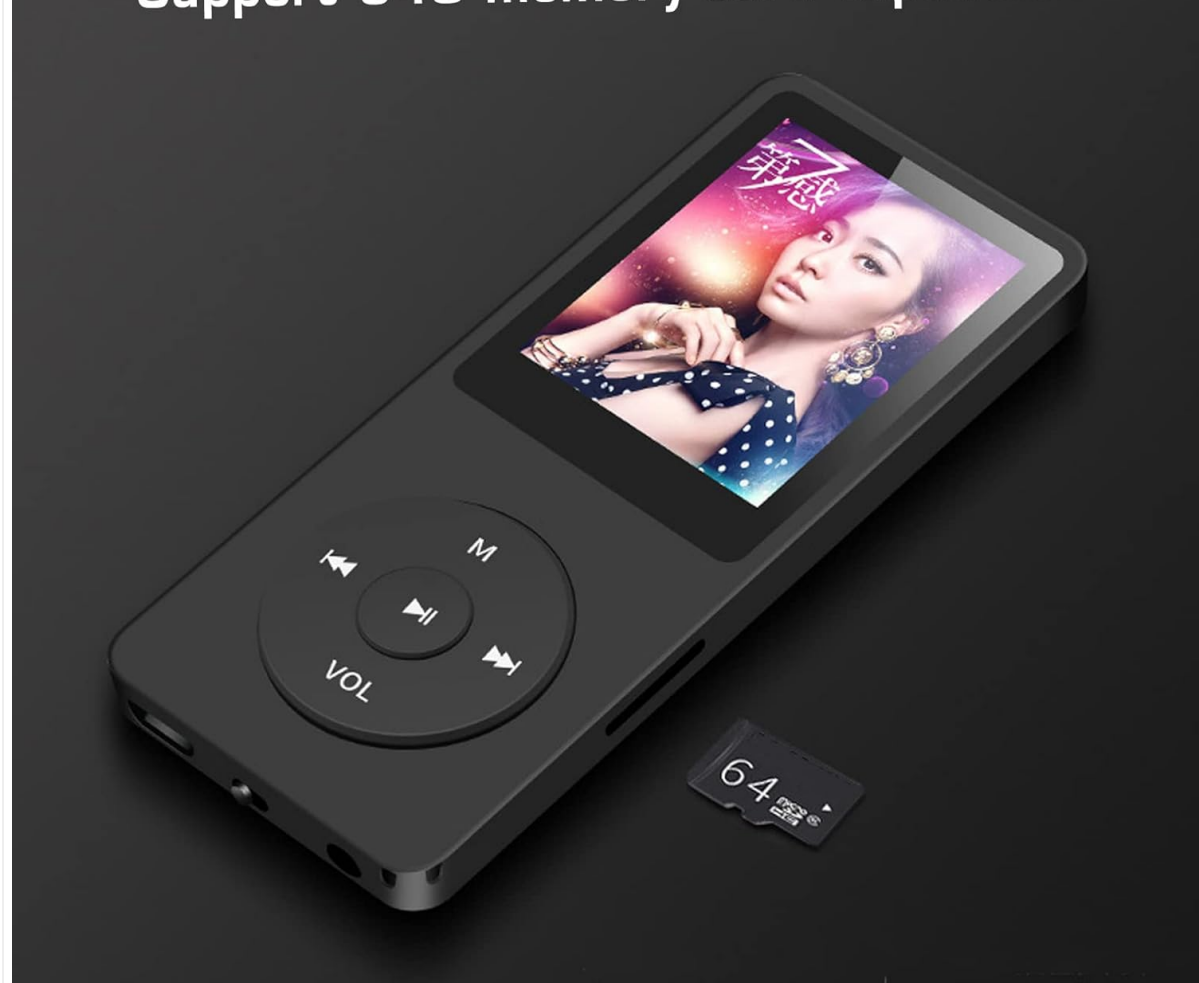


Image: The Zopsc MP3 MP4 Player demonstrating the Micro SD card slot with a 64GB card.

1. Locate the Micro SD card slot on the side of the player.
2. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the Play/Pause button for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Play/Pause button for a few seconds until the screen turns off.


2. Basic Navigation

Use the M (Menu) button to navigate back to the main menu or previous screens. Use the Previous/Next buttons to scroll through menu options and the Play/Pause button to select.

3. Playing Music

The player supports MP3, WMA, OGG, WAV, APE, FLAC, AAC LC, and ACELP formats for lossless sound quality.

Suitable for running, cycling or fitness, leisure
Listen to music and exercise at the same time



Lossless Sound Quality
Supports MP3, WMA, OGG, WAV, APE, FLAC, AAC LC, ACELP formats
(APE and Flac requirements: 8KHz-48KHz, 1000Kbgs)
No direct support for Audiobook and for iTunes

Image: The Zopsc MP3 MP4 Player highlighting supported audio formats and its suitability for various activities like running and cycling.

1. From the main menu, select 'Music'.
2. Browse through your music library by artist, album, or folder.
3. Select a song and press the Play/Pause button to begin playback.
4. Use the Previous/Next buttons to skip tracks.

4. Transferring Files

Connect the player to your computer using the USB cable. The player will appear as a removable disk. You can then drag and drop music, video, or e-book files directly into the player's folders.

5. FM Radio

The player includes a built-in FM radio function.

Thin and light, compact body

Built in 8GB memory capacity

Store up to 2000 tracks of music

Easy to Use

Classic button and simple navigation design

Downloading is easy

Simply drag and drop music files or folders while connected to your computer

Works perfectly with your car via the AUX port



Image: The Zopsc MP3 MP4 Player showing its FM radio interface with frequency display.

1. From the main menu, select 'FM Radio'.
2. Use the navigation buttons to scan for stations or manually tune to a frequency.
3. Ensure earphones are connected as they act as the antenna.

6. E-book Function

The player supports TXT format e-books with features like automatic page turning, smart bookmarking, and memory reading.

SMART ELECTRONIC BOOK

TXT format Automatic page turning,
smart bookmark, memory reading



Image: The Zopsc MP3 MP4 Player showcasing its smart electronic book feature with text displayed on screen.

7. Volume Control

Press the VOL button to enter volume adjustment mode, then use the Previous/Next buttons to increase or decrease the volume level.

8. Key Combination Lock Screen

To prevent accidental touches during use, you can lock the screen.

Key combination lock screen

Press the key combination shown below to lock the screen and prevent accidental touch



Unlock

Press the key combination and press the key combination again to unlock the screen after the lock screen appears. If unsuccessful, repeat the operation again.

Image: The Zopsc MP3 MP4 Player illustrating how to lock and unlock the screen using a key combination.

- **To Lock:** Press the specified key combination (usually M + Play/Pause or similar, refer to on-screen prompt) to lock the screen.
- **To Unlock:** Press the same key combination again. If unsuccessful, repeat the operation.

MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Store the player in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on	Low battery	Charge the device for at least 30 minutes.

Problem	Possible Cause	Solution
No sound	Volume too low; Earphones not connected properly; Corrupt audio file	Increase volume; Reconnect earphones; Try a different audio file.
Cannot transfer files	Incorrect USB connection; Driver issue	Ensure USB cable is securely connected; Try a different USB port or computer; Restart the player and computer.
Screen is frozen	Software glitch	Press and hold the power button for 10-15 seconds to force a restart.

SPECIFICATIONS

Feature	Detail
Model Name	Zopsc5mxubk9v7r-11
Internal Memory	8 GB
Expandable Memory	Up to 64 GB (Micro SD card not included)
Battery Life	Up to 30 hours playback
Charging Time	2-3 hours via USB
Supported Audio Formats	MP3, WMA, OGG, WAV, APE, FLAC, AAC LC, ACELP
Screen Size	1.8 Inches
Connectivity Technology	Aux
Special Feature	FM Radio
Item Weight	3.13 ounces
Dimensions	4.76 x 4.61 x 1.77 inches (Package)

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. Please refer to the product packaging or contact your retailer for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance or technical support, please refer to the contact information provided with your purchase or visit the official Zopsc website.

