

[Manuals.plus](#) /

› [Robo Alive](#) /

› Robo Alive Robo Boats (Tiger Shark & Robo Shark) Instruction Manual

Robo Alive 71123B

Robo Alive Robo Boats (Tiger Shark & Robo Shark) Instruction Manual

Model: 71123B

INTRODUCTION

Welcome to the world of Robo Alive Robo Boats! This manual provides essential information for the safe and optimal use of your new Tiger Shark and Robo Shark water-activated robotic boats. Please read these instructions carefully before use and retain them for future reference.



The Robo Alive Robo Boats, Tiger Shark and Robo Shark, are packaged together, ready for water-activated fun.

SETUP

1. **Unboxing:** Carefully remove the Robo Boats from their packaging. Ensure all components are present.
2. **Batteries:** Each Robo Boat requires 3 LR44 batteries, which are included. The battery compartment is located on the underside of the boat. Use a small screwdriver to open the compartment, insert the batteries with correct polarity, and securely close the cover.
3. **Initial Activation:** The Robo Boats are water-activated. Simply place them in water to bring them to life. There are no on/off switches.





Both the Tiger Shark and Robo Shark boats are shown in their retail packaging, emphasizing their 'Water Activated' feature.

OPERATING INSTRUCTIONS

The Robo Boats are designed for intuitive play:

- **Water Activation:** The boats automatically start moving when placed in water. Sensors on the underside detect water contact and activate the propeller.
- **Realistic Movement:** The boats race and glide through water, mimicking real speed boats.
- **Impact Auto-Reverse:** If a boat bumps into a solid object, the nose cone activates an auto-reverse feature. The engine briefly reverses, aided by a directional fin, then re-engages forward movement.
- **Auto-Off Feature:** To conserve battery life, the boats will automatically turn off after approximately 5 minutes of continuous movement when removed from water.
- **Movable Rudder:** Each boat features a movable rudder, allowing for adjustments to its course (e.g., tight circles, gentle curves).



The orange Tiger Shark Robo Boat glides across the water surface in a pool.

This video demonstrates the Robo Alive Robo Boats actively moving in water, showcasing their water-activated propulsion.

This video illustrates the Robo Alive Robotic Boat in action, demonstrating its suitability as a summer toy for children.

MAINTENANCE

- **Cleaning:** After each use, especially if used in soapy or bubbly water, rinse the boats with clean water. Ensure the water-activated sensors on the bottom are free from residue to maintain proper function.
- **Drying:** Thoroughly dry the boats before storing them. This helps prevent corrosion and extends battery life.
- **Battery Replacement:** When the boats' movement becomes sluggish or stops, it's time to replace the LR44 batteries. Refer to the 'Setup' section for instructions on accessing the battery compartment.
- **Propeller Care:** The propellers are made from soft plastic for safety. Regularly check for any debris or hair that might be entangled and carefully remove it.



Detailed view of the orange Tiger Shark Robo Boat, highlighting its shark-inspired graphics and top features.

TROUBLESHOOTING

- **Boat Not Moving:**
 - Ensure the boat is fully submerged in water, allowing the sensors to make contact.
 - Check if the batteries need replacement.
 - Clean the water-activated sensors on the underside of the boat to remove any film or debris.
- **Boat Moving Slowly or in Unusual Patterns:**
 - Replace the batteries.
 - Check the rudder for proper alignment. It may have shifted.
 - Inspect the propeller for any obstructions.

A short preview video offering a quick look at the Robo Alive Robo Boats' features and operation.

SPECIFICATIONS

Brand Name	Robo Alive
Model Name	Series 1
Model Number	71123B
UPC	193052062796
Item Type Name	Robotic Boat
Material Type	Plastic
Power Source	Battery Powered
Battery Type	3 LR44 batteries required (included)
Age Range Description	Kid (Manufacturer Minimum Age: 36.0 Months)
Item Weight	0.5 Pounds
Item Dimensions	3.54 x 3.54 x 2.76 inches

Indoor/Outdoor Usage

Outdoor

Safety Information

WARNING: CHOKING HAZARD - Small pieces. Not for children under 3 years.

Always supervise children during play with Robo Boats, especially around water. Ensure the battery compartment is securely closed to prevent water ingress and battery exposure.

Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Robo Alive website. Keep your proof of purchase for any warranty claims.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question