

BANDAI 4570118083869

BANDAI Kamen Rider Gotchard Souchaku Henshin Action Figure Manual

Model: 4570118083869

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

This manual provides instructions for the BANDAI Kamen Rider Gotchard Souchaku Henshin action figure. This figure allows for transformation into three distinct forms by combining the base body with various Wild Modes. The Souchaku Henshin Series features advanced modeling and movable parts for dynamic posing.

2. SETUP AND ASSEMBLY

Carefully remove all components from the packaging. Identify the main Kamen Rider Gotchard base body and the three distinct Wild Mode armor sets: SteamHopper, AppareSkebow, and AntWrestler.





Figure 1: Exploded view showing the Kamen Rider Gotchard base body and various armor components.



Figure 2: All included components: base body, three Wild Mode armor sets, weapon, and interchangeable hands.

2.1 Identifying Components:

- **Kamen Rider Gotchard Base Body:** The core articulated figure.
- **SteamHopper Wild Mode:** Red armor set, typically associated with a grasshopper motif.
- **AppareSkebow Wild Mode:** Blue armor set, typically associated with a skateboarder/insect motif.
- **AntWrestler Wild Mode:** Blue and gold armor set, typically associated with an ant/wrestler motif.
- **Accessories:** Includes interchangeable hands and a weapon.

3. OPERATING INSTRUCTIONS: TRANSFORMATION

The primary function of this figure is its ability to transform into three different forms by attaching the respective Wild Mode armor to the base body. Ensure all connections are secure but avoid excessive force during assembly and disassembly.

3.1 Transforming into AppareSkebow Form:

1. Select the blue AppareSkebow armor components.
2. Attach the chest, shoulder, arm, and leg armor pieces to the corresponding points on the base body.

3. Secure the helmet onto the base body's head.
4. Ensure all parts are firmly connected.



Figure 3: Kamen Rider Gotchard in its AppareSkebow transformed state.



Figure 4: Detailed view of the AppareSkebow Wild Mode armor components.

3.2 Transforming into SteamHopper Form:

1. Remove any previously attached armor.
2. Select the red SteamHopper armor components.
3. Attach the chest, shoulder, arm, and leg armor pieces to the corresponding points on the base body.
4. Secure the helmet onto the base body's head.
5. Ensure all parts are firmly connected.

装着変新
そら ぶく へん しん



Figure 5: Kamen Rider Gotchard in its SteamHopper transformed state.



Figure 6: Detailed view of the SteamHopper Wild Mode armor components.

3.3 Transforming into AntWrestler Form:

1. Remove any previously attached armor.
2. Select the blue and gold AntWrestler armor components.
3. Attach the chest, shoulder, arm, and leg armor pieces to the corresponding points on the base body.
4. Secure the helmet onto the base body's head.
5. Ensure all parts are firmly connected.

装着変新
ぞろ ちやく へん しん



Figure 7: Kamen Rider Gotchard in its AntWrestler transformed state.



Figure 8: Detailed view of the AntWrestler Wild Mode armor components.

3.4 Interchanging Hands and Weapon:

- Gently pull off the existing hands from the base body's wrists.
- Push the desired interchangeable hands onto the wrist pegs until secure.
- The weapon can be held by the appropriate hand accessory.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the figure. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure and its components in a cool, dry place away from direct sunlight and extreme temperatures. Keep small parts in a designated container to prevent loss.
- **Handling:** Handle the figure with care. Avoid dropping it or applying excessive force to joints and connection points, as this may cause damage.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Parts feel loose or detach easily.	Normal wear over time, or not fully seated during assembly.	Ensure parts are pushed firmly into place. If wear is significant, consider gentle application of clear nail polish to pegs (allow to dry completely) to increase friction.
Difficulty attaching armor pieces.	Incorrect alignment or slight manufacturing variations.	Verify correct orientation of the armor piece. Apply gentle, even pressure. Do not force. If a part is consistently difficult, inspect for any obstructions.
Figure does not stand stably.	Improper posing or loose leg joints.	Adjust the figure's stance to balance its weight. Ensure leg joints are positioned correctly.

6. SPECIFICATIONS

Brand: BANDAI

Model Name: Kamen Rider Gotchard

Model Number: 4570118083869

Toy Figure Type: Action Figure

Material Type: Polyvinyl Chloride (PVC), Hard Plastic

Color: Multicolor

Item Dimensions (L x W x H): 1 x 1 x 1 inches (approximate, as per product data)

Item Weight: 0.24 Kilograms

Number of Pieces: 1 (main figure, but includes multiple interchangeable parts)

Assembly Required: No (figure comes pre-assembled, but armor attachment is required)

Operation Mode: Manual

Recommended Age: 36 months to 144 months (3 to 12 years)

Special Features: Transformable into three different forms (SteamHopper, AppareSkebow, AntWrestler)

7. WARRANTY INFORMATION

This product is covered by the manufacturer's standard warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your purchase or visit the official BANDAI website. Keep your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For technical assistance, missing parts, or other inquiries, please contact BANDAI customer support. Contact information can typically be found on the product packaging or on the official BANDAI website. When contacting support, please have your product model number (4570118083869) and proof of purchase readily available.

Official BANDAI Website: www.bandai.com