

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher & Paykel](#) /
- › [Fisher & Paykel 512818 Crock Insert Instruction Manual](#)

Fisher & Paykel 512818

Fisher & Paykel 512818 Crock Insert Instruction Manual

Model: 512818

INTRODUCTION

This manual provides instructions for the proper installation, use, and care of your Fisher & Paykel 512818 Crock Insert. This genuine OEM replacement part is designed for specific Fisher & Paykel dishwasher models to ensure optimal performance and fit.

PRODUCT OVERVIEW

The Fisher & Paykel 512818 Crock Insert is a replacement rack component for compatible Fisher & Paykel dishwashers. It is designed to hold crocks, bowls, and other items securely during the wash cycle, ensuring they are properly cleaned.



Image: Fisher & Paykel 512818 Crock Insert. This image displays the replacement crock insert, typically a plastic or coated metal rack designed to fit into a dishwasher drawer for holding various kitchen items.

SETUP AND INSTALLATION

Before installing, ensure your dishwasher is turned off and cooled.

1. **Identify the correct drawer:** Determine which dishwasher drawer requires the replacement crock insert.
2. **Remove old insert (if applicable):** Carefully lift out the old or damaged crock insert from the dishwasher drawer.
3. **Position new insert:** Place the new Fisher & Paykel 512818 Crock Insert into the designated area within the dishwasher drawer. Ensure it sits securely and aligns with any existing guides or clips.
4. **Verify fit:** Gently push down on the insert to confirm it is properly seated and does not wobble.

Important: This insert is designed for specific Fisher & Paykel models. Verify compatibility with your dishwasher's model number before installation.

OPERATING INSTRUCTIONS

Once installed, the crock insert functions as a standard dishwasher rack.

- **Loading:** Place crocks, bowls, and other items into the insert, ensuring they are stable and do not obstruct spray arms.
- **Capacity:** Do not overload the insert, as this can hinder proper cleaning and drying.
- **Dishwasher Operation:** Operate your dishwasher as per its main instruction manual.

MAINTENANCE AND CARE

To ensure longevity and hygiene of your crock insert:

- **Regular Cleaning:** The insert will be cleaned during normal dishwasher cycles. For stubborn food residues, gently scrub with a soft brush and mild dish soap.
- **Inspection:** Periodically inspect the insert for any signs of wear, damage, or rust. Replace if significant damage is observed.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on the insert, as this may damage its coating.

TROUBLESHOOTING

Insert Does Not Fit

If the new insert does not fit your dishwasher drawer:

- **Check Model Compatibility:** Double-check that your dishwasher model number is compatible with the 512818 crock insert. Some older models may require a different part.
- **Orientation:** Ensure the insert is placed in the correct orientation within the drawer.

Rusting or Discoloration

While designed for durability, prolonged exposure to certain detergents or hard water can affect the insert.

- **Water Quality:** Consider using a rinse aid or checking your water softener settings if you have hard water.
- **Detergent:** Ensure you are using a dishwasher-safe detergent as recommended by your dishwasher manufacturer.

SPECIFICATIONS

Property	Value
Model Number	512818
Manufacturer	Fisher & Paykel
Package Dimensions	12.64 x 4.84 x 0.87 inches
Weight	2 Pounds
ASIN	B0CD1FJ26D
Date First Available	October 25, 2022

Note: Specifications are subject to change without notice.

WARRANTY INFORMATION

This Fisher & Paykel OEM part is typically covered by a limited manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation provided with your original appliance or contact Fisher & Paykel customer support. Keep your proof of purchase.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Fisher & Paykel customer service.

Website: www.fisherpaykel.com

Phone: Refer to your region's Fisher & Paykel website for local contact numbers.

When contacting support, please have your appliance model number and the 512818 part number available.