

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KAER](#) /

› [KAER 10-12 Gun Safe Instruction Manual with Digital Keypad](#)

## KAER 10-12 Gun Safe

### KAER 10-12 Gun Safe Instruction Manual with Digital Keypad

Model: 10-12 Gun Safe

#### IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembling or operating your KAER 10-12 Gun Safe. Failure to follow these instructions may result in injury or damage.

- Always keep firearms unloaded and pointed in a safe direction.
- Use proper installation techniques to prevent tipping.
- Be cautious of pinch points during assembly and use.
- Always follow local laws and regulations regarding firearm storage and safety.
- Keep keys and digital codes in a secure location, away from children and unauthorized individuals.

#### PRODUCT OVERVIEW

The KAER 10-12 Gun Safe is designed to provide secure storage for your firearms and valuables. It features a robust alloy steel construction, a digital keypad, and adjustable internal storage options.



Image: The KAER 10-12 Gun Safe in grey, shown both closed and with its main door open, revealing internal storage for multiple rifles and a separate top compartment.

## Components Included

- 1 x Rifle Gun Safe Cabinet
- 2 x Backup Keys (for main door)
- 2 x Keys (for top compartment)
- 4 x Anchor Bolts (for mounting)
- 1 x Emergency Battery Pack
- 1 x Instruction Manual
- 18 x Self-tapping Screws
- 10 x Cross Head Screws
- 6 x Rivets
- 4 x Fixing Screws
- 3 x Gun Mounts
- 3 x Gun Stocks
- 1 x Screwdriver
- 1 x Pair of Gloves

- 1 x Pile Blanket (for base)

## Product Dimensions

The external dimensions of the KAER 10-12 Gun Safe are approximately 14.96 inches (D) x 18.1 inches (W) x 56.96 inches (H).



Image: A detailed diagram illustrating the external and internal measurements of the gun safe, alongside an organized display of all included accessories for assembly and use.

## SETUP AND ASSEMBLY

The KAER 10-12 Gun Safe is designed for quick assembly. Follow these steps carefully to ensure proper setup.



Image: An 8-step visual guide detailing the assembly process of the gun safe, from connecting the main panels to installing internal components like shelves and gun racks.

## Assembly Steps

1. **Attach Side Panels to Back Plate:** Connect the two side panels to the back plate using the provided self-tapping screws. Ensure all tabs and slots align correctly.
2. **Attach Door Frame:** Secure the door frame to the assembled side and back panels using cross head screws.
3. **Install Top Plate:** Place the top plate onto the assembled structure and secure it with self-tapping screws.
4. **Install Bottom Plate:** Insert the bottom plate into the base of the safe, ensuring it sits flush. Secure with fixing screws.
5. **Install Internal Shelves and Panels:** Insert the main shelf and the back mesh panel into their designated slots. Secure the back mesh panel with self-tapping screws.
6. **Install Side Mesh Panels:** Place the two side mesh panels into the interior of the main compartment. Secure them with self-tapping screws.
7. **Attach Gun Racks:** Secure the gun mounts and gun stocks to the interior mesh panels using the provided rivets. Adjust their positions as needed for your firearms.
8. **Place Pile Blanket:** Lay the pile blanket on the bottom of the main compartment to protect your firearms.

## Mounting the Safe

For added security, it is recommended to mount the safe to a wall or floor using the provided anchor bolts. Locate suitable studs in your wall or a solid floor surface. Drill pilot holes and secure the safe firmly.

## OPERATING INSTRUCTIONS

### Locking System Overview

The KAER 10-12 Gun Safe offers multiple methods for access and security:

- Digital Keypad + Knob
- Key + Knob
- Emergency Battery Box + Knob (for power failure)

# 2 WAYS TO OPEN RIFLE SAFE



9V BATTERY BACK UP



PIN-CODE ACCESS



SINGLE ACCESS



MOTION SENSOR  
ALARM



3 SECOND ACCESS



SOLID STEEL BOLTS

Image: A visual representation of the safe's dual-access system, showing both key and digital keypad options, along with key security features.

## Setting the Electronic Password

Before first use, you must set your personal digital password.

# HOW TO ASSEMBLE GUN SAFE

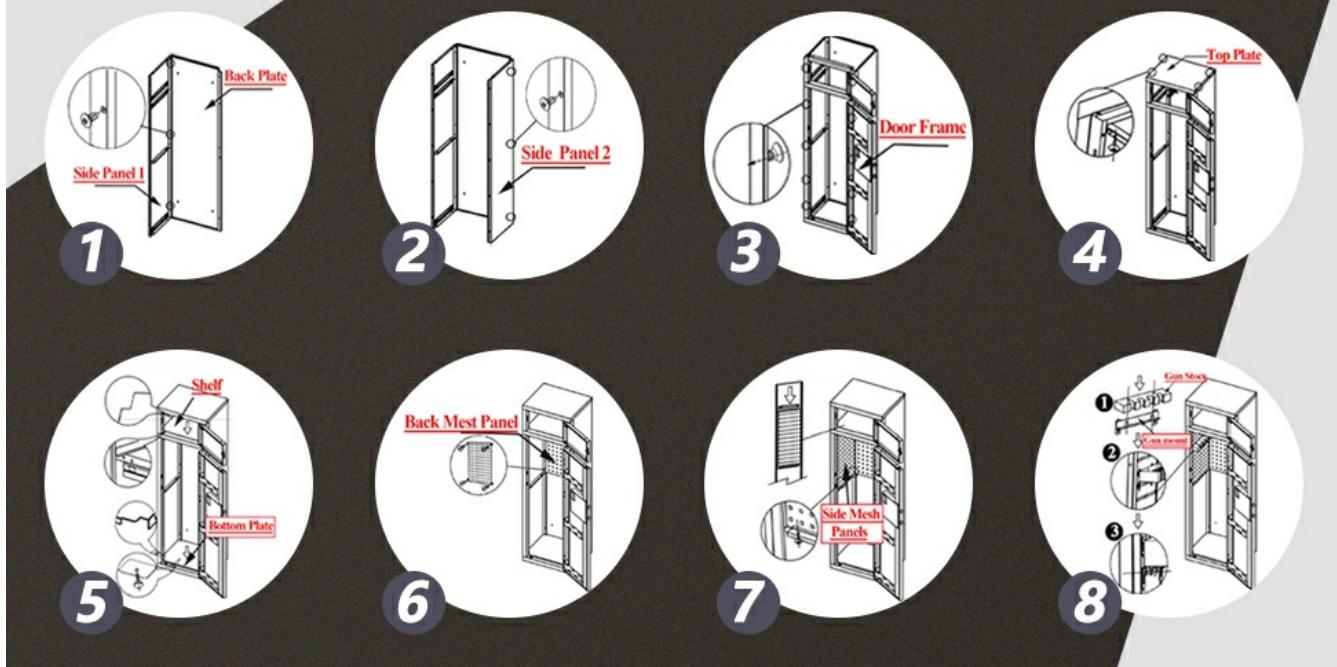


Image: A step-by-step guide on setting the electronic password, including battery insertion and keypad programming.

- 1. Insert Batteries:** Open the battery compartment on the inside of the door and insert 4\*AA alkaline batteries.
- 2. Press Set Button:** With the door open, locate and press the red 'SET' button inside the battery compartment. You will hear a 'di' sound, and the keypad light will turn on.
- 3. Enter New Password:** On the digital keypad, press the '#' key, then enter your desired 1-8 digit password. Press the '#' key again.
- 4. Confirm Password:** Re-enter the same 1-8 digit password and press the '#' key one more time. You will hear a long 'di~~~' sound, indicating the electronic password has been successfully set.

## Opening the Safe with Digital Keypad

- 1. Wake Up Keypad:** Press the '#' key to activate the keypad.
- 2. Enter Password:** Enter your previously set 1-8 digit password.
- 3. Confirm:** Press the '#' key. If the password is correct, you will hear a 'di' sound and the green light will illuminate.
- 4. Rotate Knob:** Within 5 seconds, rotate the knob clockwise to open the safe door.

## Opening the Safe with Key

- 1. Insert Key:** Insert the backup key into the keyhole located on the digital keypad.
- 2. Turn Key:** Turn the key clockwise.
- 3. Rotate Knob:** Simultaneously rotate the knob clockwise to open the safe door.

## Using the Emergency Battery Box

In case of battery depletion, the emergency battery box can be used to power the keypad temporarily.

- 1. Connect Emergency Box:** Plug the emergency battery box into the port located on the digital keypad.
- 2. Enter Password:** Use the digital keypad as usual to enter your password and open the safe.
- 3. Replace Batteries:** Once the safe is open, replace the internal AA batteries immediately.

## Silent Mode Activation

To operate the safe silently, long press the '\*' (star) button on the digital keypad. This will disable keypad sounds for quiet access.

## Lockout Feature

For security, if an incorrect password is entered 5 consecutive times, the gun safe will enter a lockout mode, preventing further attempts for a short period.

## Maintenance

Regular maintenance ensures the longevity and proper functioning of your gun safe.

- **Battery Replacement:** Replace the 4\*AA alkaline batteries in the digital keypad annually, or immediately if the low battery indicator appears.
- **Cleaning:** Clean the exterior and interior of the safe with a soft, dry cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspection:** Periodically check all locking mechanisms, hinges, and mounting bolts for any signs of wear or loosening. Ensure the door closes and locks smoothly.

## Troubleshooting

If you encounter issues with your KAER 10-12 Gun Safe, refer to the following common problems and solutions:

### Safe not opening with digital code

- Ensure batteries are fresh and correctly installed. Use the emergency battery box if needed.
- Verify you are entering the correct 1-8 digit password followed by the '#' key.
- Check if the safe is in lockout mode due to multiple incorrect entries. Wait for the lockout period to expire.

### Keys not working

- Ensure you are using the correct key for the main door or top compartment.
- Check for any obstructions in the keyhole.
- If the key turns but the door doesn't open, ensure the digital keypad knob is also turned correctly.

### Alarm sounds unexpectedly

- The safe has a motion sensor alarm. Ensure the safe is stable and not being disturbed.
- Check if the lockout feature has been triggered.

### Door does not close or latch properly

- Ensure no items inside the safe are obstructing the door's closing path.
- Check if the safe is on a level surface. Adjust the feet if necessary.
- Inspect the locking bolts for any damage or misalignment.

## Specifications

Feature	Detail
Brand	KAER
Model	10-12 Gun Safe
Color	Grey
Product Dimensions	14.96"D x 18.1"W x 56.96"H
Item Weight	78 Pounds
Material	Alloy Steel
Lock Type	Electronic, Key
Number of Shelves	2 (adjustable)

Mounting Type	Floor Mount
Assembly Required	Yes

## **WARRANTY AND SUPPORT**

For specific warranty details, product support, or any questions regarding your KAER 10-12 Gun Safe, please contact KAER customer service directly. Our team is dedicated to providing a satisfying solution for you.