

ManWills HY-6006

ManWills Body Hair Trimmer

INSTRUCTION MANUAL - MODEL HY-6006

1. Introduction

Thank you for choosing the ManWills Body Hair Trimmer, Model HY-6006. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming device. Please read these instructions thoroughly before first use and retain them for future reference.

Product Overview

The ManWills Body Hair Trimmer is designed for efficient and comfortable body hair grooming. Key features include:

- **Ceramic Blades:** Equipped with both sharp and gentle ceramic blades for versatile trimming on various body areas, minimizing nicks and cuts.
- **LCD Display & Adjustable LED Light:** Digital display shows remaining charge. Integrated LED light provides enhanced visibility for precise grooming.
- **Waterproof Design:** Suitable for wet and dry use, allowing for convenient grooming in the shower and easy cleaning.
- **Customized Trimming:** Features a 3-in-1 adjustable guide comb with settings for 3mm, 4.5mm, and 6mm hair lengths.
- **Long-Lasting Power:** Provides up to 90 minutes of use on a single charge, with a 7000 RPM motor for efficient trimming. Includes a charging dock.
- **Travel-Friendly:** Incorporates a travel lock feature to prevent accidental activation during transport.

Package Contents

Verify that all items are present in your package:

- ManWills Body Hair Trimmer (Model HY-6006)

- Charging Dock
- USB Charging Cable
- Sharp Ceramic Blade (pre-installed or separate)
- Gentle Ceramic Blade
- Adjustable Guide Comb (3mm, 4.5mm, 6mm)
- Cleaning Brush
- Lubricating Oil
- Instruction Manual

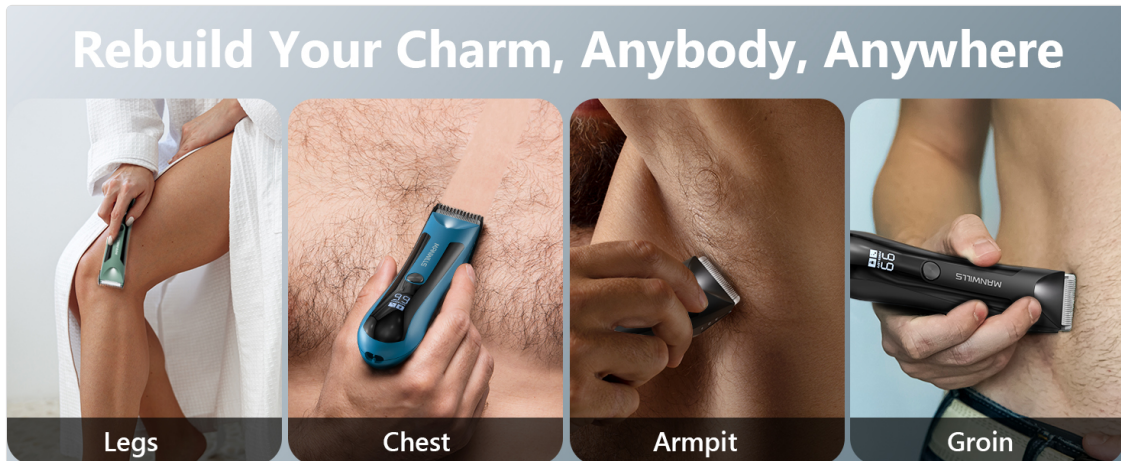


Image: ManWills Body Hair Trimmer kit contents.

2. Safety Information

To ensure safe operation and prevent injury or damage to the device, please adhere to the following safety guidelines:

- Keep the trimmer away from water sources when charging.
- Do not use the trimmer on infants or individuals with highly sensitive skin without appropriate length settings.
- Always ensure the blades are clean and free from debris before use.
- Avoid applying excessive pressure to the skin during trimming to prevent irritation or cuts.
- Do not disassemble the trimmer beyond routine cleaning. Contact customer support for repairs.
- Store the trimmer and its accessories out of reach of children.
- Use only the provided charging dock and cable.
- If the trimmer or charger appears damaged, discontinue use immediately.

3. Setup

Charging the Trimmer

Before first use, fully charge the trimmer. A full charge provides approximately 90 minutes of continuous use.

1. Place the trimmer securely in the charging dock.
2. Connect the USB charging cable to the dock and then to a compatible USB power adapter (not included) or a USB port.

3. The LCD display on the trimmer will show the charging progress. A full charge typically takes about 2 hours.
4. Once fully charged, disconnect the charger.



Image: Trimmer on charging dock.


Attaching and Changing Blades

Your trimmer comes with two types of ceramic blades: a 'Sharp' blade for general body hair and a 'Gentle' blade for sensitive areas.

1. Ensure the trimmer is turned off.
2. To remove a blade, gently push it upwards from the front of the trimmer until it detaches.
3. To attach a blade, align the blade with the trimmer head and press down firmly until it clicks into place.

Safe and Sound for All-Around

Choose Gentle or Sharp
The Power is in Your Hands

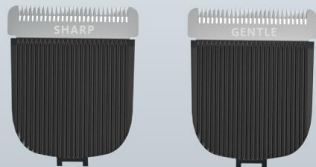

2 Blades
Sharp & Gentle



Image: Trimmer with Sharp and Gentle blades.

Using the Adjustable Guide Comb

The 3-in-1 guide comb allows you to select desired hair lengths: 3mm, 4.5mm, or 6mm.

1. Ensure the trimmer is turned off and a blade is securely attached.
2. Slide the guide comb onto the trimmer head until it locks into position.
3. Adjust the comb by sliding it up or down to select the desired length setting (indicated by numbers 1, 2, 3 or corresponding mm markings).

Slide for Precision

to Tailor Your TrimPerfect
Grooming Every Time



Image: Adjustable guide comb settings.

4. Operating Instructions

General Operation

1. Ensure the trimmer is charged and the desired blade/comb is attached.
2. Press the power button to turn the trimmer on.
3. Gently guide the trimmer against the direction of hair growth.
4. After use, press the power button to turn the trimmer off.

Wet and Dry Use

The ManWills Body Hair Trimmer is fully waterproof, allowing for convenient use in both wet and dry conditions.

- For dry trimming, ensure skin is clean and dry.
- For wet trimming, the trimmer can be used in the shower with water or shaving foam/gel.
- Always ensure the charging port is completely dry before charging.



Image: Trimmer in water, highlighting waterproof feature.

Using the LED Light

The built-in LED light provides additional illumination for precise grooming, especially in dimly lit areas or for detailed work.

- The LED light can be activated or deactivated independently of the trimmer's operation. Refer to the device's button functions for specific control.



Image: Trimmer with LED light in use.

Travel Lock Feature

The travel lock prevents accidental activation of the trimmer when stored in luggage or a toiletries bag.

- To activate the travel lock: Press and hold the power button for approximately 3 seconds until a lock icon appears on the LCD display.
- To deactivate the travel lock: Press and hold the power button for approximately 3 seconds until the lock icon disappears.



Image: Trimmer in a pocket, demonstrating portability.

5. Maintenance

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and detach the blade.
2. Use the provided cleaning brush to remove loose hairs from the blade and trimmer head.
3. Rinse the blade and trimmer head under running water. The trimmer body can also be rinsed due to its waterproof design.
4. Allow all parts to air dry completely before reattaching the blade or storing the trimmer.

Blade Care

To maintain blade sharpness and smooth operation:

- After cleaning and drying, apply a small drop of the provided lubricating oil to the blades.
- Run the trimmer for a few seconds to distribute the oil evenly.
- Perform this oiling routine regularly, especially after wet use, to prevent corrosion and ensure efficient cutting.

Battery Maintenance

The trimmer uses a Lithium Polymer (LiPo) battery. Proper care is essential to maximize its lifespan:

- **Avoid Constant Charging:** Do not leave the trimmer constantly plugged into the charging dock, especially after it reaches 100% charge. This can accelerate battery degradation.
- **Storage Charge:** For occasional use or long-term storage, it is recommended to store the trimmer with approximately 50% battery charge. Storing at 100% or 0% for extended periods can reduce battery life.
- **Charge Before Use:** If the trimmer has been stored for a while, recharge it just before your

grooming session rather than immediately after the previous use.

- **Avoid Extreme Temperatures:** Do not expose the trimmer to extreme heat or cold, as this can negatively impact battery performance and lifespan.

6. Troubleshooting

If you encounter issues with your ManWills Body Hair Trimmer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. Travel lock is activated.	Charge the trimmer. Deactivate the travel lock by pressing and holding the power button for 3 seconds.
Poor trimming performance or pulling hair.	Blades are dull or clogged with hair. Insufficient lubrication.	Clean the blades thoroughly. Apply lubricating oil to the blades. Consider replacing blades if they are old or damaged.
Trimmer not charging.	Charging cable or dock is not properly connected. Faulty cable/dock.	Ensure all connections are secure. Try a different USB power source. Contact customer support if the issue persists.
Battery life is shorter than expected.	Improper battery maintenance.	Refer to the 'Battery Maintenance' section for proper care instructions.

If you are unable to resolve an issue using the troubleshooting guide, please contact ManWills customer support.

7. Specifications

Feature	Detail
Model Number	HY-6006
Power Source	Battery Powered (1 Lithium Polymer battery included)
Use Time	Up to 90 minutes
Charge Time	Approximately 2 hours
Motor Speed	7000 RPM
Waterproof Rating	Yes, for wet/dry use
Adjustable Comb Settings	3mm, 4.5mm, 6mm
Item Weight	0.38 Kilograms (13.4 ounces)
Package Dimensions	8.03 x 3.54 x 2.76 inches

8. Warranty and Support

Warranty Information

ManWills stands by the quality of its products. Your Body Hair Trimmer is covered by a one-year product guarantee from the date of purchase. This warranty covers manufacturing defects under normal use.

Customer Support

For any questions, concerns, or assistance with your ManWills Body Hair Trimmer, please contact our customer support team. We are committed to providing a lifetime of after-sales service to ensure your satisfaction.

You can also visit the official ManWills store for more information and support: [ManWills Amazon Store](#)