

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool OMR58HU1B Oven User Manual - Installation, Operation, and Maintenance](#)

Whirlpool OMR58HU1B

Whirlpool OMR58HU1B Electric Oven User Manual

Model: **OMR58HU1B** | Brand: **Whirlpool**

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Whirlpool OMR58HU1B electric oven. Please read these instructions carefully before installation and use, and keep them for future reference. Your oven features a 71-liter capacity, A+ energy efficiency, and versatile cooking functions designed for optimal culinary results.

SAFETY INFORMATION

- Ensure the oven is correctly installed by a qualified technician before use.
- Do not allow children to operate the oven unsupervised.
- Always use oven mitts when handling hot dishes or oven components.
- Keep flammable materials away from the oven.
- Never line the oven cavity with aluminum foil or other materials, as this can trap heat and damage the oven.
- Disconnect the appliance from the power supply before performing any maintenance or cleaning.

SETUP AND INSTALLATION

The Whirlpool OMR58HU1B is an integrated electric oven designed for seamless integration into your kitchen cabinetry. Professional installation is recommended to ensure proper ventilation and electrical connection.

Unpacking

Carefully remove all packaging materials. Inspect the oven for any damage. Retain packaging for potential future transport or service.

Electrical Connection

Ensure the electrical supply matches the voltage and frequency specified on the rating plate. The oven

must be properly earthed. Consult a qualified electrician for connection.

First Use

Before cooking food, heat the empty oven for approximately 30 minutes at maximum temperature to burn off any manufacturing residues. Ensure adequate ventilation during this process. A slight odor may be present, which is normal.



Image: Side view of the Whirlpool OMR58HU1B oven, illustrating its design for built-in installation.



Image: Rear view of the Whirlpool OMR58HU1B oven, highlighting the electrical connection area.

OPERATING INSTRUCTIONS

Your Whirlpool OMR58HU1B oven offers various cooking functions to suit different culinary needs. Familiarize yourself with the control panel for precise operation.



Image: Control panel of the Whirlpool OMR58HU1B oven, featuring rotary knobs for function and temperature selection, and a digital timer display.

Control Panel Overview

The oven features two main rotary knobs: one for selecting cooking functions and another for setting the temperature. A digital display shows the time and other relevant information.

Cooking Functions

The oven is equipped with multiple cooking modes, including:

- **Conventional Baking:** Ideal for single-rack baking of cakes, pastries, and roasts.
- **Forced Air (Hot Air 3D):** Distributes heat evenly across multiple levels, allowing for cooking different dishes simultaneously without flavor transfer.
- **Grill:** Perfect for browning, toasting, and grilling small to medium portions of food.
- **Fan Grill:** Combines grilling with fan assistance for faster and more even grilling results.
- **Defrost:** Uses the fan to circulate air at room temperature, gently defrosting food.

Setting Temperature and Time

1. Turn the function knob to select your desired cooking mode.
2. Turn the temperature knob to set the desired cooking temperature.
3. Use the digital display controls to set the cooking duration or timer, if required.
4. The oven will begin heating to the set temperature. An indicator light will typically turn off once the desired temperature is reached.



Image: Interior of the oven showing various rack levels for flexible cooking.



Image: Included oven accessories: two baking trays and a wire rack.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

EcoClean Feature

The Whirlpool OMR58HU1B oven features an EcoClean coating on its interior walls. This special catalytic lining absorbs grease and food residues during the cooking process, simplifying cleaning. For best results, run the oven at a high temperature (e.g., 200°C for 1 hour) after cooking fatty foods to activate the self-cleaning properties. After the cycle, simply wipe away any remaining ash with a damp cloth.

General Cleaning

- Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- The oven door glass can be cleaned with a glass cleaner.
- Removable parts like racks and trays can be washed in warm soapy water or in a dishwasher.
- Ensure the oven is completely cool before cleaning.



Image: EcoClean icon, symbolizing easy oven cleaning.

TROUBLESHOOTING

If you encounter any issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect settings.	Check power connection and circuit breaker. Verify function and temperature settings.
Food not cooking evenly.	Incorrect rack position; oven door not fully closed.	Use recommended rack positions. Ensure door is sealed. Avoid opening door frequently.
Excessive smoke during cooking.	Food spills; excessive fat.	Clean oven interior. Use a drip tray for fatty foods.
Oven light not working.	Bulb needs replacement.	Refer to the full manual for instructions on replacing the oven light bulb.

If the problem persists, contact Whirlpool customer support or a qualified service technician.

SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model Number	OMR58HU1B
Capacity	71 Litres
Energy Efficiency Class	A+
Power (Watt)	220 KW <i>(Note: Value as provided, typically 2-4 kW for household ovens)</i>

Feature	Detail
Voltage	220 Kilovolts (Note: Value as provided, typically 220-240V for household ovens)
Heating Method	Electric
Installation Type	Integrated
Finish Type	Stainless Steel
Noise Level	10 Decibels
Product Dimensions (D x W x H)	65P x 64I x 67H centimeters
Item Weight	26.9 Kilograms
Special Features	EcoClean coating, Hot Air 3D cooking

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Whirlpool website. For technical assistance, spare parts, or service requests, please contact Whirlpool customer support. Have your model number (OMR58HU1B) and serial number ready when contacting support.

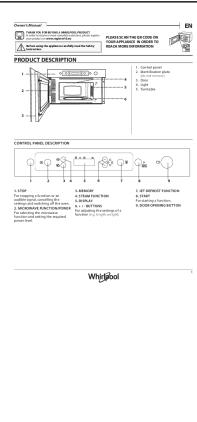
You can find contact details for Whirlpool customer service on their official website or in the documentation provided with your appliance.

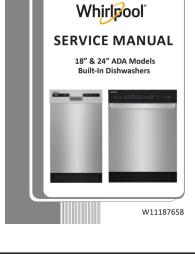
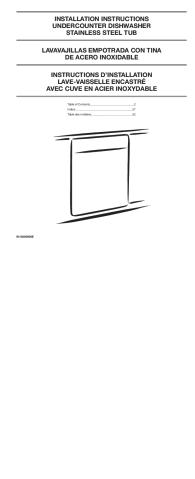


Image: Whirlpool brand logo.

© 2023 Whirlpool. All rights reserved.

Related Documents - OMR58HU1B

	<p>Whirlpool MBNA910X Microwave Oven User Manual</p> <p>Official user manual for the Whirlpool MBNA910X Solo Microwave Oven. This guide details the appliance's features, including its 22L capacity, 750W power, and functions like microwave cooking, steam preparation, and Jet Defrost. It provides comprehensive instructions for operation, daily use, cleaning, maintenance, and troubleshooting. Model number: 859991659450.</p>
---	--

	<p><u>Whirlpool W4OMK38HU0XA 60cm Multifunction Hydrolytic Oven - Features, Specs & Installation</u></p> <p>Detailed specifications and features for the Whirlpool W4OMK38HU0XA 60cm Multifunction Hydrolytic Oven, including Cook3, Turbo Grill, Smart Clean technology, and installation dimensions.</p>
	<p><u>Whirlpool Built-In Dishwasher Owner's Manual and Installation Guide</u></p> <p>Your essential guide to the Whirlpool Built-In Dishwasher. Covers safe installation, operation, maintenance, settings, troubleshooting, and error codes for optimal performance.</p>
	<p><u>Whirlpool 18" & 24" ADA Built-In Dishwashers Service Manual</u></p> <p>This service manual provides detailed technical information, diagnostics, troubleshooting, and component access procedures for Whirlpool 18" and 24" ADA Built-In Dishwashers (Model KD-18, Part No. W11187658).</p>
	<p><u>Whirlpool WDPA70SAMZ1 Dishwasher Parts List</u></p> <p>Comprehensive parts list for the Whirlpool WDPA70SAMZ1 Stainless Steel Dishwasher. Includes exploded view diagrams and part numbers for door, panel, control, tub, frame, pump, washarm, motor, rack, and optional components.</p>
	<p><u>Whirlpool Undercounter Dishwasher Installation Instructions</u></p> <p>Comprehensive guide for installing a Whirlpool undercounter dishwasher with a stainless steel tub, covering safety, requirements, step-by-step installation, and final checks.</p>