

[manuals.plus](#) /

- › [RELAX4LIFE](#) /
- › [RELAX4LIFE Wooden Toy Kitchen TY327900-IT Instruction Manual](#)

## RELAX4LIFE TY327900-IT

# RELAX4LIFE Wooden Toy Kitchen TY327900-IT Instruction Manual

Model: TY327900-IT

## 1. INTRODUCTION

Thank you for choosing the RELAX4LIFE Wooden Toy Kitchen. This manual provides essential information for the assembly, operation, and maintenance of your new toy kitchen. Please read these instructions carefully before assembly and retain them for future reference.

This toy kitchen is designed to provide children aged 36 months to 11 years with a realistic and engaging play experience, fostering creativity, communication, and problem-solving skills through imaginative role-play.



Image 1.1: Fully assembled RELAX4LIFE Wooden Toy Kitchen.

## 2. WHAT'S IN THE Box

Carefully unpack all components and verify against the list below. If any parts are missing or damaged, please contact customer support.

- 1 x Children's Kitchen structure
- 1 x Pot with Lid
- 1 x Frying Pan
- 3 x Kitchen Utensils (e.g., ladle, spatula)
- 1 x Instruction Manual

Additional accessories such as a retro telephone, microwave, oven, water dispenser, and storage cabinets are integrated into the main kitchen structure.

## 3. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the detailed instructions provided in the included manual. It is recommended to assemble the kitchen on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are securely tightened, but do not overtighten.

**Tools Required:** A screwdriver (not included) will be necessary for assembly.

**Important:** Adult supervision is recommended during assembly. Keep small parts away from young children before and during assembly.



Image 3.1: Detailed dimensions of the toy kitchen and included accessories, useful for assembly and placement.

## 4. OPERATING INSTRUCTIONS

### 4.1 Realistic Lights and Sounds

The toy kitchen features realistic lights and sounds to enhance the play experience. To activate these features:

- **Stove Burners:** Turn the knobs on the stove to activate cooking sounds and lights, simulating a real stovetop.
- **Water Dispenser:** Press the button on the water dispenser to produce realistic water dispensing sounds.

**Battery Installation:** The water dispenser requires 3 AAA batteries (not included). Ensure batteries are inserted with correct polarity. Refer to the battery compartment for specific instructions.



Image 4.1: Close-up view of the stove area, highlighting the realistic light and sound effects when knobs are turned.

## 4.2 Functional Features

- **Oven and Microwave:** Doors open and close, allowing for imaginative baking and cooking scenarios.
- **Water Dispenser:** The dispenser is designed to simulate water flow (requires batteries).
- **Retro Telephone:** A decorative telephone is included for role-play communication.
- **Sink and Faucet:** The sink is removable for easy cleaning, and the faucet handles can be turned.
- **Storage:** Ample storage space, including a top small cabinet, hooks for hanging utensils, and a bottom large cabinet, encourages children to organize their play area.

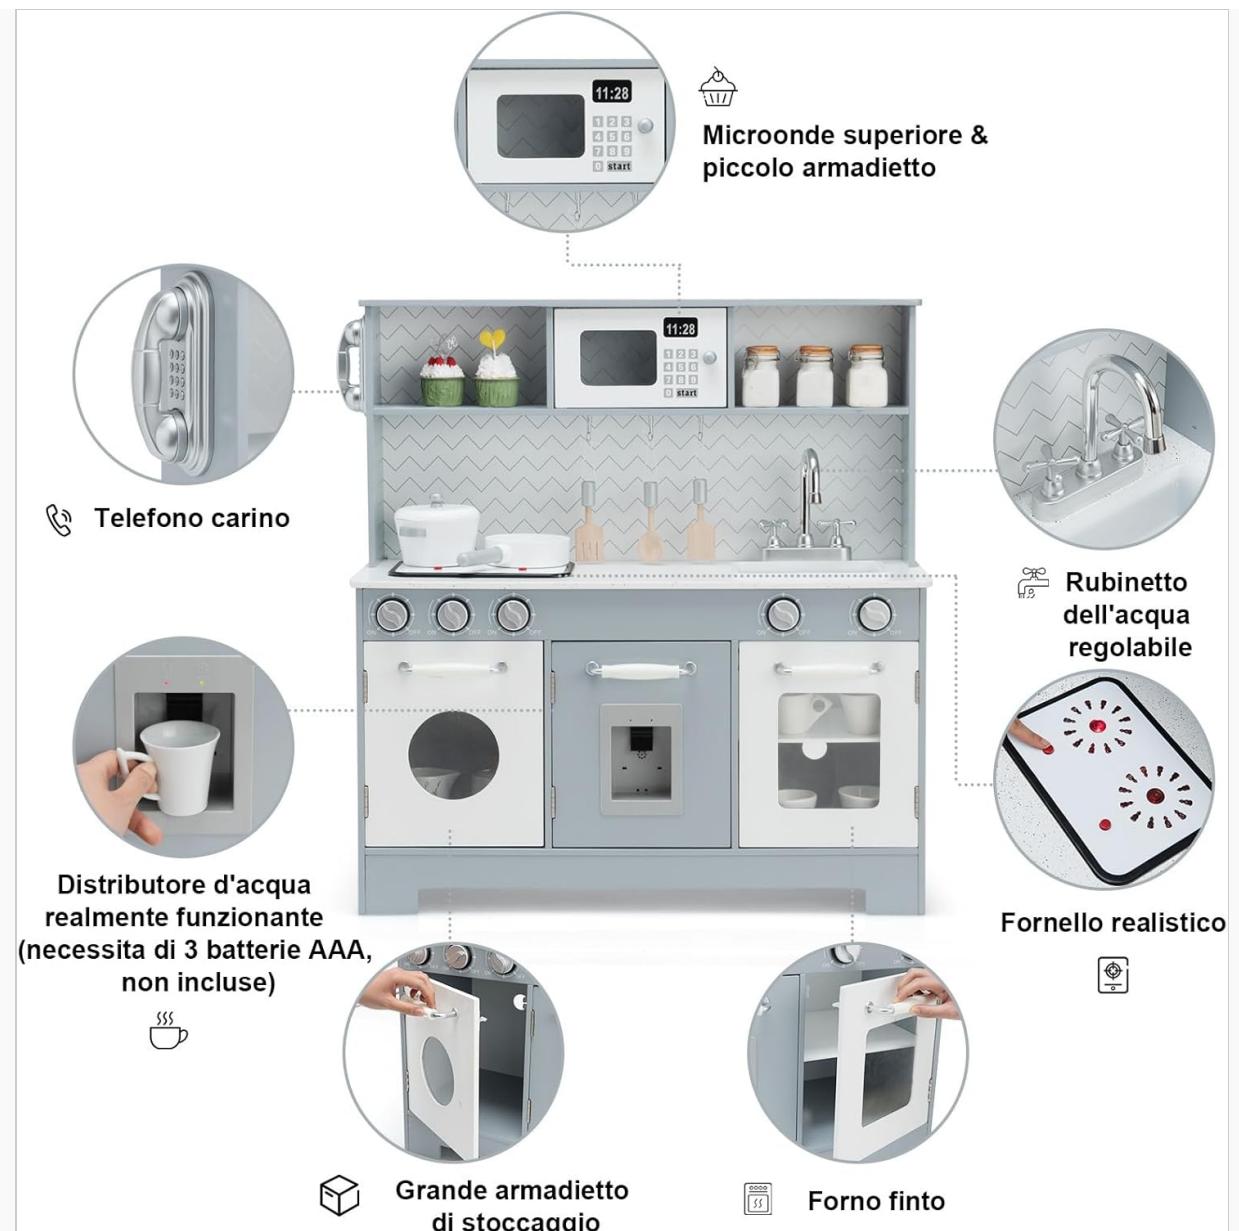


Image 4.2: An exploded view highlighting key features such as the microwave, telephone, water dispenser, realistic stove, and storage compartments.



Image 4.3: Detail of the removable sink and rotatable faucet, demonstrating its interactive design.

## 5. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood or paint finish.
- **Drying:** Ensure the kitchen is thoroughly dry after cleaning to prevent moisture damage to the wood.
- **Storage:** Store the toy kitchen in a dry environment, away from direct sunlight or extreme temperatures, to preserve its material integrity.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Battery Replacement:** Replace AAA batteries in the water dispenser as needed. Always use new batteries and dispose of old ones responsibly.

## 6. TROUBLESHOOTING

- **Lights/Sounds Not Working:**
  - Check if the water dispenser has fresh AAA batteries installed correctly.
  - Ensure the stove knobs are fully turned to the 'ON' position.

- Loose Parts:** If any parts feel loose, gently tighten the corresponding screws. Do not overtighten.
- Difficulty During Assembly:** Refer to the detailed assembly instructions provided. Ensure all pieces are oriented correctly before attempting to fasten them. If issues persist, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	RELAX4LIFE
Model Number	TY327900-IT
Product Dimensions (L x W x H)	76 x 28 x 80 cm
Recommended Age	36 months - 11 years
Assembly Required	Yes
Materials	Engineered Wood, Polypropylene (PP)
Color	Gray and White
Educational Objectives	Develop essential skills such as communication, problem-solving, and creativity through role-play and imagination.

## 8. SAFETY INFORMATION

- This product is intended for children aged 36 months and older.
- Adult supervision is recommended during play.
- Keep small parts away from children under 3 years to prevent choking hazards.
- Ensure the toy kitchen is placed on a stable, flat surface to prevent tipping.
- Do not allow children to climb on the toy kitchen.
- Regularly inspect the product for any damage or loose components. Discontinue use if damaged.

## 9. WARRANTY AND SUPPORT

### 9.1 Customer Service

RELAX4LIFE is committed to providing excellent customer service. Our team is available during working days to assist with any inquiries or issues you may have. We aim to respond to all questions within 24 hours.

### 9.2 Returns Policy

We adhere to Amazon's return policies regarding customer return requests. Depending on the reason for the return, we will provide professional and appropriate services.

### 9.3 Contact Information

For support, please refer to your purchase platform or contact RELAX4LIFE customer service directly through the provided channels on our official store page.

## Related Documents - TY327900-IT

	<p><b><a href="#">RELAX4LIFE Children's Wooden Kitchen Assembly Guide</a></b></p> <p>Step-by-step assembly instructions for the RELAX4LIFE Children's Wooden Kitchen. Includes a comprehensive list of hardware and parts, and detailed guidance for building the toy kitchen.</p>
	<p><b><a href="#">RELAX4LIFE Kids Ride On Excavator TQ10123 User Manual</a></b></p> <p>Comprehensive user manual for the RELAX4LIFE Kids Ride On Excavator (Model TQ10123). Includes assembly instructions, safety warnings, operation guide, maintenance, and battery information in multiple languages.</p>
	<p><b><a href="#">RELAX4LIFE Portable Steam Sauna User Manual and Instructions</a></b></p> <p>Comprehensive guide for the RELAX4LIFE portable steam sauna, covering operation, installation, safety instructions, and part list. Learn how to set up and use your home spa for relaxation.</p>
	<p><b><a href="#">RELAX4LIFE Climbing Ladder - Assembly Instructions and Safety Guide</a></b></p> <p>Detailed assembly instructions, parts list, safety warnings, and usage guidelines for the RELAX4LIFE Climbing Ladder. Designed for indoor use to develop children's coordination and balance.</p>
	<p><b><a href="#">RELAX4LIFE HZB-12-230V Ice Maker User Manual</a></b></p> <p>Comprehensive user manual for the RELAX4LIFE HZB-12-230V ice maker, covering setup, operation, safety instructions, troubleshooting, and maintenance for optimal performance.</p>
	<p><b><a href="#">RELAX4LIFE 4-in-1 Co-Sleeper Camp Cot User Manual and Assembly Guide</a></b></p> <p>Detailed user manual and assembly instructions for the RELAX4LIFE 4-in-1 Co-Sleeper Camp Cot. Includes safety warnings, parts list, step-by-step assembly for cot, changing table, storage, and toy bar, plus conversion guides for co-sleeping and free-standing modes.</p>