

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [ROIKETU](#) /
- › [ROIKETU Rolling Lawn Aerator User Manual](#)

ROIKETU YH-006

User Manual

ROIKETU ROLLING LAWN AERATOR

Model: YH-006

1. INTRODUCTION

The ROIKETU Rolling Lawn Aerator is a heavy-duty tool designed to improve the health and appearance of your lawn. By creating small holes in the soil, it allows essential oxygen, water, and nutrients to penetrate deep into the grass roots, promoting stronger growth and a vibrant green color. This manual provides detailed instructions for the assembly, operation, and maintenance of your new aerator.

Best Tools for Your Lawn

add water, air and nutrients to grass roots

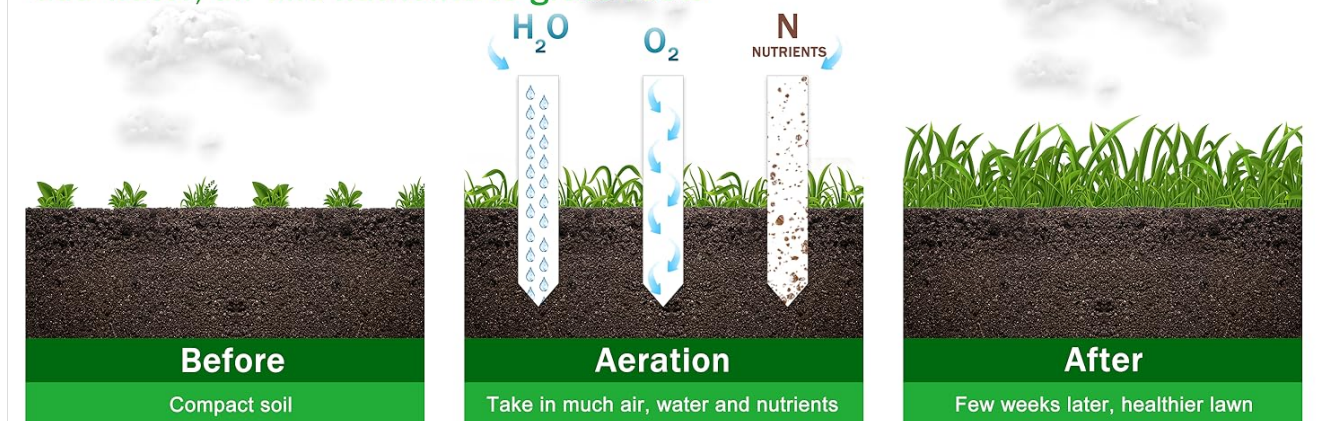 


Diagram illustrating the benefits of aeration: allowing water, air, and nutrients to reach grass roots in compact soil, leading to a healthier lawn.



Visual comparison of a lawn before and after using the aerator, demonstrating improved density and color.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before operating the ROIKETU Rolling Lawn Aerator. Failure to follow these instructions may result in injury or damage to the product.


- Use the aerator on a stable and level surface.
- Avoid direct contact with the sharp steel nails during assembly, operation, and cleaning.
- Wear appropriate personal protective equipment, including sturdy gloves and eye protection, to prevent injury from sharp components or flying debris.
- Keep children and pets away from the work area during use.
- Do not modify the aerator or use it for purposes other than its intended use.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please

contact customer support.

- Aerator Drum with pre-installed spikes
- Multi-section Handle (60-inch total length when assembled)
- T-shaped Handle Grip
- Assembly Hardware (bolts, nuts, washers)

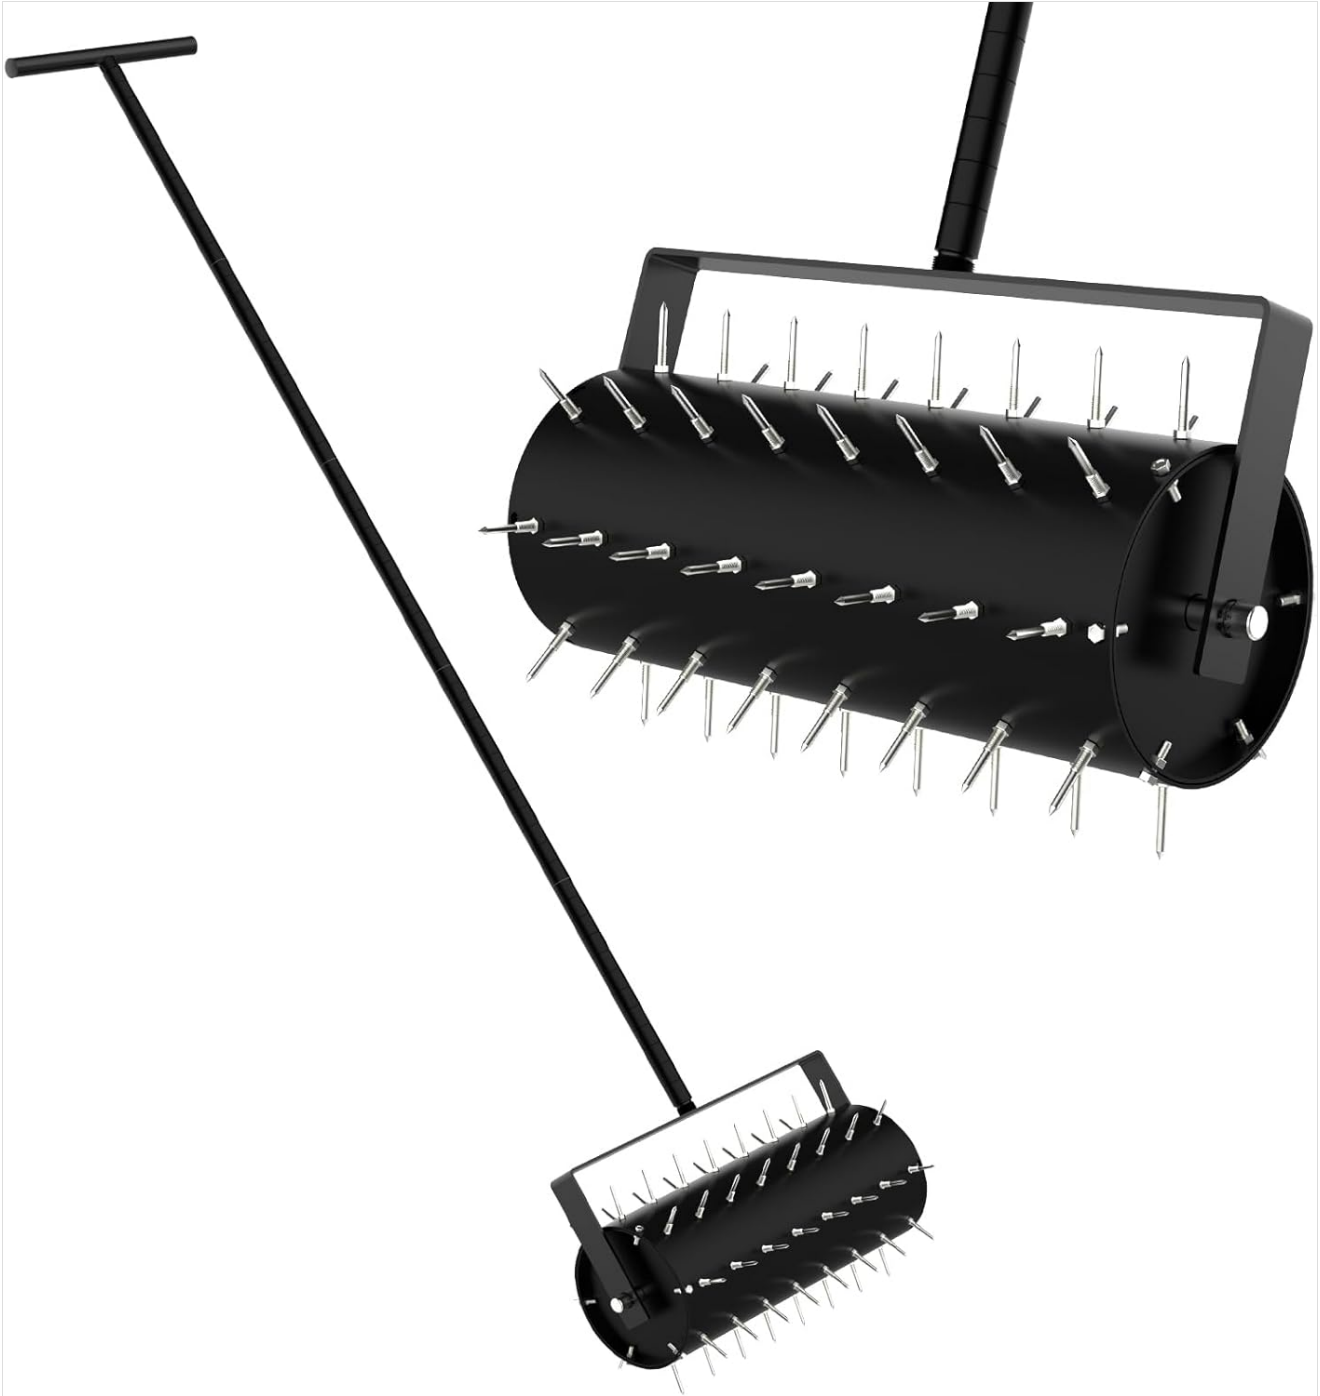

Overview of the ROIKETU Rolling Lawn Aerator components.

4. SETUP AND ASSEMBLY

Assembly of the ROIKETU Rolling Lawn Aerator requires careful attention to detail. While the process can be involved, following these steps will ensure proper setup.


4.1 Assembling the Handle and Drum

1. Connect the various sections of the handle together, ensuring they are securely fastened. The handle is

designed to be adjustable up to 60 inches (150cm) for ergonomic comfort.

2. Attach the T-shaped handle grip to the top section of the handle.
3. Securely attach the assembled handle to the aerator drum using the provided hardware. Ensure all bolts and nuts are tightened to prevent wobbling during operation.

Adjustable Length Handle

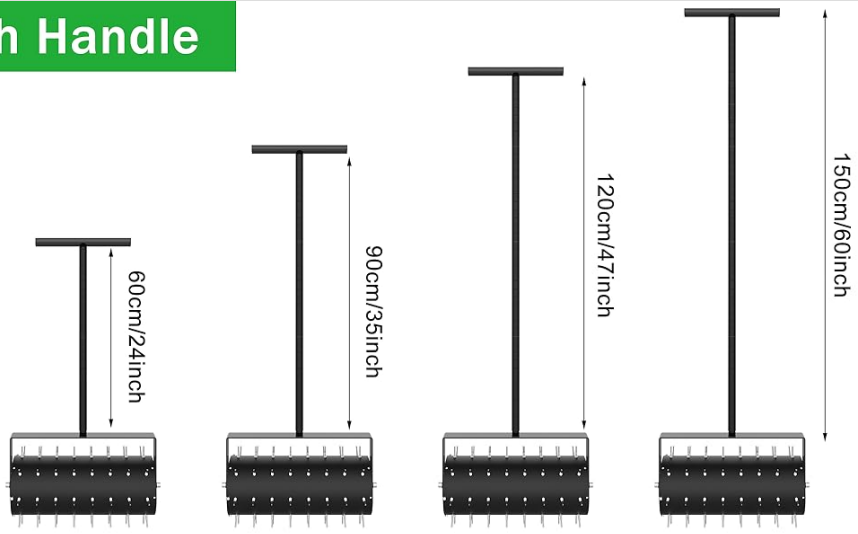

The handle can be adjusted to various lengths (24, 35, 47, 60 inches) for user comfort.

Bearing Design, More Labor-saving

There are two bearings inside the aerator, which saves you more effort when using the aerator.



The aerator features a bearing design for smoother and more labor-saving operation.

4.2 Adding Weight to the Drum

For optimal aeration results, especially on compact or dry soil, it is recommended to add weight to the aerator drum. The drum is designed to be filled with heavy objects.

- Open the cap on the side of the aerator drum.
- Fill the drum with materials such as sand, small stones, or soil. Using bags to contain loose materials is recommended for easier filling and emptying.
- Close the cap securely before use.

Different lawn types and different soil types require different weights. Additionally, the aeration depth you wish to achieve will also affect the required weight. Deeper aeration usually needs greater weight. For weights, you can choose items like rocks or sand



Suggestions for filling the aerator drum to increase weight, such as sand, rocks, or soil.

5. OPERATING INSTRUCTIONS

5.1 Preparing Your Lawn

For best results, aerate your lawn when the soil is moist but not waterlogged. This allows the spikes to penetrate easily without clogging. Early morning when there is dew, or after a light rain, are ideal times.

5.2 Aeration Process

1. Grip the T-shaped handle firmly with both hands.
2. Push and pull the aerator across your lawn in overlapping passes, similar to mowing. Ensure consistent pressure to allow the spikes to penetrate the soil effectively.
3. Focus on areas with heavy foot traffic or visible compaction.
4. The bearing design facilitates smoother rolling, reducing effort.

Your browser does not support the video tag.

Video demonstrating the smooth rolling action of the aerator, highlighting its bearing design and ease of use.



An individual operating the ROIKETU Rolling Lawn Aerator in a garden setting.

 
6. CARE AND MAINTENANCE

Proper maintenance will extend the life of your ROIKETU Rolling Lawn Aerator.

- **Cleaning:** After each use, remove any soil, grass, or debris from the spikes and drum. A stiff brush or hose can be used. Ensure the aerator is completely dry before storage to prevent rust.
- **Inspection:** Regularly inspect the steel nails for any signs of bending or damage. While made of sturdy galvanized steel, extreme force or impact can cause deformation. Check all bolts and connections for tightness and re-tighten if necessary.
- **Storage:** Store the aerator in a dry, covered area to protect it from the elements.

Heavy Duty Galvanized Iron Material

- ✓ Anti-rust
- ✓ Anti-corrosion
- ✓ Stable & Sturdy

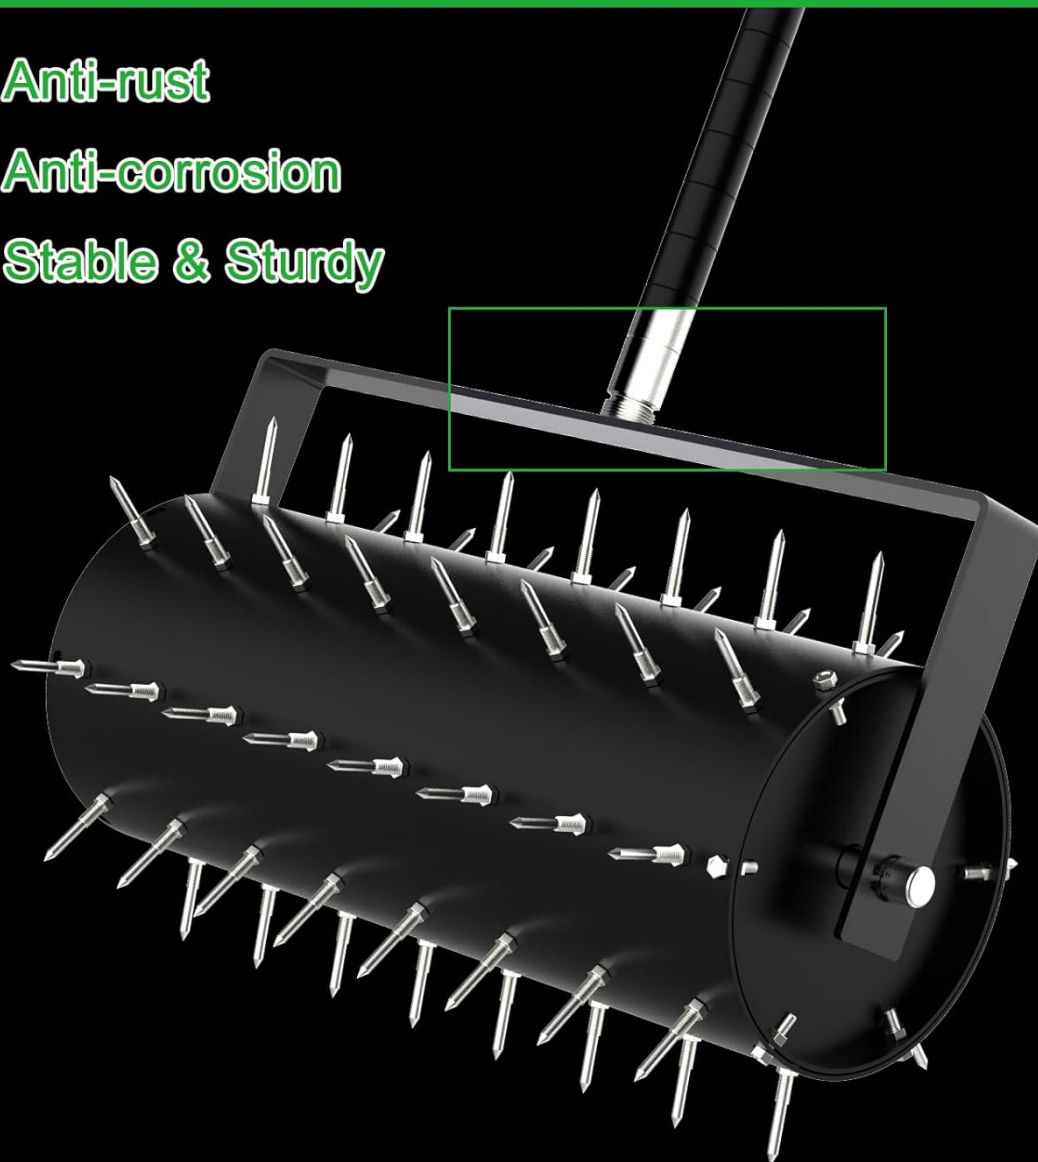

The aerator features sturdy galvanized steel nails, designed for durability and rust resistance.

7. TROUBLESHOOTING


| Problem | Possible Cause | Solution |
|--|--|--|
| Spikes not penetrating soil effectively. | Soil is too dry or compact; insufficient weight in drum. | Water the lawn thoroughly before aeration; add more weight (sand, stones) to the drum. |
| Aerator is difficult to push/pull. | Soil is too wet, causing mud buildup; drum bearings are stiff; drum is overfilled. | Allow soil to dry slightly; check for debris around bearings; adjust drum weight. |
| Handle feels flimsy or wobbly. | Loose connections or improper assembly. | Ensure all handle sections and the handle-to-drum connection are securely tightened. |

| Problem | Possible Cause | Solution |
|------------------------------|--|---|
| Missing pieces upon arrival. | Packaging damage or manufacturing error. | Contact ROIKETU customer support immediately for replacement parts. |

8. PRODUCT SPECIFICATIONS

| Feature | Specification |
|-----------------------------|--|
| Brand | ROIKETU |
| Model Number | YH-006 |
| Color | Black |
| Material | Alloy Steel |
| Item Dimensions (L x W x H) | 68 x 17 x 9 inches (assembled) |
| Aerator Drum Length | 17.5 inches (approx. 44 cm) |
| Aerator Drum Diameter | 6.7 inches (approx. 25 cm height including spikes) |
| Handle Length | Up to 60 inches (150 cm) |
| Item Weight (empty) | 18.81 pounds |
| Country of Origin | China |

Size Information

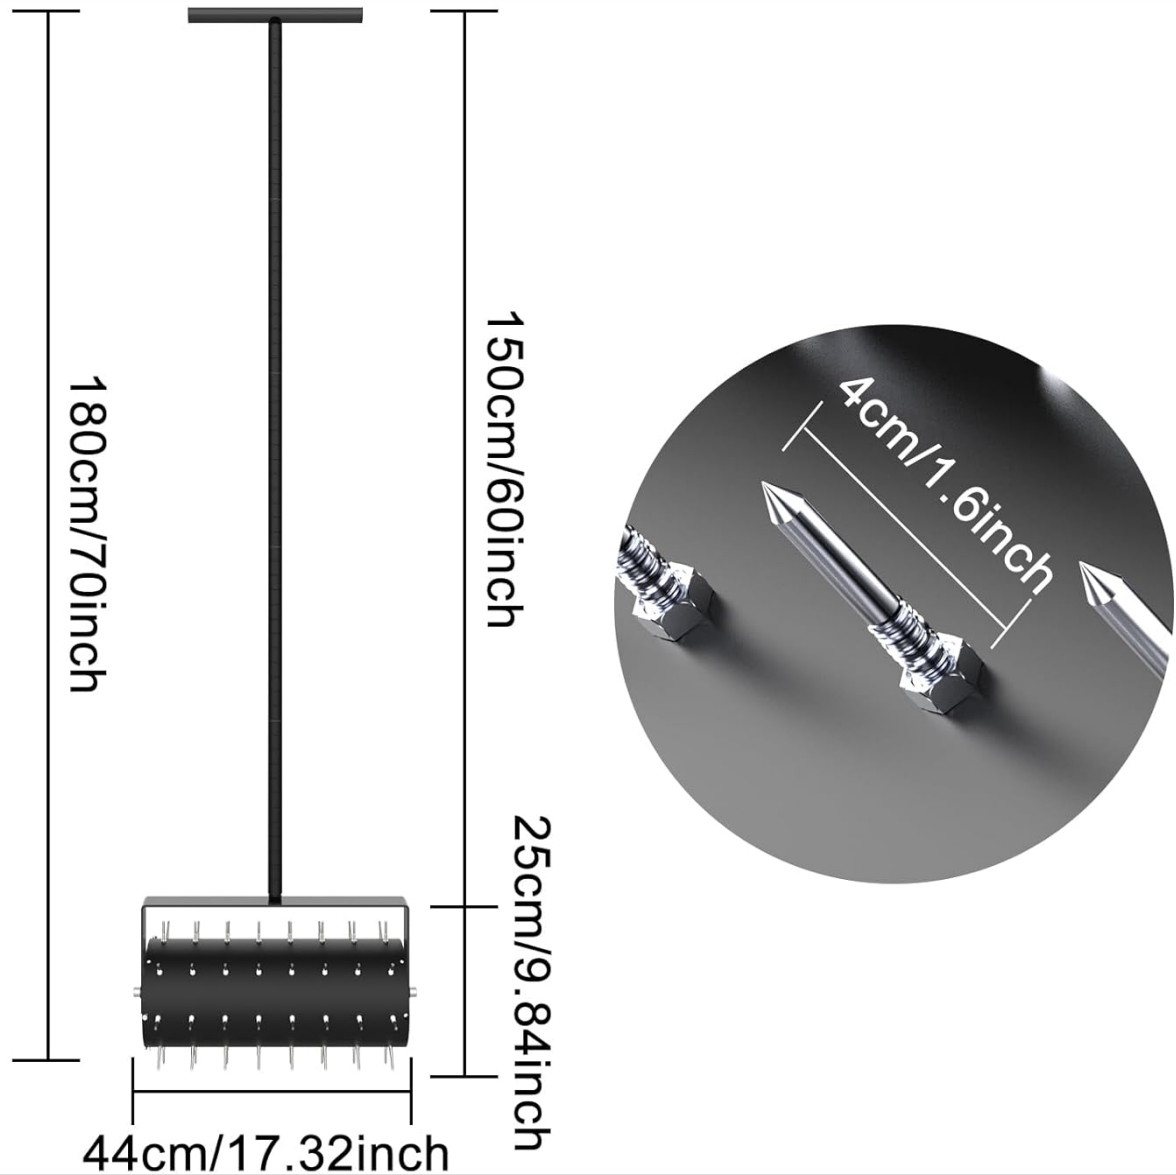

Detailed dimensions of the aerator, including handle length and drum size.

9. WARRANTY AND SUPPORT

ROIKETU is committed to providing high-quality products. For any questions, concerns, or issues regarding your Rolling Lawn Aerator, please contact ROIKETU customer support. Please have your model number (YH-006) and purchase information ready when contacting support.

For the most up-to-date warranty information and support options, please refer to the product listing on Amazon or visit the official ROIKETU store page.