

[manuals.plus](#) /› [crivit](#) /› [Silvercrest SSMA 67 A Portable Smoothie Blender User Manual](#)

crivit SSMA 67 A

Silvercrest SSMA 67 A Portable Smoothie Blender User Manual

Model: SSMA 67 A | Brand: crivit

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Silvercrest SSMA 67 A Portable Smoothie Blender. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always ensure the blender cup is correctly assembled and securely locked onto the base before operation.
- Keep hands and utensils out of the blender cup while blending to prevent injury.
- Do not operate the blender without ingredients or with an empty cup.
- Avoid blending hot liquids, as pressure buildup can cause the cup to burst.
- Keep the appliance out of reach of children.
- Only use the provided USB cable for charging.
- Do not immerse the motor base in water or other liquids.
- Unplug the blender from the power source when not in use, before cleaning, or if any malfunction occurs.

2. PRODUCT COMPONENTS

Your Silvercrest SSMA 67 A Portable Smoothie Blender includes the following parts:

- Rechargeable Motor Base
- High-Quality Borosilicate Glass Cup (approx. 370 ml capacity, 300 ml usable volume)
- Stainless Steel Cross Blade Assembly
- Lid with Drinking Spout
- USB Charging Cable (approx. 60 cm)



Figure 2.1: Overview of all included components.



Figure 2.2: Detailed view of the stainless steel cross blade.

3. SETUP AND FIRST USE

3.1 Unpacking and Initial Cleaning

1. Carefully remove all components from the packaging.
2. Wash the borosilicate glass cup, blade assembly, and lid with warm soapy water. Rinse thoroughly and dry.
3. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.

3.2 Charging the Battery

Before first use, fully charge the blender's internal battery.

- Connect the USB charging cable to the charging port on the motor base.
- Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
- The indicator light on the base will show the charging status. Refer to the indicator light section (if available in a physical manual) for specific details.
- Once fully charged, disconnect the USB cable.

4. OPERATING INSTRUCTIONS

4.1 Preparing Ingredients

- Cut fruits and vegetables into small pieces (approximately 1-2 cm) to ensure optimal blending.
- Add liquids (water, milk, yogurt) first, then softer ingredients, and finally harder ingredients or ice.
- Do not exceed the maximum fill line marked on the glass cup (approx. 300 ml usable volume).



Figure 4.1: Preparing ingredients in the blender cup.

4.2 Assembling and Blending

1. Place the blade assembly onto the open end of the glass cup and twist clockwise until securely tightened.
2. Invert the cup so the blade assembly is at the bottom.
3. Align the cup with the motor base and twist clockwise to lock it into place. The blender features a

safety switch, ensuring operation only when the cup is correctly positioned.

4. Press and hold the power button (pressure switch) to start blending. Release to stop. For optimal results, use short pulses.
5. Blend until desired consistency is achieved.



Figure 4.2: Operating the blender to create a smoothie.

4.3 Enjoying Your Drink

1. Once blending is complete, twist the cup counter-clockwise to unlock it from the motor base.
2. Remove the blade assembly by twisting counter-clockwise.
3. Attach the drinking lid to the cup. Your fresh drink is ready to enjoy on the go.



Figure 4.3: The blender cup with the drinking lid, ready for transport.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your blender.

5.1 Cleaning the Cup and Blade

- The borosilicate glass cup is dishwasher safe.
- For manual cleaning, wash the cup, blade assembly, and lid with warm, soapy water immediately after use. Use a brush to clean around the blades carefully.
- Rinse all parts thoroughly and allow them to air dry.

5.2 Cleaning the Motor Base

- Wipe the motor base with a soft, damp cloth.
- Never immerse the motor base in water or any other liquid.
- Ensure the motor base is completely dry before storing or next use.

6. TROUBLESHOOTING

If you encounter any issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Cup not correctly assembled or locked.	Ensure the cup is securely twisted onto the motor base.
	Battery is low or depleted.	Charge the blender using the USB cable.

Problem	Possible Cause	Solution
Ingredients are not blending smoothly.	Too little liquid or ingredients are too large.	Add more liquid or cut ingredients into smaller pieces.
	Overfilling the cup.	Do not exceed the maximum fill line.
Blender stops during operation.	Overheating or motor overload.	Turn off, unplug, and let cool for 15-20 minutes. Reduce ingredients or add more liquid.

7. SPECIFICATIONS

Feature	Specification
Brand	crivit
Model	SSMA 67 A
Power	Max. 67 W
Cup Capacity	Approx. 370 ml
Usable Volume	Approx. 300 ml
USB Cable Length	Approx. 60 cm
Materials	Housing: ABS, Blades: SUS 304 Stainless Steel, Cup: Borosilicate Glass
Dimensions (Housing)	Approx. Ø 7.3 x 11.6 cm
Dimensions (Cup)	Approx. Ø 7 x 13.6 cm
Dimensions (Lid)	Approx. Ø 7 x 2.1 cm
Weight (Housing)	Approx. 324 g
Weight (Cup)	Approx. 200 g
Weight (Lid)	Approx. 23 g
Special Features	Rechargeable battery, Dishwasher-safe cup, Safety switch

8. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official crivit website. Keep your proof of purchase for any warranty claims.

9. PRODUCT VIDEOS

No official product videos specifically for the Silvercrest SSMA 67 A model were found from the seller in the provided data. For general usage demonstrations of similar portable blenders, please refer to the manufacturer's website or other product resources.

