

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SparkPod](#) /

› [SparkPod 8" Square Rain Shower Head with Filter Capsule & 16" Adjustable Shower Arm Instruction Manual](#)

SparkPod B0CD2RGR7K

SparkPod 8" Square Rain Shower Head with Filter Capsule & 16" Adjustable Shower Arm

Instruction Manual

PRODUCT OVERVIEW

The SparkPod 8-inch Square Rain Shower Head with Filter Capsule and 16-inch Adjustable Shower Arm provides a rainfall shower experience while filtering your water. This system includes an 8-inch square shower head, a 16-inch adjustable shower arm, and a filter capsule designed to reduce chlorine, dirt, and odors from your shower water.



Image: The complete SparkPod shower system, featuring the 8-inch square rain shower head, the filter capsule, and the adjustable shower arm, all in a chrome finish.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- SparkPod 8-inch Square Rain Shower Head (Chrome)
- SparkPod Filter Capsule (with 1 cartridge installed)
- SparkPod 16-inch Adjustable Shower Arm (Chrome)
- Plumber's Tape
- Rubber Washers/Gaskets

SAFETY INFORMATION

- Ensure water supply is turned off before installation.

- Do not overtighten connections, as this may damage components.
- Use plumber's tape on all threaded connections to prevent leaks.
- Keep small parts away from children.
- The adjustable shower arm has a maximum load capacity of 3.5 lbs. Do not exceed this limit.

SETUP AND INSTALLATION

Follow these steps for proper installation of your SparkPod shower system. No special tools are typically required.

Step 1: Prepare the Shower Arm Connection

1. Turn off the main water supply to your shower.
2. Remove your existing shower head and arm, if applicable. Clean any debris from the wall pipe.
3. Apply plumber's tape clockwise around the threaded end of the existing wall pipe.



Image: The 16-inch adjustable shower arm, ready for installation onto the wall pipe.

Step 2: Install the Adjustable Shower Arm

4. Screw the 16-inch adjustable shower arm onto the wall pipe by hand until snug.
5. Adjust the angle and height of the shower arm to your desired position. Ensure the arm is securely tightened at its pivot points.

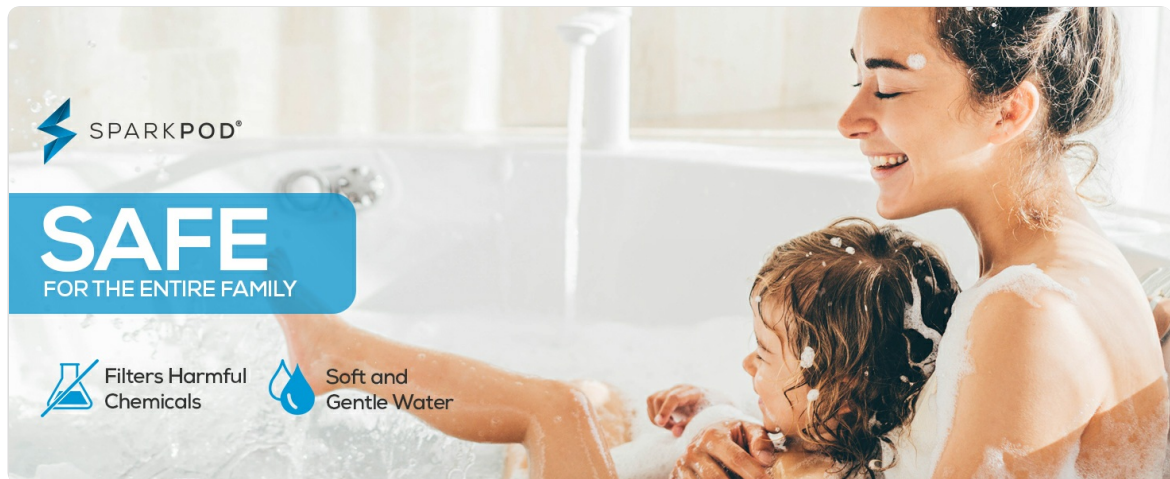


Image: A visual guide demonstrating the simple, tool-free installation process of the shower head and filter capsule onto the shower arm.

Step 3: Install the Filter Capsule

6. Apply plumber's tape to the threaded end of the adjustable shower arm where the filter capsule will connect.
7. Screw the SparkPod filter capsule onto the threaded end of the adjustable shower arm. Ensure a rubber washer is inside the filter capsule's connection point. Hand-tighten until secure.



Image: A cutaway view of the SparkPod filter capsule, showing its multi-stage filtration layers designed to purify shower water.

Step 4: Attach the Shower Head

8. Apply plumber's tape to the threaded outlet of the filter capsule.
9. Screw the SparkPod 8-inch square rain shower head onto the filter capsule. Ensure a rubber washer is inside the shower head's connection point. Hand-tighten until secure.



Image: The SparkPod 8-inch square rain shower head delivering a consistent, high-pressure water flow.

Step 5: Test for Leaks

10. Turn on the main water supply slowly and check all connections for leaks. If leaks occur, turn off water, re-tape the threads, and re-tighten the connection.

OPERATING INSTRUCTIONS

The SparkPod shower system operates like a standard shower. Once installed, simply turn on your shower faucet to begin water flow.

- **Water Flow:** The shower head is designed to provide a high-pressure rainfall experience.
- **Filter Operation:** The filter capsule continuously purifies the water as it passes through, reducing chlorine and other impurities.
- **Adjustable Arm:** The 16-inch shower arm can be adjusted to various angles and heights to suit user preference. Loosen the pivot points, adjust, and re-tighten to secure.

MAINTENANCE

Filter Cartridge Replacement

The filter cartridge inside the capsule should be replaced every 3-4 months, or after approximately 10,000 liters of use, depending on water quality and usage. Regular replacement ensures optimal filtration performance.

1. Turn off the main water supply to your shower.
2. Unscrew the shower head from the filter capsule.
3. Unscrew the filter capsule from the shower arm.
4. Carefully open the filter capsule housing. The old cartridge will be inside.
5. Remove the old cartridge and insert a new SparkPod replacement cartridge, ensuring it is seated correctly.
6. Reassemble the filter capsule, then reattach it to the shower arm and the shower head. Ensure all connections are hand-tightened with plumber's tape and rubber washers in place.
7. Turn on the water supply and check for leaks.



Image: A visual representation of the filter cartridge's lifespan, showing water discoloration over 1 to 4 months, and images of replacement cartridges.

Cleaning the Shower Head

The shower head features anti-clog nozzles. To clean, simply rub the rubber nozzles with your finger or a soft cloth to dislodge any mineral buildup. For more stubborn buildup, a mild descaling solution can be used, but avoid harsh chemicals.



Image: Close-up of the SparkPod shower head highlighting its anti-clog nozzles, designed to resist limescale buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Leaks at connections	Loose connections, insufficient plumber's tape, missing or damaged rubber washer.	Turn off water supply. Disassemble, reapply plumber's tape generously, ensure washers are in place, and re-tighten connections by hand. Do not overtighten.
Low water pressure	Clogged shower head nozzles, clogged filter cartridge, low household water pressure.	Clean shower head nozzles by rubbing them. Replace filter cartridge if it's old. Check household water pressure.
Water not filtering effectively	Expired filter cartridge.	Replace the filter cartridge with a new SparkPod replacement.
Adjustable arm slips or doesn't hold position	Pivot points not tightened sufficiently.	Ensure the adjustment knobs/screws on the shower arm are securely tightened after positioning.

SPECIFICATIONS

- **Brand:** SparkPod
- **Model:** B0CD2RGR7K
- **Shower Head Size:** 8 inches (Square)
- **Shower Arm Length:** 16 inches (Adjustable)
- **Material:** Metal, Plastic, Rubber (Chrome Finish)
- **Installation Type:** Wall Mounted
- **Water Flow Efficiency:** >2.0 GPM
- **Filter Life:** Approximately 3-4 months or 10,000 liters
- **Max Load (Shower Arm):** 3.5 lbs

SEE AND FEEL THE DIFFERENCE AFTER FIRST USE



Image: Detailed dimensions and material specifications for the SparkPod 8-inch square shower head, highlighting its durable construction.

Product Dimensions

SparkPod Adjustable Shower Arm Extension Brass



Image: Dimensional drawing of the SparkPod 16-inch adjustable shower arm, showing its height and top/bottom measurements, along with a warning about maximum load.

WARRANTY AND SUPPORT

SparkPod products are designed for quality and durability. For warranty information, product support, or to purchase replacement parts (such as filter cartridges), please visit the official SparkPod website or contact customer service.

Customer Support: Refer to your purchase documentation or the SparkPod official website for contact details.

Online Resources: [Visit the SparkPod Store on Amazon](#)