

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Pets Alive](#) /

› [Pets Alive My Magical Unicorn and Stable Instruction Manual](#)

### Pets Alive 9545

# Pets Alive My Magical Unicorn and Stable Instruction Manual

Model: 9545

## INTRODUCTION

---

Welcome to the magical world of Pets Alive! This instruction manual provides detailed guidance for setting up, operating, and maintaining your new Pets Alive My Magical Unicorn and Stable interactive robotic toy. Please read this manual thoroughly before use to ensure proper function and enjoyment.



**Image:** The Pets Alive My Magical Unicorn and Stable toy, shown in its retail packaging. The unicorn is pink with a light-colored mane and tail, a blue bow, and a silver horn. Accessories include a brush and a carrot.

## SAFETY INFORMATION

---

**WARNING: Choking hazard - Small pieces. Not for children under 3 years.**

Always supervise young children during play. Keep packaging materials away from children to prevent suffocation hazards. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the toy is not used for an extended period.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1 x Pets Alive My Magical Unicorn
- 1 x Stable Playset
- 1 x Hairbrush
- 1 x Carrot Accessory



**Image:** The pink Pets Alive My Magical Unicorn standing next to its pink hairbrush and orange carrot accessory. The unicorn has a long, light-colored mane and tail.

## SETUP

---

### 1. Battery Installation

The Pets Alive My Magical Unicorn requires **3 x AAA batteries** (not included).

1. Locate the battery compartment on the underside of the unicorn.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

### 2. Stable Assembly

The stable playset comes partially assembled. Gently unfold and connect any loose parts as indicated in the packaging. Ensure all connections are secure.



**Image:** The Pets Alive My Magical Unicorn toy displayed within its pink stable playset, still inside the product packaging. The stable features heart and star cutouts.

## OPERATING INSTRUCTIONS

---

Your Pets Alive My Magical Unicorn offers over 13 ways to interact and play. Here's how to engage with your unicorn:

- **Power On/Off:** Locate the power switch (usually on the unicorn's belly or side) and slide it to the "ON" position to activate the toy.
- **Real Unicorn Sounds:** Stroke the unicorn's nose to hear various magical unicorn sounds.
- **Feeding Interaction:** Bring the carrot accessory close to the unicorn's mouth. It will make eating sounds as if it's munching on the carrot.
- **Light-Up Horn:** The unicorn's horn will light up during various interactions, adding to its magical appeal.
- **Styling Mane and Tail:** Use the included hairbrush to brush and style the unicorn's soft mane and

tail. This encourages creative play.

- **Movement:** The unicorn may exhibit various movements, such as head nods or leg movements, during interactions.



**Image:** A child is shown interacting with the Pets Alive My Magical Unicorn, holding the orange carrot accessory near its mouth, demonstrating the feeding feature.



Image: The back of the Pets Alive My Magical Unicorn and Stable packaging, illustrating key interactive features such as brushing the mane, feeding carrots, the light-up horn, and making unicorn sounds.

## MAINTENANCE

- **Cleaning:** Wipe the unicorn and stable with a soft, damp cloth. Do not immerse in water. Avoid harsh chemicals or abrasive cleaners.
- **Hair Care:** Gently brush the unicorn's mane and tail to keep it tangle-free.
- **Storage:** When not in use, store the toy in a clean, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unicorn does not turn on or respond.	Batteries are dead, incorrectly installed, or power switch is off.	Check battery polarity, replace with new AAA batteries, and ensure the power switch is in the "ON" position.
Sounds are distorted or too quiet.	Low battery power.	Replace batteries with new ones.
Unicorn's horn does not light up.	Low battery power or internal malfunction.	Replace batteries. If the issue persists, contact customer support.

## SPECIFICATIONS

---

- **Model Number:** 9545
- **Product Dimensions:** 5.24 x 11.42 x 8.9 inches
- **Item Weight:** 1.19 pounds
- **Batteries Required:** 3 x AAA (not included)
- **Recommended Age:** 36 months - 10 years
- **Manufacturer:** ZURU

## WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official ZURU website. Keep your purchase receipt as proof of purchase.

**Manufacturer:** ZURU

**Website:** [www.zuru.com](http://www.zuru.com)