

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [VisionAir](#) /

› Visionair 9 In. 750/1500W 5120 Btu 160 Sq-Ft. Ceramic Heater User Manual

## VisionAir d050a7dd-bc24-4f34-aa49-6d863332dfee

# Visionair 9 In. Ceramic Heater User Manual

Model: d050a7dd-bc24-4f34-aa49-6d863332dfee

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable

vapors or liquids are used or stored.

- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an audible alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may be causing high temperatures. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING.**
- This heater is for use on 120 Volts. The cord has a plug as shown in Figure A. An adapter as shown in C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

## PRODUCT OVERVIEW

---

The Visionair 9 In. Ceramic Heater is a compact and efficient heating solution designed for small to medium rooms, covering up to 160 sq. ft. It features two heat settings (750W and 1500W), a fan-only setting, an adjustable thermostat, and built-in safety features like tip-over switch and overheat protection.



Front view of the Visionair 9 In. Ceramic Heater, showcasing its compact design and front grille.

# PERFECT FOR A **SMALL** TO **MEDIUM** **ROOM**

*UP TO 160 SQ. FT.*



The Visionair 9 In. Ceramic Heater positioned on a desk, illustrating its suitability for small to medium rooms up to 160 sq. ft.



Rear view of the Visionair 9 In. Ceramic Heater, showing the air intake and power cord.

# 9" CERAMIC HEATER

750 LOW WATTAGE | 1500 HIGH WATTAGE

*TVAHC9*



**UNIT DIMENSIONS: 6.25" W x 9.5" H x 5.25" D**



**2 HEAT SETTINGS**



**FAN-ONLY SETTING**



**ADJUSTABLE THERMOSTAT**



**TIP OVER SWITCH & OVERHEAT PROTECTION**

Diagram highlighting key features of the Visionair 9 In. Ceramic Heater: 750W/1500W settings, fan-only, adjustable thermostat, tip-over switch, and overheat protection. Unit dimensions are 6.25"W x 9.5"H x 5.25"D.

- Easy to use mechanical controls
- Durable safety grill
- Cool touch handle
- Quiet operation
- 72" power cord



List of benefits for the Visionair 9 In. Ceramic Heater: easy-to-use mechanical controls, durable safety grill, cool touch handle, quiet operation, and a 72" power cord.

# CHOOSING THE RIGHT HEATER

WIRE ELEMENT	CERAMIC
Air is heated by wire elements and dispersed with a fan.	Air is heated by ceramic elements and dispersed with a powerful fan.
RADIANT	CONVECTION
Air is heated by quartz elements and radiates forward.	Air is heated as it passes over fins that are heated by oil.

Comparison chart explaining different heater types: Wire Element, Ceramic, Radiant, and Convection. This heater is Ceramic, meaning air is heated by ceramic elements and dispersed with a powerful fan.

## SETUP

Before initial use, ensure the heater is placed on a firm, level surface. Avoid placing it on soft surfaces like carpets or rugs that might block air intake or exhaust openings. Ensure there is at least 3 feet (0.9 m) clearance from any combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains.

Plug the heater directly into a 120V wall outlet. Do not use extension cords or power strips.

## OPERATING INSTRUCTIONS

The Visionair Ceramic Heater features two mechanical control knobs on the top of the unit.

1. **Power/Mode Control:** This knob controls the power and operating mode.
  - Turn the knob to the **"OFF"** position to turn the heater off.
  - Select **"FAN ONLY"** for air circulation without heat.

- Select "**LOW HEAT**" (750W) for a lower heat output.
- Select "**HIGH HEAT**" (1500W) for maximum heat output.

2. **Thermostat Control:** This knob allows you to adjust the desired room temperature.

- Turn the thermostat knob clockwise to increase the desired temperature setting.
- Turn the thermostat knob counter-clockwise to decrease the desired temperature setting.
- The heater will cycle on and off to maintain the set temperature.

For continuous heat, set the thermostat to its maximum setting. The heater will then operate continuously on the selected heat mode (LOW or HIGH) until manually turned off or the tip-over/overheat protection is activated.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents. Do not immerse the heater in water.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles. This should be done regularly, especially if the heater is used frequently.
- **Storage:** If storing the heater for an extended period, unplug it and allow it to cool completely. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

*Note: There are no user-serviceable parts inside the heater. Do not attempt to open or repair the unit yourself.*

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely. Power outlet is not functioning. Tip-over switch activated. Overheat protection activated.	Ensure the power cord is firmly plugged into a 120V wall outlet. Test the outlet with another appliance. Ensure the heater is on a stable, flat surface. If it was tipped, stand it upright. Unplug the heater, allow it to cool for 10-15 minutes, then plug it back in. Ensure air vents are not blocked.
Heater produces no heat in heat mode.	Thermostat set too low. Heater is in "FAN ONLY" mode.	Increase the thermostat setting. Ensure the mode control knob is set to "LOW HEAT" or "HIGH HEAT".
Heater cycles on and off frequently.	Room temperature has reached the thermostat setting. Overheat protection is being triggered.	This is normal operation. The heater is maintaining the set temperature. Check for blocked air vents or insufficient clearance around the heater. Unplug and allow to cool.

Problem	Possible Cause	Solution
Heater emits a burning smell.	New unit smell (temporary). Dust accumulation on heating elements.	This is common for new heaters and should dissipate after a few hours of use. Ensure good ventilation. Unplug the heater and allow it to cool. Clean the grilles as described in the Maintenance section.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	VisionAir
Model Number	d050a7dd-bc24-4f34-aa49-6d863332dfee
Type	Ceramic Heater
Heat Output	750W (Low), 1500W (High)
BTU Output	5120 British Thermal Units (at 1500W)
Coverage Area	Up to 160 Sq. Ft.
Voltage	120 Volts
Special Features	Overheat Protection, Tip-Over Protection, Adjustable Thermostat, Fan-Only Setting, Quiet Operation
Color	Black
Form Factor	Compact, Tabletop Mount
Item Weight	2 pounds
Unit Dimensions (approx.)	6.25"W x 9.5"H x 5.25"D
Cord Length	72 inches
UPC	850049524049

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact VisionAir customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

While specific warranty details are not provided in this manual, most VisionAir products come with a limited manufacturer's warranty covering defects in materials and workmanship for a specified period from the date of purchase.

For the most up-to-date support information, please visit the official VisionAir website or refer to the contact details

provided with your product packaging.



---

© 2023 VisionAir. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.