

enya NEXG2

Enya NEXG 2 Acoustic Guitar - User Manual

Model: NEXG2

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Enya NEXG 2 Acoustic Guitar. Please read this manual thoroughly before using your instrument to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The Enya NEXG 2 is an advanced smart audio guitar designed to integrate traditional acoustic guitar playability with modern digital features. It includes a powerful speaker system, a color touch screen, a dedicated mobile application, a wireless microphone, and a footswitch pedal for enhanced musical expression.



Figure 1: Enya NEXG 2 Acoustic Guitar with its complete set of accessories, including the guitar, carrying case, footswitch, wireless microphone, charging cable, and in-ear monitors.

Key Features



The New Speaker

The speaker is thoroughly upgraded to deliver better sonic performance: louder volume, wider dynamic range, and prominent frequency response.



Figure 2: The thoroughly upgraded speaker system of the NEXG 2, designed to deliver better sonic performance with louder volume, wider dynamic range, and prominent frequency response.



Your Own Sound

We've developed an App for you to further customize your own sound. The Profiling feature allows you to copy the tone from any other acoustic guitar onto NEXG 2. The versatility is incredible.



Figure 3: The dedicated mobile application for the NEXG 2, featuring a "Profiling" function that allows users to copy and customize the tone from any other acoustic guitar.



NEXG 2

Color Touch Screen

A color touch screen makes navigating through the presets and functionalities intuitive. All the presets are expandable through ENYA MUSIC App.



Figure 4: The intuitive color touch screen on the NEXG 2, enabling easy navigation through presets and functionalities. All presets are expandable via the ENYA MUSIC App.



Foot - Switch Pedal

A footswitch pedal is included to control the built-in Looper and Drum Machine, which allow you to document your musical ideas effortlessly, being able to create and perform all by yourself. we provide the tool, the sky is your limit.



Figure 5: The included footswitch pedal for the NEXG 2, designed to control the built-in Looper and Drum Machine, facilitating effortless musical creation and performance.



Sing It Out

NEXG 2 comes with a wireless mic. Combined with the onboard speaker, you've basically got a Karaoke machine. The Vocal Removal is built in for sing-alongs. Sing it out, anytime, anywhere.



Figure 6: The wireless microphone included with the NEXG 2, which, combined with the onboard speaker and Vocal Removal feature, transforms the guitar into a portable karaoke machine.



Smart Audio Guitar 2.0

ALL-IN-ONE: NEXG 2 combines the versatility of a traditional acoustic guitar with the power of advanced audio technology. It's a guitar, an effects processor, a loop station, and so much more, all packed into one stylish package.



Figure 7: An exploded view illustrating the components of the NEXG 2 Smart Audio Guitar 2.0, highlighting its integration of traditional acoustic guitar versatility with advanced audio technology, including an effects processor and loop station.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the guitar and accessories for any signs of damage. Retain the original packaging for future transport or storage.





Figure 8: The packaging box for the Enya NEXG 2 guitar, indicating safe and secure transport.

2. Charging the Guitar

Before first use, ensure the guitar is fully charged. Connect the provided USB-C cable to the guitar's charging port and to a compatible USB power adapter (not included). The charging indicator on the guitar's display will show charging status.

3. Connecting Accessories

- **Footswitch Pedal:** Connect the footswitch pedal to the guitar using the appropriate cable. Ensure a secure connection for proper functionality of the Looper and Drum Machine.
- **Wireless Microphone:** Power on the wireless microphone. It should automatically pair with the guitar. Refer to the microphone's specific instructions for pairing if issues arise.

4. ENYA MUSIC App Installation

Download the "ENYA MUSIC App" from your device's app store (iOS/Android). This app is essential for customizing sounds, expanding presets, and utilizing the unique "Profiling" feature. Follow the in-app instructions for pairing your NEXG 2 guitar via Bluetooth.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the power button on the guitar's control panel to turn the instrument on or off. The color touch screen will illuminate upon power-on.

2. Using the Color Touch Screen

The touch screen provides access to various functions:

- **Navigation:** Swipe and tap to navigate through menus and settings.
- **Presets:** Select from a variety of pre-loaded sound presets.
- **Looper:** Activate the built-in looper to record and layer musical phrases.
- **Drum Machine:** Access the drum machine for rhythm accompaniment.
- **Settings:** Adjust system settings, volume, and other parameters.

3. Utilizing the ENYA MUSIC App

Once paired, the app offers advanced control:

- **Sound Profiling:** Use the app's profiling feature to capture and apply the tonal characteristics of other acoustic guitars to your NEXG 2.
- **Preset Expansion:** Download and manage additional sound presets.
- **Effects Customization:** Fine-tune effects parameters beyond the guitar's onboard controls.

4. Footswitch Operation

The footswitch pedal allows hands-free control of the Looper and Drum Machine, enabling seamless performance and creative workflow. Refer to the footswitch's specific manual for detailed button assignments and functions.

5. Wireless Microphone Usage

The wireless microphone can be used for vocals or instrument amplification. Activate the "Vocal Removal" feature on the guitar or via the app to turn any song into a karaoke track, allowing you to sing along with

your playing.

MAINTENANCE

1. Cleaning

Wipe the guitar body and neck with a soft, dry, lint-free cloth after each use. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.

2. Storage

Store the guitar in its provided case when not in use to protect it from dust, humidity fluctuations, and physical damage. Avoid exposing the guitar to extreme temperatures or direct sunlight.

3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to approximately 50-70% and recharge every few months.

4. String Replacement

Replace strings regularly to maintain optimal tone and playability. Use light gauge acoustic guitar strings. Refer to standard guitar string replacement procedures for detailed steps.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker	Low battery; Volume too low; Speaker muted; Cable issue.	Charge guitar; Increase volume; Check mute settings on screen/app; Ensure cables are securely connected.
App not connecting via Bluetooth	Bluetooth off on device/guitar; Guitar not in pairing mode; App permissions.	Ensure Bluetooth is enabled on both devices; Restart guitar and app; Check app permissions in device settings.
Footswitch not responding	Not connected; Low battery in footswitch (if applicable); Incorrect settings.	Ensure footswitch is properly connected; Check footswitch battery; Verify footswitch settings on guitar/app.
Microphone not working	Microphone off; Not paired; Low battery.	Turn on microphone; Re-pair microphone; Charge microphone.

If problems persist after attempting these solutions, please contact Enya customer support.

SPECIFICATIONS

Feature	Detail
Model	NEXG2
Brand	Enya
Color	NEXG2-White

Feature	Detail
Size	38 inches
Number of Strings	6
Hand Orientation	Right
Item Weight	8.22 Kilograms
Product Dimensions	108 x 32 x 16 cm
Manufacturer	Enya musical
ASIN	B0CD3BCCZ6

WARRANTY INFORMATION

Enya products are manufactured to high quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Enya website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or general inquiries, please contact Enya customer support through their official channels:

- **Website (China):** www.enyamusical.com
- **Website (USA):** www.enya-music.com
- Refer to the product packaging or official website for additional contact methods such as email or phone support.