

TANLANIN TE-012GR

Instruction Manual

TANLANIN VINTAGE BLUETOOTH VINYL RECORD PLAYER

Model: TE-012GR

1. Introduction

Thank you for purchasing the TANLANIN Vintage Bluetooth Vinyl Record Player. This portable suitcase-style record player is designed to provide a versatile audio experience, allowing you to enjoy your vinyl collection, stream music wirelessly via Bluetooth, record vinyl to USB/SD, and connect to various audio devices. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.

2. Important Safety Information

- Read all instructions before operating the unit.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. Package Contents

Ensure all items are present in the package:

- TANLANIN Vintage Bluetooth Vinyl Record Player
- Power Unit
- 45 RPM Adapter
- Spare Needle
- Slipmat
- Users Manual (this document)

4. Product Overview

Familiarize yourself with the components of your record player.



Figure 4.1: Overall view of the TANLANIN Vintage Bluetooth Vinyl Record Player.



 **Bluetooth Connectivity**

 **3-Speed Turntable**

 **Built-IN Stereo Speakers**

 **Vintage Briefcase Lock**



RCA Output

Hook up external powered speakers for louder sound



Aux Input

Connect with other audio devices via 3.5mm aux cable



Headphone Jack

Enjoy your nostalgic vinyl time without disturbing



Reference object



Figure 4.2: Rear and side panel connections including RCA output, Aux input, and Headphone Jack.

Recording LP to MP3/WAV

M Key to Recording & Saving, Super easy vinyl digital converting



Figure 4.3: Control panel with USB port, TF card slot, and recording buttons.

Your browser does not support the video tag.

Video 4.1: A demonstration of the record player's features, including power, speed selection, needle operation, built-in speakers, headphone jack, RCA output, USB/TF card slots, and automatic stop function.

5. Setup

1. **Unpacking:** Carefully remove the record player from its packaging. Retain all packaging materials for future transport or storage.
2. **Placement:** Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. **Power Connection:** Connect the provided power unit to the DC IN port on the back of the record player and then plug it into a wall outlet.
4. **Remove Protective Cover:** Remove the white protective cover from the stylus (needle) before playing

any records.

5. **Platter Protection:** Remove the white foam pad from the turntable platter. Place the included slipmat on the platter.

6. Operating Instructions

6.1 Playing a Vinyl Record

1. Open the record player lid.
2. Place a vinyl record on the turntable platter. If playing a 45 RPM single, place the 45 RPM adapter on the center spindle.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch.
4. Turn the Power Switch/Volume Knob clockwise to power on the unit.
5. Release the tone arm clip.
6. Gently lift the tone arm using the cue lever and position the stylus over the desired track of the record.
7. Lower the tone arm slowly using the cue lever. The record will begin to play.
8. Adjust the volume to your desired level using the Power Switch/Volume Knob.
9. At the end of the record, the turntable will automatically stop if the Auto-Stop switch is in the ON position. Lift the tone arm and return it to the tone arm rest.



Figure 6.1: Playing a vinyl record on the turntable.

6.2 Bluetooth Playback

1. Turn on the record player.
2. Press the 'M' button on the control panel to switch to Bluetooth mode. The LED display will show 'BT'.
3. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for 'TE-012'.
4. Select 'TE-012' to pair. Once paired, you will hear a confirmation sound.
5. Start playing music from your device. The audio will stream through the record player's built-in speakers.

Bluetooth

Streaming Music Wirelessly



Figure 6.2: Wireless music playback via Bluetooth connection.

6.3 USB/SD Recording

1. Insert a USB drive or SD card into the corresponding slot on the control panel.
2. Play a vinyl record as described in Section 6.1.
3. Long press the 'M' button to start recording. The LED display will show 'REC' and a timer.
4. To stop recording, long press the 'M' button again. The recording will be saved as an MP3 or WAV file on your USB drive or SD card.

6.4 AUX Input

Connect external audio devices (e.g., MP3 player, CD player) to the AUX IN port using a 3.5mm audio cable. The audio from the external device will play through the record player's speakers.

6.5 RCA Output

To connect the record player to external powered speakers or an amplifier, use an RCA cable (not included) to connect the RCA OUT jacks on the back of the unit to the audio input of your external audio system.

6.6 Headphone Jack

For private listening, plug headphones into the 3.5mm headphone jack on the front of the unit. The built-in

speakers will be muted automatically.

7. Maintenance

- **Cleaning the Stylus:** Use a soft brush to gently clean the stylus from back to front. Do not use excessive force.
- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Record Care:** Keep your records clean and free of dust to ensure optimal sound quality and prolong the life of your stylus.
- **Stylus Replacement:** The stylus is a consumable part and should be replaced after approximately 300-500 hours of use. Refer to the manufacturer's guidelines for replacement stylus models.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure power adapter is securely connected and try a different power outlet.
No sound from speakers	Volume too low; headphones connected; incorrect mode selected.	Increase volume; disconnect headphones; ensure correct mode (Phono, BT, AUX) is selected.
Record skipping	Record is dirty or scratched; unit is not on a stable surface; stylus is worn.	Clean record; place unit on a stable, level surface; replace stylus.
Bluetooth not pairing	Record player not in Bluetooth mode; device too far; already paired to another device.	Ensure record player is in BT mode; move device closer; disconnect from other devices.

9. Specifications

Feature	Detail
Brand	TANLANIN
Model Name	TE-012GR
Maximum Rotational Speed	78 RPM

Feature	Detail
Special Feature	Adjustable Speed, Digital Recorder, Headphone Jack Output, LED Display, USB/SD Recording
Material	Engineered Wood
Item Weight	5.2 Pounds
Item Dimensions L x W x H	14"L x 10"W x 5"H
Connectivity Technology	Bluetooth, AUX, USB, SD Card, RCA, Headphone Jack
Power Source	Corded Electric
Voltage	5 Volts
Power Consumption	5 Watts
Signal-to-Noise Ratio	75 dB

10. Warranty and Support

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact TANLANIN customer support. If you encounter any issues or have questions regarding your record player, please reach out to our customer service team for assistance.