

[Manuals.plus](#) /

> [Delixike](#) /

> Delixike Whirlpool Refrigerator Freezer LED Light Bulb W11125625 W10820003 W11216993 4396822 Replacement Instruction Manual

Delixike W11125625

Delixike LED Light Bulb Replacement for Whirlpool Refrigerators and Freezers

Models: W11125625, W10820003, W11216993, 4396822

1. INTRODUCTION

This manual provides instructions for the safe and proper installation, operation, and maintenance of your Delixike LED light bulb replacement for compatible Whirlpool refrigerators and freezers. Please read all instructions carefully before proceeding.

2. SAFETY INFORMATION

- **Disconnect Power:** Always unplug the refrigerator or turn off the power at the circuit breaker before attempting any installation or maintenance. Failure to do so can result in electric shock or injury.
- **Handle with Care:** LED bulbs can be fragile. Handle the bulb carefully to avoid damage.
- **Proper Disposal:** Dispose of old bulbs according to local regulations.
- **Indoor Use Only:** This bulb is designed for indoor use within refrigerators and freezers.

3. COMPATIBILITY

This Delixike LED light bulb is a replacement for the following Whirlpool part numbers:

- W11125625
- W10820003
- W11216993
- 4396822
- AP3778053
- 1059249
- 2260802
- AH971228

- EA971228
- PS971228
- W10311527
- AP6329125
- PS12349398

Always verify the part number of your existing bulb to ensure proper fit and function.

4. PRODUCT SPECIFICATIONS

Specification	Value
Brand	Delixike
Light Type	LED
Power	120Vac, 60Hz, 83mA
Wattage	3.6 Watts
Incandescent Equivalent Wattage	25 Watts
Bulb Base	E26
Light Color	White
Brightness	288 Lumens
Material Type	Plastic
Special Feature	Dimmable (as per refrigerator's internal dimming function)

5. INSTALLATION (SETUP)

Follow these steps to replace your refrigerator or freezer light bulb:

1. **Disconnect Power:** Unplug the refrigerator from the wall outlet or turn off the power at the household circuit breaker.
2. **Locate the Light Cover:** Identify the transparent cover protecting the light bulb. This cover may be snapped in place or secured with screws.
3. **Remove the Transparent Cover:** Carefully remove the transparent cover. This might involve gently prying it off with a flat-head screwdriver or unscrewing it.
4. **Unscrew the Old Bulb:** Grasp the old bulb and turn it counter-clockwise to unscrew it from the socket.
5. **Install the New Bulb:** Take the new Delixike LED bulb and screw it clockwise into the socket until it is snug. Do not overtighten.
6. **Replace the Cover:** Reattach the transparent cover securely.
7. **Restore Power:** Plug the refrigerator back into the wall outlet or turn the power back on at the circuit breaker.

SIMPLE AND AFFORDABLE CONVENIENT AND FAST



1. REMOVE THE TRANSPARENT COVER



2. UNSCREW THE BULB



3. REPLACE THE BULB WITH A NEW ONE



4. UNSCREW THE NEW BULB

Image: Step-by-step guide for replacing the refrigerator light bulb.



Image: Delixike LED light bulb and its application in a refrigerator.

6. OPERATING INSTRUCTIONS

The Delixike LED light bulb operates automatically with your refrigerator or freezer door. When the door is opened, the light will illuminate, and when closed, it will turn off. No manual controls are required for the bulb itself.

proper contact.

- **Refrigerator Light Switch:** Some refrigerators have a door switch that activates the light. Ensure this switch is functioning correctly (it should click when pressed and released).
 - **Socket Issue:** If the above steps do not resolve the issue, there might be a problem with the light socket or the refrigerator's wiring. In this case, professional service may be required.
-

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Delixike customer service through the retailer where the product was purchased. Keep your purchase receipt for warranty claims.