



[Manuals.plus](#) /

› [MYKESONIC](#) /

› MYKESONIC Fully Automatic Record Player User Manual

## MYKESONIC YY1632

# MYKESONIC Fully Automatic Record Player User Manual

Model: YY1632

## 1. INTRODUCTION

Welcome to the MYKESONIC Fully Automatic Record Player. This turntable is designed to provide a high-fidelity audio experience with the convenience of modern technology. Featuring a high-precision magnetic AT-3600L cartridge, built-in stereo speakers, and versatile connectivity options including Bluetooth in/out, Aux-in, and RCA output, it offers a seamless and enjoyable listening journey for all your vinyl records. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Figure 1: MYKESONIC Fully Automatic Record Player with dust cover open, showcasing the turntable and controls.

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x Bluetooth Record Player with Magnetic AT-3600L Cartridge
- 1 x External AC Adaptor
- 1 x User Manual (this document)

## 3. KEY FEATURES

### 3.1 High-Precision Magnetic AT-3600L Cartridge

The turntable is equipped with a high-precision AT-3600L cartridge, engineered for accurate tracking and superior sound reproduction. This cartridge precisely interprets vinyl grooves, delivering authentic, high-fidelity audio while minimizing needle wear to prolong the lifespan of your cherished vinyl collection.



Figure 2: AT-3600L Cartridge

### 3.2 Fully Automatic Operation & Multi-Speed Support

Enjoy hassle-free playback with the fully automatic design. Simply press start, and the belt-driven system will automatically place the needle, spin the record, and stop when finished. It supports two speeds (33 1/3 and 45 RPM) and is compatible with 7", 10", and 12" vinyl records.



Figure 3: Automatic features and speed/size compatibility.

### 3.3 Versatile Connectivity

Beyond its built-in stereo speakers, the turntable offers multiple connection possibilities. It features an AUX-in headphone port for private listening, RCA output for connecting to external amplifiers or speaker systems, and Bluetooth functionality for both receiving music from your devices (Bluetooth In) and streaming vinyl playback to external Bluetooth speakers (Bluetooth Out).



Figure 4: Connectivity options.

### 3.4 Built-in Hi-Fi Stereo Speakers

The integrated high-fidelity stereo speakers, complemented by a passive radiator, deliver rich, balanced sound with excellent clarity, depth, and detail, creating an immersive soundscape directly from the unit.



Figure 5: Internal speaker design.

## 4. SETUP GUIDE

---

### 1. Unpacking:

Carefully remove the record player and all accessories from the packaging. Retain the packaging for future transport or storage.

### 2. Placement:

Place the record player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations. Ensure adequate ventilation around the unit.

### 3. Power Connection:

Connect the external AC adaptor to the DC IN port on the back of the record player, then plug the adaptor into a standard wall outlet.

### 4. Dust Cover:

The clear dust cover can be opened or closed to protect the turntable from dust when not in use. Ensure it is fully open or removed during playback to prevent interference.

### 5. Initial Cartridge Setup (Pre-installed):

The AT-3600L cartridge is pre-installed and balanced. No complex setup is required for the tonearm or cartridge. Remove any protective stylus guard before first use.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Playing a Vinyl Record

#### 1. Power On:

Turn the Volume knob clockwise to power on the unit. The LED indicator around the knob will illuminate.

#### 2. Select Speed:

Adjust the speed switch (located near the tonearm) to match your record's speed (33 1/3 RPM or 45 RPM). For 45 RPM records, ensure the 45 RPM adapter is placed on the spindle if needed.

#### 3. Place Record:

Carefully place your vinyl record on the platter. The turntable supports 7", 10", and 12" records.

#### 4. Start Playback (Fully Automatic):

Press the **START/STOP** button. The tonearm will automatically lift, move to the beginning of the record, and gently lower onto the first groove. The platter will begin to spin.

#### 5. Adjust Volume:

Rotate the **VOLUME** knob to adjust the playback volume through the built-in speakers.

#### 6. End Playback:

When the record finishes, the tonearm will automatically lift, return to its rest, and the platter will stop spinning. To stop playback manually at any time, press the **START/STOP** button again.

## 5.2 Bluetooth Functionality

The MYKESONIC turntable supports both Bluetooth In (receiving audio from a device) and Bluetooth Out (streaming audio to a Bluetooth speaker).

### Bluetooth In (Playing music from your phone/device):

1. **Activate Bluetooth In:**

Ensure the turntable is powered on. The Bluetooth indicator will flash, indicating it's in pairing mode. If not, press the Bluetooth button to activate.

2. **Pairing:**

On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for "MYKESONIC" in the list of available devices. Select it to pair.

3. **Playback:**

Once paired, the Bluetooth indicator will become solid. You can now play music from your device, and it will output through the turntable's built-in speakers.

### Bluetooth Out (Streaming vinyl to external Bluetooth speakers):

1. **Activate Bluetooth Out:**

With the turntable powered on, ensure no device is currently connected via Bluetooth In. Press and hold the Bluetooth button until the indicator flashes rapidly, signifying Bluetooth Out pairing mode.

2. **Pairing with External Speaker:**

Put your external Bluetooth speaker or headphones into pairing mode. The turntable will automatically search for and connect to the nearest available Bluetooth audio device. Once connected, the indicator will become solid.

3. **Playback:**

Play a vinyl record as described in section 5.1. The audio will now be streamed wirelessly to your connected Bluetooth speaker/headphones.

## 5.3 Using Aux-in and RCA Output

- **Aux-in Headphone Port:**

For private listening, plug any standard 3.5mm headphones into the AUX-in port located on the back of the unit. The built-in speakers will automatically mute when headphones are connected.

- **RCA Output:**

To connect the turntable to an external amplifier, receiver, or powered speakers, use standard RCA cables (not included) to connect the RCA OUT ports on the back of the turntable to the corresponding audio input on your external audio system. This turntable provides a line-level output, so no phono preamp is needed for the external system.

## 6. MAINTENANCE

- **Cleaning the Unit:**

Wipe the exterior of the record player with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Keep the dust cover clean to maintain visibility and protect the platter.

- **Stylus Care:**

The stylus (needle) is a delicate component. Clean it gently with a soft brush designed for stylus cleaning, brushing from back to front. Avoid touching the stylus with your fingers. A worn or dirty stylus can damage your records and degrade sound quality. Replace the stylus when sound quality deteriorates or after approximately 300-500 hours of

playback.

- **Record Care:**

Always handle records by their edges. Store them vertically in their sleeves to prevent warping. Clean records regularly with a dedicated record cleaning solution and brush to remove dust and debris, which can affect sound quality and cause stylus wear.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not active.	Ensure the AC adapter is securely connected to the unit and a working power outlet. Check if the power indicator light is on.
No sound from speakers	Volume too low; headphones connected; Bluetooth Out active; external speakers not connected/powerd.	Increase volume. Disconnect headphones. Ensure Bluetooth Out is not active if using built-in speakers. If using RCA output, check external amplifier/speaker connections and power.
Record skipping or distorted sound	Dirty/damaged record; dirty/worn stylus; turntable not level; excessive vibration.	Clean the record. Clean or replace the stylus. Ensure the turntable is on a stable, level surface. Avoid placing near vibrating objects.
Tonearm not moving automatically	Record not placed correctly; START/STOP button not pressed.	Ensure the record is centered on the platter. Press the START/STOP button firmly.
Bluetooth pairing issues	Device too far; incorrect mode (In/Out); interference.	Ensure devices are within range. Confirm the turntable is in the correct Bluetooth mode (In or Out). Turn off and on Bluetooth on both devices.

## 8. SPECIFICATIONS

**Brand:** MYKESONIC

**Model Name:** YY1632

**Product Dimensions:** 13.82 x 12.72 x 5.63 inches

**Item Weight:** 8.64 pounds

**Connectivity Technology:** Bluetooth

**Maximum Rotational Speed:** 45 RPM (supports 33 1/3 RPM also)

**Special Features:** 3.5mm Headphone Jack, Adjustable Speed, Built In Speaker, RCA Output

**Material:** Metal

**Color:** Green

**Manufacturer:** MYKESONIC

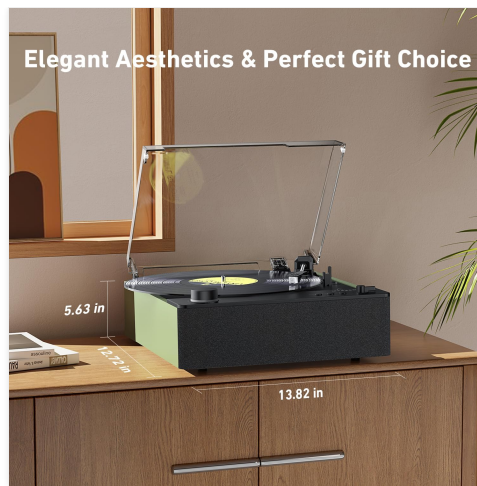


Figure 6: Product dimensions.

## 9. WARRANTY & SUPPORT

---

For detailed warranty information and customer support, please refer to the official MYKESONIC website or the warranty card included with your product. You may also find additional resources and FAQs on the manufacturer's support page. An official Instructions for Use (IFU) PDF document is available for download: [Download User Guide \(PDF\)](#).