

## FANMIS Multi-Function Electronic Watch

# FANMIS Multi-Function Electronic Watch User Manual

Model: Multi-Function Electronic Watch

## INTRODUCTION

---

Thank you for choosing the FANMIS Multi-Function Electronic Watch. This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your new timepiece. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

## SETUP

---

### 1. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all protective films are removed from the watch face and case back.

### 2. Button Functions Overview

Your watch features four primary buttons, typically labeled A, B, C, D, or positioned as follows:

- **Button A (Top Left):** Used for activating backlight and adjusting settings.
- **Button B (Top Right):** Used for starting/stopping functions (e.g., chronograph) and increasing values during setting.
- **Button C (Bottom Left):** Used for mode selection (Time, Alarm, Chronograph).
- **Button D (Bottom Right):** Used for resetting functions and decreasing values during setting.



Image: Overview of watch buttons and their general functions.

### 3. Setting Digital Time and Date

1. In normal time mode, press **Button C** three times to enter time setting mode. The seconds display will flash.
2. Press **Button D** to reset seconds to 00.
3. Press **Button B** to cycle through the setting items: seconds → hour → minute → month → date → day of week.
4. While an item is flashing, use **Button A** to adjust the value.
5. Once all settings are complete, press **Button C** to exit setting mode.

## 4. Setting Analog Time

The analog hands are set independently from the digital display.

1. Pull out the crown (located on the right side of the watch case) to the first click position.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back in to its normal position to start the analog movement.



Image: Demonstrating how to pull out the crown for analog time adjustment.

## OPERATING INSTRUCTIONS

---

### 1. Mode Switching

Press **Button C** repeatedly to cycle through the different modes:

- Normal Time Display
- Alarm Setting Mode
- Chronograph (Stopwatch) Mode

### 2. Using the Chronograph (Stopwatch)

1. Enter Chronograph mode by pressing **Button C** until 'ST' or 'STOP' appears.
2. Press **Button B** to start the stopwatch.
3. Press **Button B** again to pause the stopwatch.
4. Press **Button B** once more to resume timing.
5. While paused, press **Button D** to reset the stopwatch to zero.

### 3. Setting and Using the Alarm

1. Enter Alarm mode by pressing **Button C** until 'AL' appears.
2. Press **Button A** to select the hour or minute to set. The selected digit will flash.
3. Use **Button B** to adjust the hour or minute.
4. Press **Button A** again to confirm the setting.
5. To turn the alarm ON/OFF, in Alarm mode, press **Button D**. An alarm icon will appear/disappear.
6. When the alarm sounds, press any button to stop it.

### 4. Using the LED Backlight

Press **Button A** (Top Left) at any time to illuminate the digital display for a few seconds, improving visibility in low-light conditions.

### 5. Water Resistance

This watch is designed with a specific water resistance rating. Refer to the 'Specifications' section for details. It is important to note that water resistance is not a permanent condition and may eventually deteriorate. Do not operate buttons underwater. Avoid exposing the watch to hot water or steam, as this can compromise the seals.



Image: The watch demonstrating its water resistance during light exposure to water.

## MAINTENANCE

---

## 1. Cleaning Your Watch

Regular cleaning helps maintain the appearance and longevity of your watch.

- Wipe the watch case and strap with a soft, damp cloth.
- For silicone straps, mild soap and water can be used, then rinse thoroughly and dry.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or seals.

## 2. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

## 3. Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original packaging or a watch box can protect it from dust and scratches.

## TROUBLESHOOTING

---

### 1. Digital Display is Blank or Dim

- **Possible Cause:** Low battery.
- **Solution:** Replace the battery. Refer to the 'Battery Replacement' section.

### 2. Analog Hands Not Moving

- **Possible Cause:** Crown is pulled out, or low battery for analog movement.
- **Solution:** Ensure the crown is pushed fully in. If the issue persists, the analog battery may need replacement.

### 3. Buttons Not Responding

- **Possible Cause:** Watch is in a frozen state or battery is critically low.
- **Solution:** Try a soft reset by holding all four buttons simultaneously for a few seconds (if applicable to your model). If this does not work, battery replacement may be necessary.

### 4. Water Inside the Watch

- **Possible Cause:** Water resistance compromised due to impact, aging seals, or operating buttons underwater.
- **Solution:** Immediately take the watch to a professional watch repair service to prevent further damage. Do not attempt to dry it yourself with heat.

## SPECIFICATIONS

---

Display Type	Digital and Analog
Movement	Quartz
Water Resistance	30M (3ATM) - Suitable for daily use, splash/rain resistant. Not suitable for showering, bathing, swimming, snorkeling, or water-related work.
Case Material	ABS Plastic / Alloy

<b>Strap Material</b>	Silicone
<b>Battery Type</b>	CR2025 (Digital) / SR626SW (Analog) - <i>May vary by production batch.</i>
<b>Backlight</b>	LED

## WARRANTY AND SUPPORT

---

### 1. Warranty Information

Your FANMIS Multi-Function Electronic Watch is covered by a limited warranty against manufacturing defects from the date of purchase. This warranty does not cover damage caused by improper use, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

### 2. Customer Support

For further assistance, technical support, or warranty inquiries, please contact FANMIS customer service through the retailer where the product was purchased or visit the official FANMIS website for contact details.

**Website:** [www.fanmis.com](http://www.fanmis.com) (Example link, replace with actual if available)

**Email:** [support@fanmis.com](mailto:support@fanmis.com) (Example link, replace with actual if available)

