


LOBKIN LOBKIN-X7

LOBKIN X7 Bone Conduction Headphones User Manual

Model: LOBKIN-X7

1. PRODUCT OVERVIEW

The LOBKIN X7 Bone Conduction Headphones offer an innovative audio experience designed for active lifestyles. These open-ear headphones utilize bone conduction technology to deliver sound, keeping your ears open to your surroundings. Featuring Bluetooth 5.3 connectivity, a built-in microphone, and 32GB of internal memory for MP3 playback, they are also IP68 waterproof, making them suitable for various sports, including swimming.

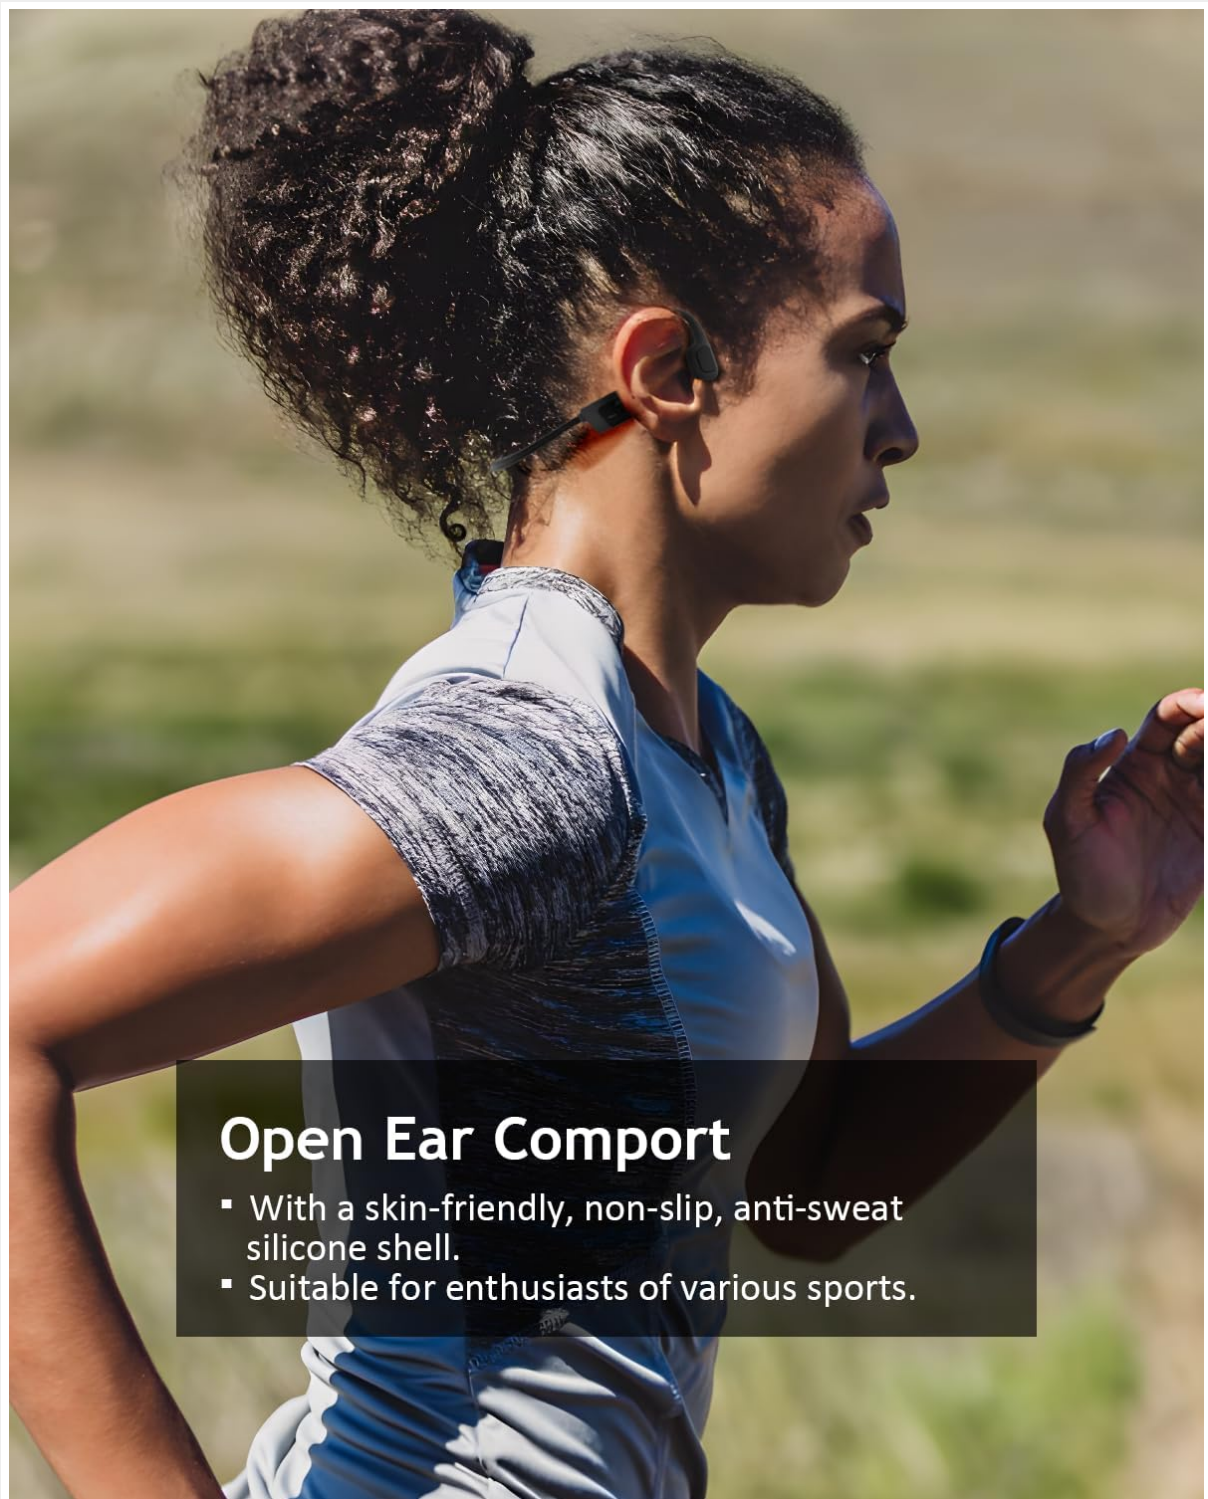

Open Ear Comfort

- With a skin-friendly, non-slip, anti-sweat silicone shell.
- Suitable for enthusiasts of various sports.

Image: Front view of the LOBKIN X7 Bone Conduction Headphones, showcasing their design.

Key Features:

- **Bone Conduction Technology:** Delivers sound through cheekbones, leaving ears open.
- **Open-Ear Design:** Ensures comfort and awareness of surroundings.
- **IP68 Waterproof Rating:** Suitable for use in water up to 3 meters deep, resistant to sweat and seawater.
- **Built-in 32GB MP3 Player:** Allows for music playback without a connected device, supporting MP3, FLAC, APE, WMA, and WAV formats.
- **Bluetooth 5.3:** Provides stable connectivity, reduced latency, and faster data transfer.
- **Bi-directional Microphone:** Ensures clear call quality.
- **Lightweight Design:** Weighs only 27g for comfortable wear during extended periods.

- **Long Battery Life:** Up to 6 hours of playtime on a single charge.

2. PACKAGE CONTENTS

Upon opening your LOBKIN X7 Bone Conduction Headphones package, you should find the following items:

- 1x LOBKIN X7 Bone Conduction Headphones
- 1x Charging/Data Cable
- 1x Headband
- 2x Earbuds
- 1x User Manual (this document)

Video: Unboxing and initial overview of the LOBKIN X7 Bone Conduction Headphones and included accessories.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge your LOBKIN X7 headphones. Connect the provided charging/data cable to the magnetic charging port on the headphones and a USB power source. A full charge typically takes approximately 2 hours. The LED indicator will show charging status.

3.2 Wearing the Headphones

Place the headphones around the back of your head with the transducers resting on your cheekbones, just in front of your ears. The flexible band should rest comfortably on your neck. Adjust for a secure and comfortable fit.



Image: A person wearing the LOBKIN X7 headphones during a workout, demonstrating the open-ear design.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To Power On: Press and hold the Multi-Function Button (MFB) for 3 seconds.
- To Power Off: Press and hold the MFB for 3 seconds.

4.2 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the MFB until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "LOBKIN-X7".
4. Select "LOBKIN-X7" to connect. The LED will turn solid blue when successfully paired.

4.3 Music Playback and Call Control



Image: Detailed diagram illustrating the button functions for the LOBKIN X7 headphones.

- **Play/Pause Music:** Click the MFB once.
- **Next Track:** Press and hold the "-" button.
- **Previous Track:** Press and hold the "+" button.
- **Volume Up:** Click the "+" button once.
- **Volume Down:** Click the "-" button once.
- **Answer/End a Call:** Click the MFB once.
- **Reject a Call:** Double-click the MFB.
- **Activate Voice Command:** Triple-click the MFB.

4.4 MP3 Player Mode

The LOBKIN X7 headphones feature a built-in 32GB MP3 player, allowing you to listen to music without a Bluetooth connection, especially useful for swimming or areas without signal.

- **Switch to MP3 Mode:** Double-tap the triangle button (usually the MFB or a dedicated mode button,

refer to the button diagram for exact location).

- **Transfer Music:** Connect the headphones to your computer using the provided USB cable. The headphones will appear as a removable drive. Drag and drop your music files (MP3, FLAC, APE, WMA, WAV) into the drive.



Image: The LOBKIN X7 headphones submerged in water, illustrating their use as an underwater MP3 player.

Video: Demonstration of the LOBKIN X7 headphones being used during various sports activities, including running, highlighting their comfort and stability.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your LOBKIN X7 headphones, follow these maintenance guidelines:

- **Cleaning:** Wipe the headphones with a soft, damp cloth after each use, especially after workouts or swimming, to remove sweat, chlorine, or salt water. Do not use abrasive cleaners or solvents.
- **Drying:** Ensure the headphones are completely dry before charging. Water in the charging port can cause damage.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** While IP68 rated, avoid prolonged submersion beyond 3 meters. The water resistance is not permanent and may decrease over time with normal wear.

6. TROUBLESHOOTING

If you encounter any issues with your LOBKIN X7 headphones, please refer to the following common solutions:

- **No Power:**
 - Ensure the headphones are fully charged.

- Check the charging cable and power source for proper connection.
- **Cannot Pair via Bluetooth:**
 - Make sure the headphones are in pairing mode (LED flashing red and blue).
 - Ensure Bluetooth is enabled on your device and it is within range (33 feet).
 - Forget "LOBKIN-X7" from your device's Bluetooth list and try pairing again.
 - Restart both the headphones and your device.
- **No Sound or Low Volume:**
 - Adjust the volume on both the headphones and your connected device.
 - Ensure the headphones are properly positioned on your cheekbones.
 - If in MP3 mode, ensure music files are correctly loaded.
 - Try using the included earplugs for enhanced sound experience, especially in noisy environments or underwater.
- **MP3 Player Not Working:**
 - Ensure the headphones are switched to MP3 mode.
 - Verify that compatible music files (MP3, FLAC, APE, WMA, WAV) are loaded onto the 32GB internal memory.

If the problem persists, please contact LOBKIN customer support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Model Name	LOBKIN-X7
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	33 Feet
Water Resistance Level	IP68 Waterproof
Internal Memory	32GB
Battery Life	6 Hours
Charging Time	2 Hours
Audio Driver Type	Bone Conduction Driver
Material	Acrylonitrile Butadiene Styrene (ABS), Polycarbonate (PC), Silicone
Item Weight	0.22 Kilograms (approx. 7.7 ounces)
Compatible Devices	Android 5.0 or iOS 8.0 above
Special Features	Adjustable Headband, Lightweight, Open Ear Design, Sports & Exercise

8. WARRANTY AND SUPPORT

LOBKIN products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, returns, or technical support, please refer to the warranty card included in your package or visit the official LOBKIN website. You may also contact LOBKIN customer service directly for assistance.

For further assistance, please visit the [LOBKIN Store on Amazon](#).