

[Manuals.plus](#) /

› [GRASKY](#) /

› GRASKY Window Cleaning Water Fed Pole Brush Kit Instruction Manual

GRASKY B0CD4GGGCR

GRASKY Window Cleaning Water Fed Pole Brush Kit Instruction Manual

Model: B0CD4GGGCR

INTRODUCTION

The GRASKY Window Cleaning Water Fed Pole Brush Kit is designed for efficient and safe cleaning of high windows, solar panels, and other elevated surfaces. This kit features a telescopic extendable pole, a water-fed brush head, and a soap dispenser for enhanced cleaning performance. Please read this manual thoroughly before assembly and operation to ensure proper use and longevity of your product.


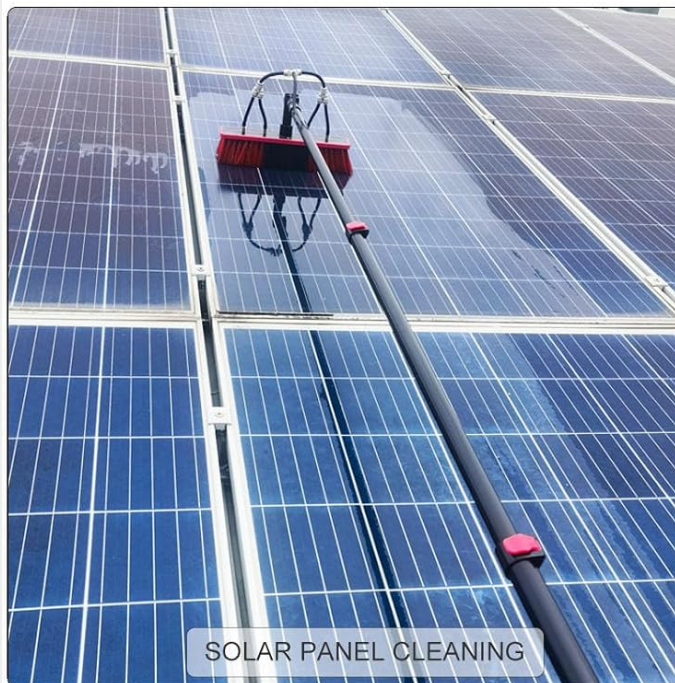 


Image: The GRASKY Water Fed Pole Brush Kit being used for various cleaning tasks, including high windows and solar panels, demonstrating its versatility.

SAFETY INFORMATION

Always prioritize safety when using this product. Failure to follow safety guidelines may result in injury or damage to property.

 - Ensure all connections are secure before use to prevent leaks or disconnections.
- Do not use the pole near overhead power lines or electrical equipment.
- Maintain a stable footing and be aware of your surroundings, especially when extending the pole to its maximum length.
- Avoid using the product in strong winds or adverse weather conditions.
- Wear appropriate personal protective equipment (PPE), such as gloves and eye protection.
- Keep children and pets away from the work area.

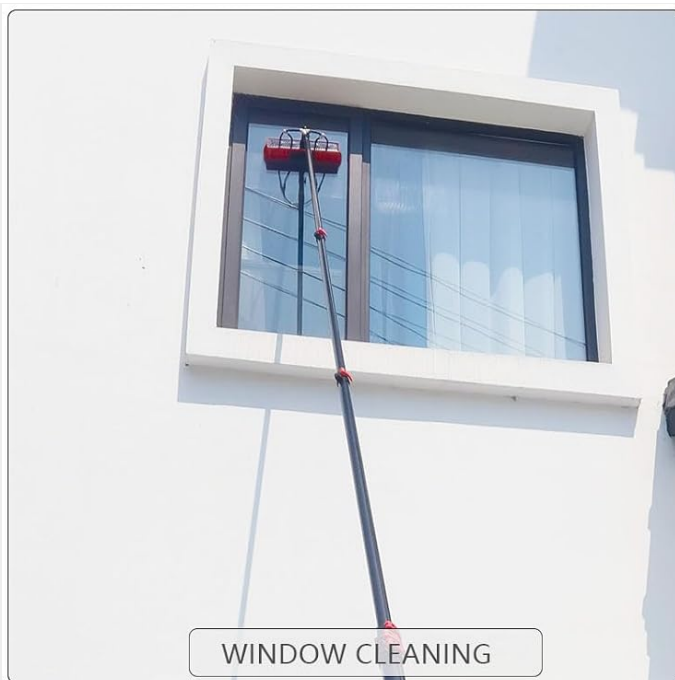

6. **Connect to Water Source:** Attach the other end of the 8M water hose to a standard garden hose or water supply.



CONCEALED HOSE DESIGN



FLEXIBLE WRAPPING,HIGH-ELASTIC BRISTLES



SOAP DISPENSER STANDARD



HIGH TOUTHNESS HOSE

Image: Close-up views of key components, including the concealed hose design within the pole, flexible high-elastic bristles, the standard soap dispenser, and the durable water hose, illustrating the quality and design features.



Image: Detailed images highlighting the pole's features: the flip cam lock with ACME thread for secure extension, the aluminum pole with an anti-rotation groove for stability, and the comfortable sponge non-slip handle for improved grip.

OPERATING INSTRUCTIONS

Extending and Retracting the Pole:

- To extend the pole, open the flip cam locks on each section. Gently pull the sections apart to the desired length.
- Once extended, close the flip cam locks firmly to secure the pole sections in place. The anti-rotation groove ensures stability.
- To retract, open the locks and push the sections back together.

Using the Water Flow:

- Turn on your water supply. Water will flow through the hose, up the pole, and out through the brush head nozzles.
- Adjust the water flow as needed using the control valve on the soap dispenser or your main water source.

Using the Soap Dispenser:

- Unscrew the bottom of the soap dispenser and fill it with your preferred cleaning solution.
- The soap dispenser allows you to switch between plain water and soapy water. Use the switch to select your desired mode.
- You can also adjust the mixing ratio of soap to water for optimal cleaning.



Image: The water-fed brush cleaning a solar panel, showing water flowing through the bristles. Another image shows a person pouring cleaning solution into the soap dispenser, demonstrating how to prepare for soapy water cleaning.

Cleaning Technique:

- Start by rinsing the surface with plain water to remove loose dirt.
- Switch to soapy water (if desired) and gently scrub the surface with the brush head. The flexible bristles are designed for effective cleaning without scratching.
- After scrubbing, switch back to plain water to rinse off all soap residue.
- Work from top to bottom on vertical surfaces to allow dirty water to flow downwards.

Your browser does not support the video tag.

Video: Demonstrates the GRASKY Water Fed Pole Brush Kit in action, effectively cleaning solar panels. The video shows the pole extending and the brush head scrubbing and rinsing the panels, highlighting the ease of use and cleaning power.


MAINTENANCE

- **After Each Use:** Rinse the brush head and all hose connections thoroughly with clean water to remove any soap residue or debris.
- **Pole Cleaning:** Wipe down the telescopic pole sections with a damp cloth to remove dirt.
- **Storage:** Retract the pole completely and store it in a dry, cool place away from direct sunlight. Ensure all water is drained from the hoses and dispenser to prevent freezing damage in cold climates.
- **Inspect Connections:** Periodically check all hose fittings and quick connects for wear or damage. Replace any worn parts to maintain a watertight seal.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow or weak flow	Water supply off or low pressure Hose kinked or blocked Connections not secure Nozzles on brush head clogged	Check water supply and pressure. Straighten hose or check for obstructions. Tighten all hose connections. Clean brush head nozzles.
Leaking connections	Connections not tight enough Worn O-rings or washers	Ensure all connections are hand-tight. Inspect and replace O-rings or washers if damaged.
Pole sections slip or won't lock	Cam locks not fully engaged Dirt or debris in locking mechanism	Ensure cam locks are fully closed and secure. Clean any dirt or debris from the locking mechanisms.

SPECIFICATIONS

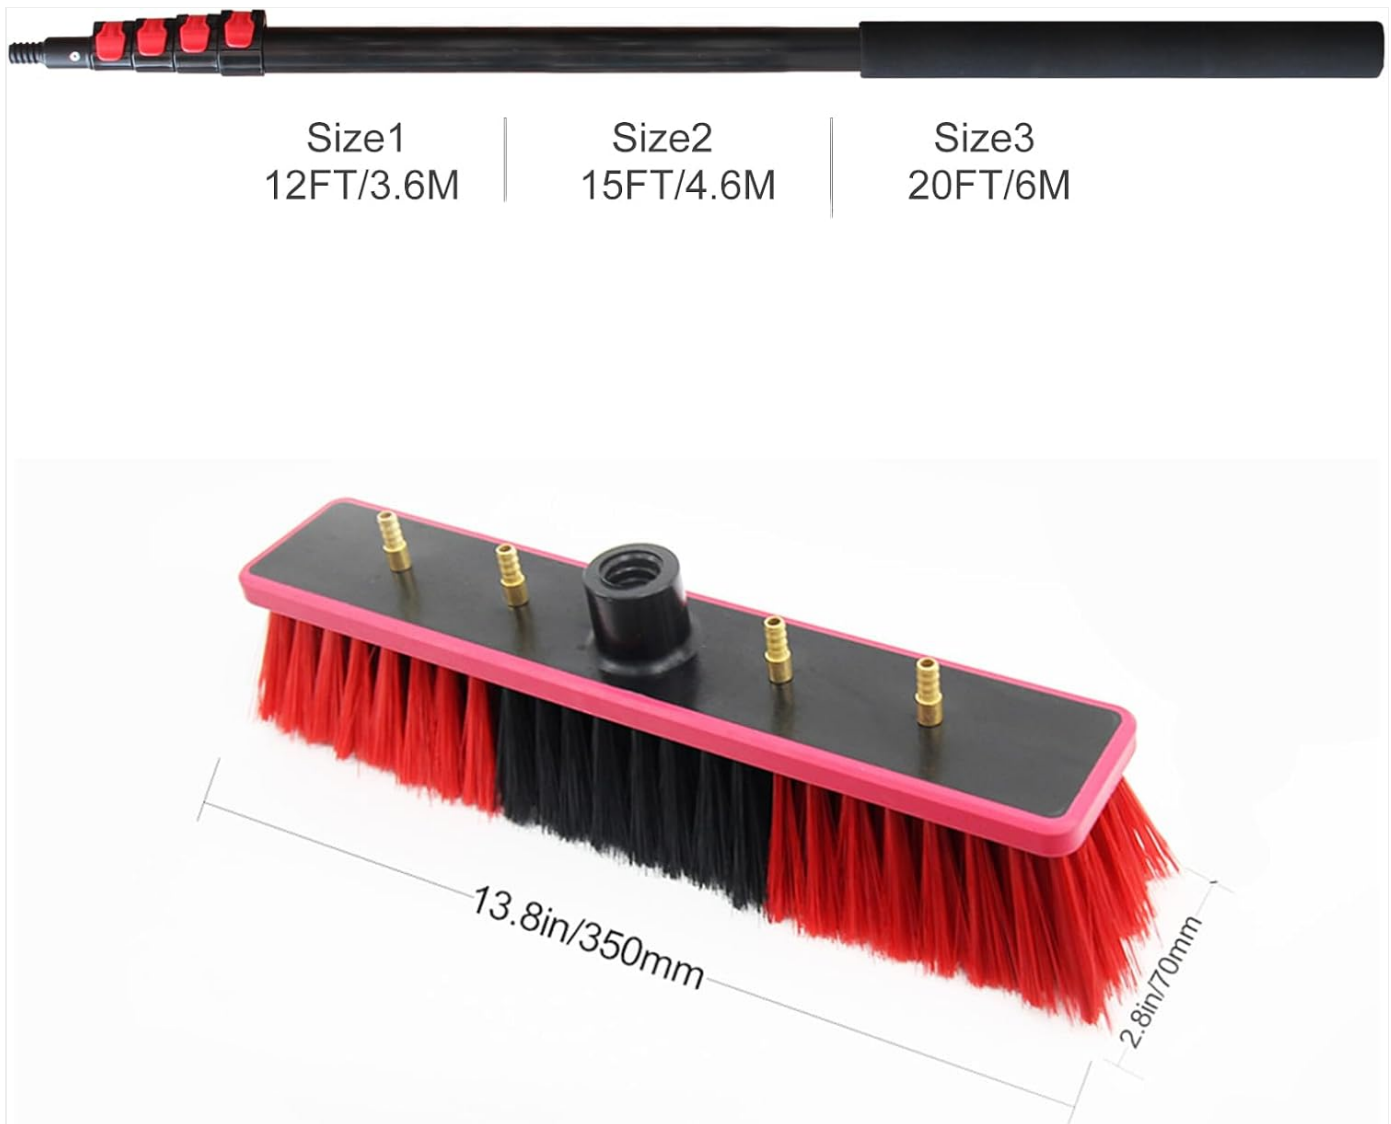

Size1	Size2	Size3
12FT/3.6M	15FT/4.6M	20FT/6M

Image: The telescopic pole illustrating its various extendable lengths, including 12FT (3.6M), 15FT (4.6M), and 20FT (6M), providing options for different reach requirements.



Image: The brush head attached to the pole, demonstrating its adjustable angle feature, allowing for versatile cleaning positions.

- **Brand:** GRASKY
- **Model:** B0CD4GGGCR
- **Handle Material:** Sponge
- **Specific Uses:** High window cleaning, solar panel washing
- **Product Dimensions (Extended):** Up to 236 inches (20 feet) L x 13.8 inches W x 3 inches H
- **Material:** Aluminum (pole), PP (bristles)
- **Included Components:** Telescopic pole, brush head, angle adapter, water hoses, soap dispenser, hose fittings, quick connects.
- **Surface Recommendation:** Windows, Solar Panels
- **Item Weight:** Approximately 6 Pounds
- **Special Features:** Extendable, Lightweight, Long Handle, Soap Dispenser, Anti-rotation groove
- **Brush Head Dimensions:** 13.8 inches (350mm) width, 2.8 inches (70mm) height (approximate, from image PT02)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GRASKY website. We are committed to providing excellent customer service and will assist you with any questions or concerns regarding your product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CD4GGGCR>

More documents and user manuals: <https://manuals.plus/>