

Beko DVS05020S

Beko DVS05020S Dishwasher User Manual

Model: DVS05020S | Brand: Beko

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Beko DVS05020S freestanding dishwasher. Please read these instructions thoroughly before installation, first use, and maintenance to ensure optimal performance and to prevent damage. Keep this manual for future reference.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the dishwasher is properly grounded before use.
- Do not operate the dishwasher if the power cord is damaged. Contact qualified service personnel.
- Keep children away from the dishwasher, especially when it is operating or when the door is open. This model includes a child lock feature.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid opening the door during a wash cycle, as hot water and steam may escape.
- Sharp items should be loaded with their points down to prevent injury.

3. PRODUCT OVERVIEW

The Beko DVS05020S is a compact, freestanding dishwasher designed for efficient cleaning of up to 10 place settings. It features 5 wash programs and a durable stainless steel tub.



Figure 1: Front view of the Beko DVS05020S Freestanding Dishwasher. This image shows the silver exterior, the control panel with a rotary dial and LED display, and the integrated handle.

Key Features:

- **Capacity:** 10 place settings
- **Programs:** 5 wash programs (Eco 50°C, Intensive 70°C, Clean & Shine, Quick & Shine, Mini)
- **Special Functions:** Flexible half load, Delay start option
- **Drying System:** Static drying
- **Interior:** Stainless steel tub
- **Safety:** Child lock, Water inlet safety system
- **Dimensions (HxWxD):** 85 x 44.8 x 60 cm

4. SETUP AND INSTALLATION

Proper installation is crucial for the dishwasher's performance and safety. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any transport damage. Report any damage immediately to your retailer.

4.2 Positioning

- Place the dishwasher on a level, stable surface.
- Ensure there is adequate space for door opening and closing.

4.3 Water Connection

- Connect the water inlet hose to a cold water supply tap. Ensure connections are tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is securely fastened and allows for proper drainage.

4.4 Electrical Connection

- Plug the dishwasher into a grounded electrical outlet (240 Volts).
- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

Follow these steps for daily operation of your dishwasher.

5.1 Loading Dishes

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket.
- Ensure dishes do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for most items, but sharp knives with points down for safety.

5.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid dispenser and refill if necessary. Rinse aid helps with drying and prevents spots.

5.3 Selecting a Program

Turn the program selection dial to choose one of the 5 available wash programs:

- **Eco 50°C:** Standard program for normally soiled daily dishes, offering energy and water efficiency.
- **Intensive 70°C:** For heavily soiled dishes, pots, and pans.
- **Clean & Shine:** Provides thorough cleaning and extra shine.
- **Quick & Shine:** A faster program for lightly soiled dishes.
- **Mini:** A very short program for very lightly soiled dishes that do not require drying.

5.4 Starting the Dishwasher

- Close the dishwasher door firmly.
- Press the Start/Pause button. The LED display will show the remaining time.
- To use the **Half Load** function, press the dedicated button after selecting a program if you have fewer dishes.
- To use the **Delay Start** function, press the delay button to set the desired delay time before pressing Start.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

6.1 Cleaning the Filters

- The filter system should be cleaned regularly (e.g., once a week) to prevent blockages.
- Remove the coarse and fine filters at the bottom of the dishwasher.
- Rinse them under running water to remove any food debris.
- Reassemble the filters and place them back securely.

6.2 Cleaning the Spray Arms

- Periodically check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the nozzles with a thin object like a toothpick.

6.3 Adding Dishwasher Salt

- If your water is hard, the salt indicator light on the control panel will illuminate.
- Unscrew the cap of the salt dispenser located at the bottom of the dishwasher tub.
- Fill the dispenser with dishwasher salt using the provided funnel.
- Replace the cap tightly.

7. TROUBLESHOOTING

Before contacting service, refer to this section for common issues and solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected	Check power connection, ensure door is latched, select a program and press Start.

Problem	Possible Cause	Solution
Dishes are not clean	Incorrect loading, clogged spray arms, insufficient detergent, wrong program	Reload dishes correctly, clean spray arms and filters, add more detergent, select a more intensive program.
Water remaining in the tub	Clogged filter, kinked drain hose, drain pump issue	Clean filters, check drain hose for kinks, contact service if pump is faulty.
White spots on dishes	Lack of rinse aid, hard water, too much detergent	Refill rinse aid, check salt level, reduce detergent amount.

8. SPECIFICATIONS

Feature	Detail
Brand	Beko
Model	DVS05020S
Installation Type	Freestanding
Capacity	10 Place Settings
Number of Programs	5 (Eco, Intensive, Clean & Shine, Quick & Shine, Mini)
Dimensions (HxWxD)	85 cm x 44.8 cm x 60 cm
Color	Silver
Control Type	Push Button with Rotary Dial
Display Type	LED
Interior Material	Stainless Steel
Noise Level	49 dB
Water Consumption per Cycle	11.9 Liters
Energy Consumption per Cycle	0.7 kWh
Voltage	240 Volts
Special Features	Half Load, Delay Start, Child Lock
Manufactured In	Turkey

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Beko DVS05020S dishwasher comes with a **5-year manufacturer's warranty**. This warranty covers defects in

materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the warranty card included with your appliance or visit the official Beko website.

9.2 Customer Support

For technical assistance, spare parts, or service requests, please contact Beko customer support. You can find contact details on the official Beko website or in your warranty documentation.