

[Manuals.plus](#) /

> [NEOBELLA](#) /

> NEOBELLA Wireless Keyboard and Mouse Combo User Manual

NEOBELLA

NEOBELLA Wireless Keyboard and Mouse Combo User Manual

Model: S801AG-C

INTRODUCTION

Thank you for choosing the NEOBELLA Wireless Computer Keyboard and Mouse Combo. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new wireless peripheral set. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.



Image: The NEOBELLA Wireless Keyboard and Mouse Combo, showcasing its blue and colorful round keycaps and matching mouse.

KEY FEATURES

- **Power Switch:** Both keyboard and mouse are equipped with power switches to conserve battery life and feature an

auto-sleep function.

- **Colorful Floating Round Keycaps:** Unique higher round keys with a mixed color design for a distinctive aesthetic and comfortable typing experience.
- **Typewriter Clicky Typing Feel:** Provides a satisfying tactile and auditory feedback reminiscent of a classic typewriter.
- **RF USB 2.0 Receiver Connection:** Simple plug-and-play setup with a durable and stable 2.4GHz USB nano receiver for reliable connection.
- **Widely Compatible & Separately Usable:** Can be used independently with PC, laptop, and tablet devices. An adapter may be required for devices with only Type-C ports.
- **Durable Keycap Color:** Utilizes advanced coloring technology to prevent color fading.
- **Fast Response:** Designed for quick and efficient input.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- Wireless Keyboard
- Wireless Mouse
- USB Nano Receiver (located inside the mouse battery compartment)
- User Manual

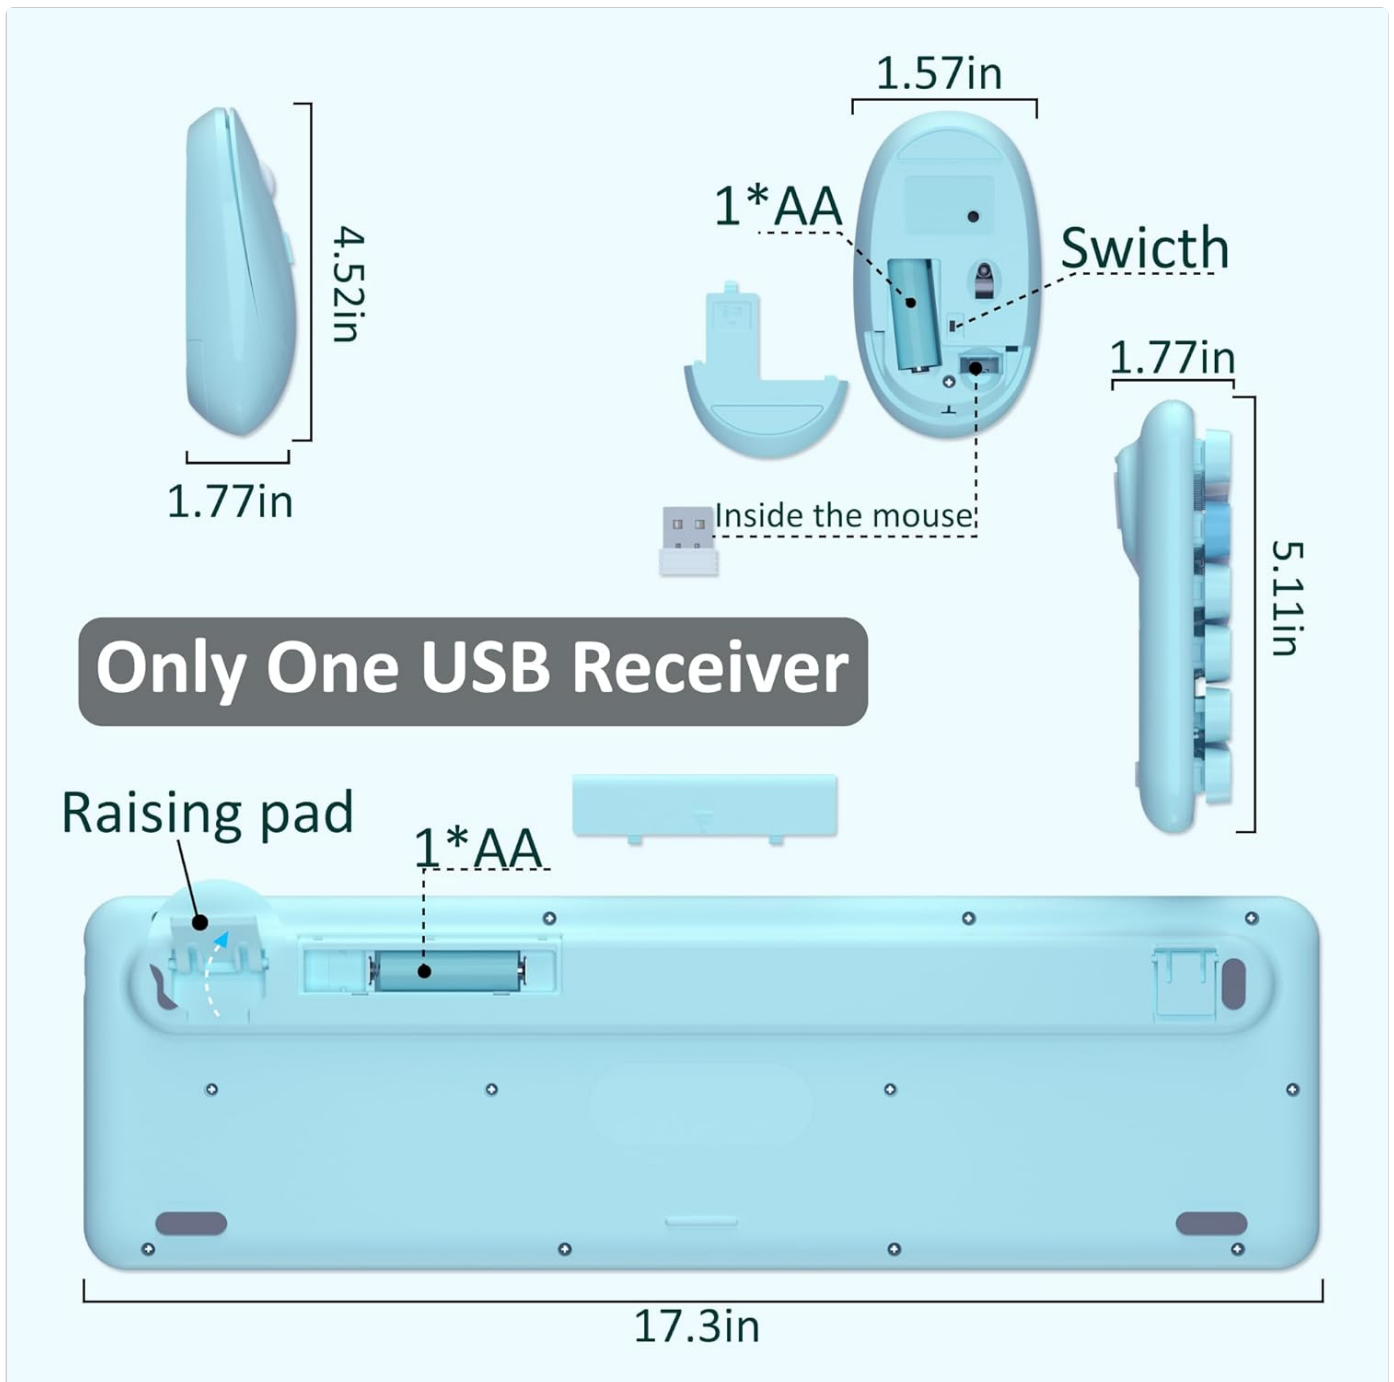


Image: Diagram illustrating the dimensions of the keyboard and mouse, and the location of the USB nano receiver inside the mouse.

SETUP GUIDE

1. Battery Installation

1. **For the Keyboard:** Open the battery compartment on the underside of the keyboard. Insert one (1) AA battery, ensuring correct polarity (+/-). Close the compartment.
2. **For the Mouse:** Open the battery compartment on the underside of the mouse. Remove the USB nano receiver. Insert one (1) AA battery, ensuring correct polarity (+/-). Close the compartment.

2. Connecting the USB Receiver

1. Locate an available USB 2.0 port on your computer, laptop, or tablet.
2. Insert the USB nano receiver into the USB port.
3. If your device only has a Type-C port, use a suitable USB-C to USB-A adapter (not included).

3. Powering On

1. Locate the power switch on the top right side of the keyboard. Slide it to the "ON" position.
2. Locate the power switch on the underside of the mouse. Slide it to the "ON" position.
3. The keyboard and mouse should automatically connect to your device. No additional drivers are typically required for Windows, macOS, or Chrome OS.



Image: The wireless keyboard and mouse combo demonstrating connectivity to a laptop, desktop monitor, and tablet via the USB receiver.

OPERATING INSTRUCTIONS

Keyboard Usage

The keyboard features a standard QWERTY layout with a full numeric keypad and function keys. The round keycaps are designed for comfortable and precise typing.

- **Function Keys (F1-F12):** These keys may have secondary functions (e.g., media control, volume adjustment)

accessible by pressing the **Fn** key simultaneously. Refer to your operating system's settings for specific key assignments.

- **Numeric Keypad:** Use the dedicated numeric keypad for efficient data entry. Ensure Num Lock is enabled if needed.
- **Power Saving:** The keyboard will enter an auto-sleep mode after a period of inactivity to save battery. Press any key to wake it up.

Mouse Usage

The wireless mouse provides smooth and accurate cursor control.

- **Left Click:** Primary action, selection.
- **Right Click:** Context menu.
- **Scroll Wheel:** Scroll up/down documents and web pages. Can also be pressed for middle-click functionality.
- **Power Saving:** The mouse will enter an auto-sleep mode after a period of inactivity. Click any button or move the mouse to wake it up.



Image: The NEOBELLA wireless keyboard and mouse combo positioned on a desk, ready for use with a computer monitor.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your wireless keyboard and mouse combo.

- **Cleaning:**

- Disconnect the USB receiver before cleaning.
- Use a soft, dry, lint-free cloth to wipe down the surfaces of the keyboard and mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- To clean between keycaps, you can use compressed air. The round keycaps are designed to be easily removable for deeper cleaning.

- **Battery Replacement:** Replace batteries when performance degrades or devices stop responding. Always use fresh AA batteries.

- **Storage:** When not in use for extended periods, turn off the power switches on both the keyboard and mouse to conserve battery life. Store in a cool, dry place.

- **Avoid Extreme Conditions:** Do not expose the devices to extreme temperatures, direct sunlight, or high humidity.

TROUBLESHOOTING

Problem	Possible Solution
Keyboard or mouse not responding.	<ul style="list-style-type: none">• Ensure both keyboard and mouse power switches are ON.• Check battery levels and replace if necessary.• Ensure the USB nano receiver is securely plugged into a working USB port.• Try plugging the USB receiver into a different USB port.• Restart your computer.
Lag or intermittent connection.	<ul style="list-style-type: none">• Move the keyboard and mouse closer to the USB receiver.• Avoid placing the receiver near other wireless devices (e.g., Wi-Fi routers, cordless phones) that may cause interference.• Ensure there are no large metal objects between the devices and the receiver.• Replace batteries.
Keys are sticky or not registering properly.	<ul style="list-style-type: none">• Clean the keycaps and the area beneath them (refer to Maintenance section).• Ensure keycaps are properly seated.
Mouse cursor erratic or not moving smoothly.	<ul style="list-style-type: none">• Clean the optical sensor on the underside of the mouse.• Use the mouse on a clean, non-reflective surface.• Replace batteries.

PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	NEOBELLA
Model Number	S801AG-C
Connectivity Technology	2.4GHz Wireless (USB Nano Receiver)
Keyboard Dimensions	Approx. 17.3 x 5.11 x 1.57 inches (44 x 13 x 4 cm)
Mouse Dimensions	Approx. 4.52 x 1.77 x 1.77 inches (11.5 x 4.5 x 4.5 cm)
Item Weight	2.05 pounds (Keyboard and Mouse combined)
Power Source	1 x AA Battery for Keyboard, 1 x AA Battery for Mouse (Batteries not included)
Compatible Devices	PC, Laptop, Tablet, Projector, Television (with USB port)
Keycap Style	Floating Round Keycaps
Special Features	Power Switch, Auto-Sleep Function, Typewriter Clicky Feel, Durable Color

WARRANTY AND SUPPORT

NEOBELLA provides a one-year technical support warranty for both the computer keyboard and mouse. For any technical issues, questions, or support needs, please contact NEOBELLA customer service through the platform where you purchased the product or visit the official NEOBELLA store for contact information. Please retain your proof of purchase for warranty claims.