

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [seenda](#) /

> [Seenda Full-Size 2.4GHz Silent Wireless Keyboard and Mouse Combo User Manual](#)

seenda B0CD7DKNSL

Seenda Full-Size 2.4GHz Silent Wireless Keyboard and Mouse Combo User Manual

Model: B0CD7DKNSL

INTRODUCTION

Thank you for choosing the Seenda Full-Size 2.4GHz Silent Wireless Keyboard and Mouse Combo. This product is designed to provide a comfortable, efficient, and quiet typing and navigation experience for your Windows PC, laptop, or desktop computer. Featuring a stable 2.4GHz wireless connection, silent click mouse, and a full-size keyboard with multimedia shortcuts, this combo is ideal for both work and entertainment.



Image: The Seenda wireless keyboard and mouse combo in purple, with the USB receiver.

PACKAGE CONTENTS

- 1 x Seenda Full-Size Wireless Keyboard
- 1 x Seenda Wireless Mouse

- 1 x USB Receiver (stored in the mouse or keyboard battery compartment)
- 1 x User Manual (this document)

SETUP GUIDE

Follow these steps to set up your Seenda wireless keyboard and mouse combo:

1. Insert Batteries:

Locate the battery compartments on the underside of both the keyboard and the mouse. Insert **AAA batteries** into the keyboard and **AA batteries** into the mouse. Ensure correct polarity (+/-). We highly recommend using 1.5V alkaline dry cell batteries. *Do not use rechargeable lithium batteries to avoid product damage.*

2. Locate USB Receiver:

The USB receiver is typically stored in the battery compartment of either the mouse or the keyboard for safe keeping during transport.

3. Connect USB Receiver:

Plug the USB receiver into an available USB port on your computer (PC, laptop, or desktop). No drivers or software installation is required; the system will automatically recognize the devices.

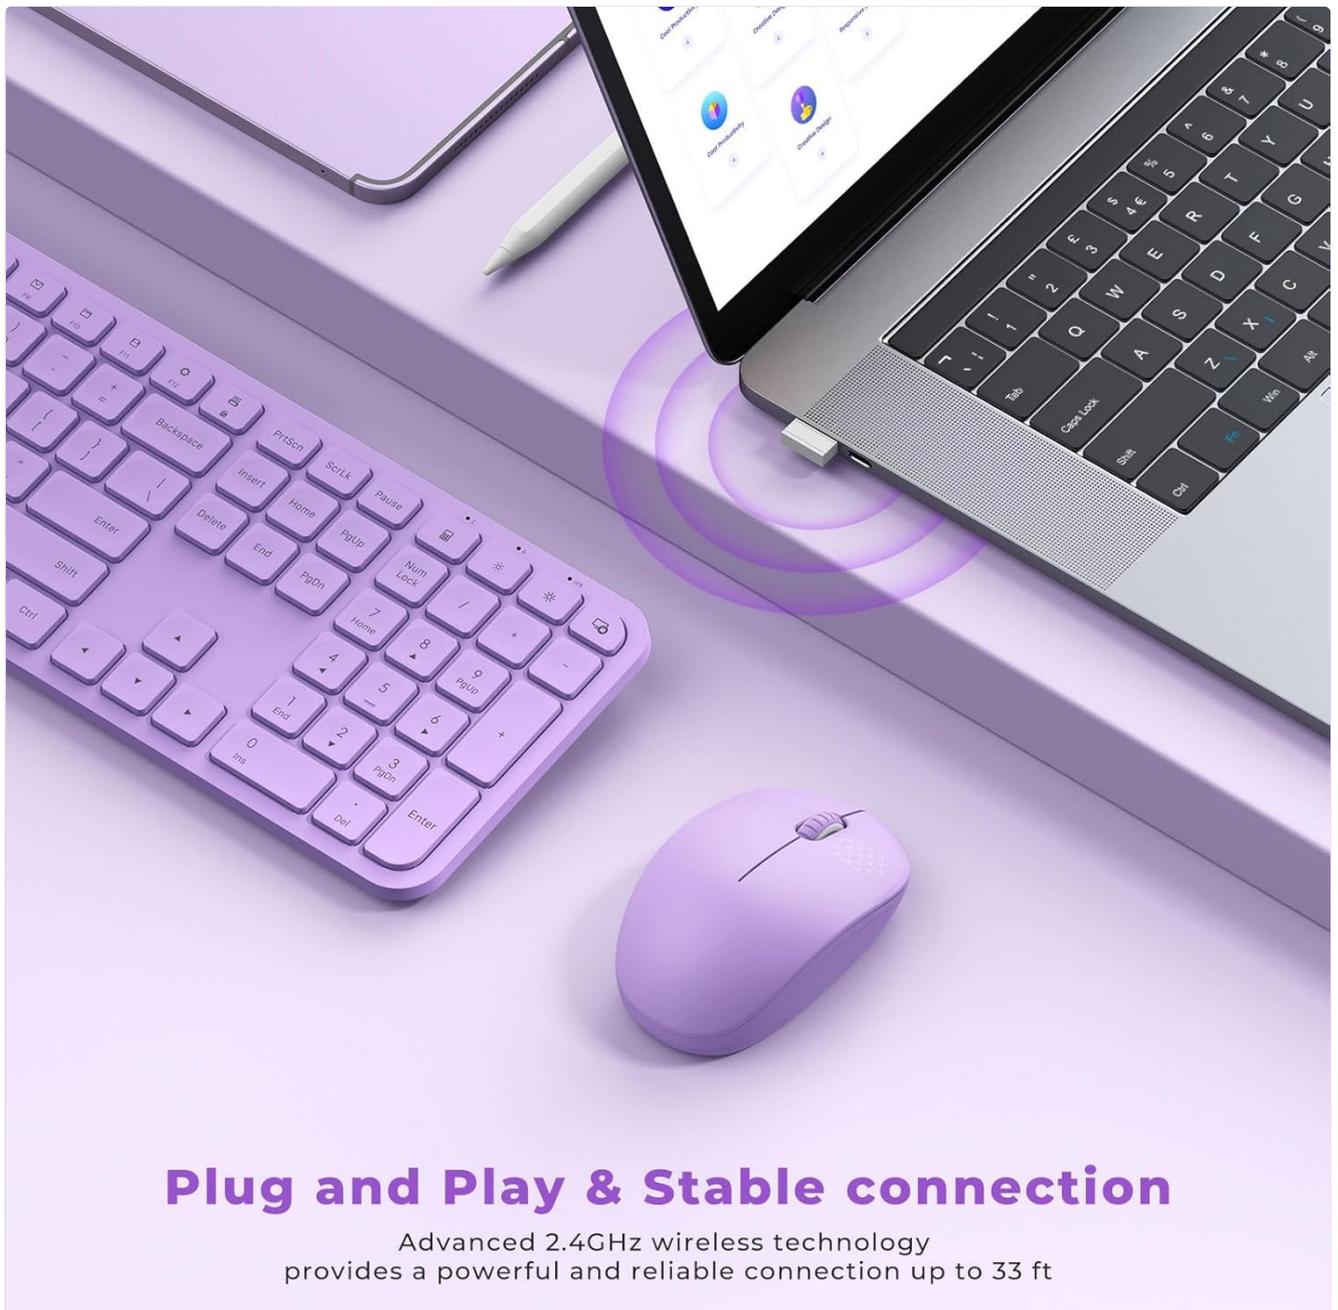


Image: Illustration of the USB receiver providing a stable 2.4GHz wireless connection to both the keyboard and mouse.

4. Power On:

Ensure the power switch on the keyboard (usually on the top right or underside) and mouse (usually on the underside) are in the "ON" position. Your keyboard and mouse should now be ready for use.

OPERATING INSTRUCTIONS

Keyboard Usage

The full-size keyboard features a standard QWERTY layout with a numeric keypad, designed for comfortable and smooth typing. The low-profile keys offer soft and quiet keystrokes.

- **Adjustable Angles:** The keyboard has adjustable angles and anti-slip rubber pads for an ergonomic typing experience.
- **Multimedia Shortcut Keys:** The keyboard includes 12 function keys (F1-F12) and 14 multimedia shortcut keys for quick access to various functions.



Image: Detailed view of the keyboard, illustrating the dedicated multimedia keys for functions like volume control, browser navigation, email, search, and more.

Common Multimedia Functions:

F1: Last Track

F2: Next Track

F3: Play/Pause

F4: Mute

F5: Volume Up

F6: Volume Down

F7: Browser Home Page

F8: Email

F9: Save

F10: Print

F11: Search

F12: Favorites

Mouse Usage

The wireless mouse features a comfortable, ergonomic design with silent clicks, ensuring you don't disturb others. It also offers adjustable DPI settings for varied sensitivity needs.

- **Silent Clicks:** Enjoy a quiet working environment with low-noise clicks.
- **Adjustable DPI:** Cycle through 3 DPI levels (800/1200/1600) by pressing the DPI button (usually located behind the scroll wheel) to adjust cursor sensitivity to your preference.
- **Automatic Sleep Mode:** The mouse will enter sleep mode after a period of inactivity to conserve battery. Move the mouse or click any button to wake it up.



Silent Clicking & Ergonomic Design

Image: A hand demonstrating the comfortable grip and ergonomic design of the Seenda wireless mouse, highlighting its silent clicking feature.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your keyboard and mouse combo.

- **Cleaning:**

Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture and harsh chemicals.

- **Battery Replacement:**

When the keyboard or mouse becomes unresponsive or exhibits erratic behavior, it's likely time to replace the batteries. Refer to the "Setup Guide" for battery type and insertion instructions. Always replace all batteries in a device at the same time.

- **Storing the USB Receiver:**

To prevent loss, there is a dedicated slot designed to store the USB receiver under the battery cover of both the

mouse and the keyboard. We recommend storing the receiver in one of these slots when not in use or during travel.

- **Storage:**

When not in use for extended periods, turn off the keyboard and mouse using their respective power switches to conserve battery life. Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Seenda wireless keyboard and mouse combo, please refer to the following common solutions:

Problem	Possible Cause / Solution
Keyboard/Mouse not responding	<ul style="list-style-type: none">◦ Low Batteries: Replace the batteries in both the keyboard and mouse with fresh 1.5V alkaline batteries.◦ USB Receiver: Ensure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.◦ Power Switch: Make sure the power switches on both devices are in the "ON" position.◦ Distance/Interference: Ensure the devices are within the 10-meter (33 feet) operating range of the receiver and away from large metal objects or other wireless devices that might cause interference.
Lag or erratic cursor movement	<ul style="list-style-type: none">◦ Battery Level: Check and replace batteries if low.◦ Surface: For the mouse, ensure you are using it on a suitable, non-reflective surface.◦ Interference: Move closer to the USB receiver or remove potential sources of wireless interference.◦ DPI Setting: Adjust the mouse DPI setting if the cursor is too fast or too slow.
Specific keys not working	<ul style="list-style-type: none">◦ Battery Level: Ensure batteries are fresh.◦ Cleanliness: Check for any debris or foreign objects under the non-working key.◦ System Issue: Restart your computer.

If the problem persists after trying these solutions, please contact Seenda customer support for further assistance.

SPECIFICATIONS

Brand	Seenda
Model	B0CD7DKNSL
Color	Violet
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Operating System Compatibility	All Windows Server Versions 2000, Personal Computer, Laptop, Television

Special Features	Ergonomic, Silent Click (Mouse), Full-size Keyboard, Multimedia Keys
Mouse DPI Levels	800 / 1200 / 1600
Wireless Range	Up to 10 meters (33 feet)
Battery Requirements	Keyboard: AAA batteries; Mouse: AA batteries (1.5V Alkaline recommended)



Image: Technical drawing showing the dimensions of the keyboard (17.13 x 4.92 inches) and mouse (3.9 x 2.55 x 1.44 inches).

WARRANTY AND SUPPORT

Seenda offers a **1-year free warranty** for this product. If you encounter any issues or have questions regarding your Seenda wireless keyboard and mouse combo, please do not hesitate to contact our customer support team. For warranty claims or technical assistance, please refer to the contact information provided with your product packaging or visit the official Seenda website.

© 2024 Seenda. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.