



Manuals.plus /

- › VEVOR /
- › VEVOR SSRC-17*17 Stainless Steel Chimney Cap Instruction Manual

VEVOR SSRC-17*17


VEVOR SSRC-17*17 Stainless Steel Chimney Cap Instruction Manual

Model: SSRC-17*17


	Product Overview	Safety Instructions	Package			
Contents	Specifications	Installation	Operation	Maintenance	Troubleshooting	Warranty & Support

1. PRODUCT OVERVIEW

This VEVOR SSRC-17*17 Stainless Steel Chimney Cap is designed to protect your chimney from rain, snow, debris, and animal intrusion. Constructed from durable 304 stainless steel, it offers superior resistance to rust and harsh weather conditions. The cap features a 432x432 mm square base and supports two installation methods: side mounting and bottom mounting, making it adaptable to various chimney types.

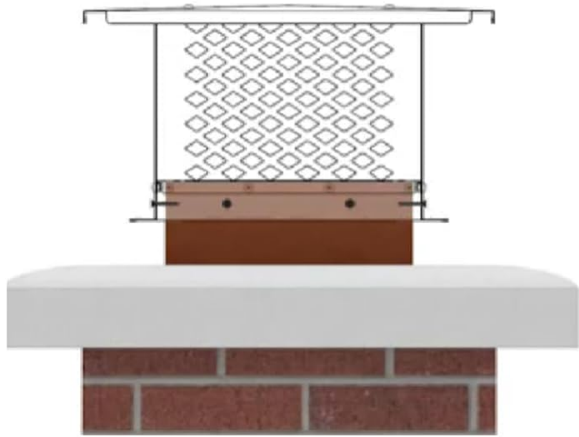

Side Fixed

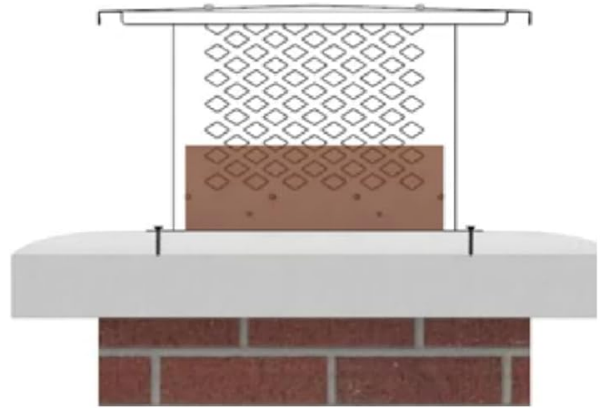


Bottom Fixed

2 INSTALLATION METHODS

Bottom & Side:
Easily Secured



Edeg-folded
Design

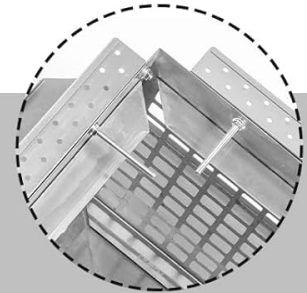

Pre-drilled
Holes

*The VEVOR SSRC-17*17 Stainless Steel Chimney Cap, showcasing its robust design and square base.*

2. SAFETY INSTRUCTIONS

Always prioritize safety when working at heights. Use appropriate safety gear, including gloves, eye protection, and a stable ladder or scaffolding. Ensure the work area is clear of obstructions. If you are unsure about any installation steps, consult a qualified professional.

- Wear appropriate personal protective equipment (PPE) such as gloves and safety glasses.
- Ensure ladders or scaffolding are stable and securely placed before climbing.
- Do not attempt installation in adverse weather conditions (e.g., strong winds, rain, snow).
- Keep children and pets away from the work area.
- Handle all components carefully to avoid cuts from sharp edges.

3. PACKAGE CONTENTS

The package includes all necessary components for installation:

- M5 x 10 Screws (24 pieces)
- M5 Nuts (24 pieces)
- Expansion Screws (10 pieces)
- Bottom Brackets (4 pieces)
- Upper Cover (1 piece)
- Grid Pieces (4 pieces)
- User Manual (1 piece)

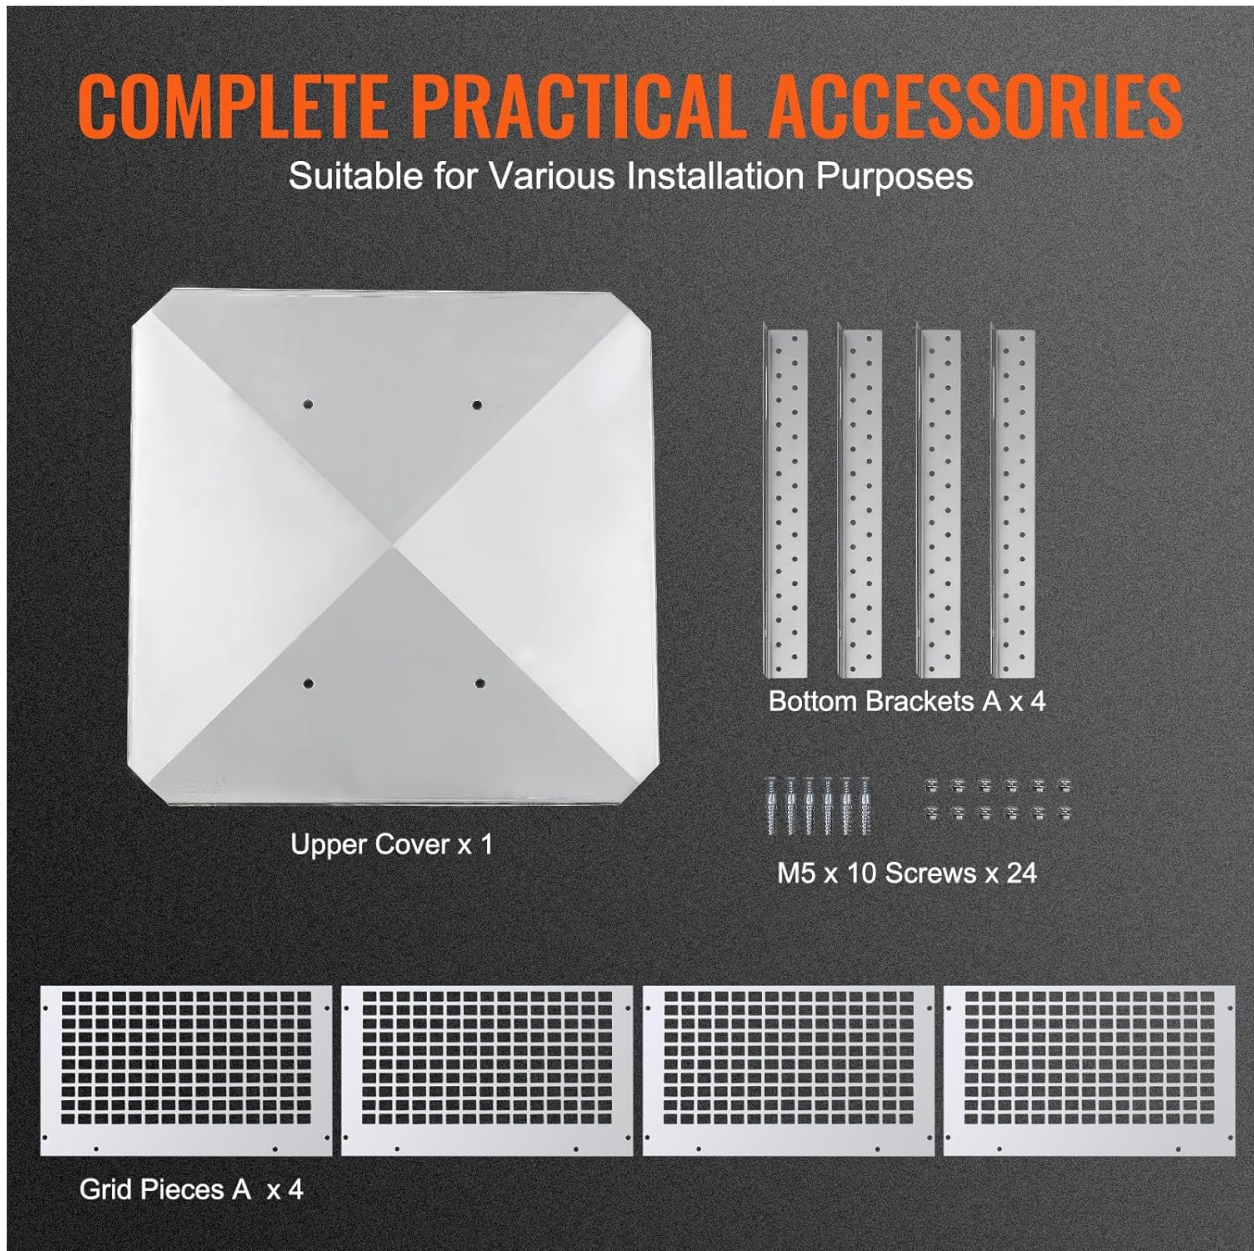
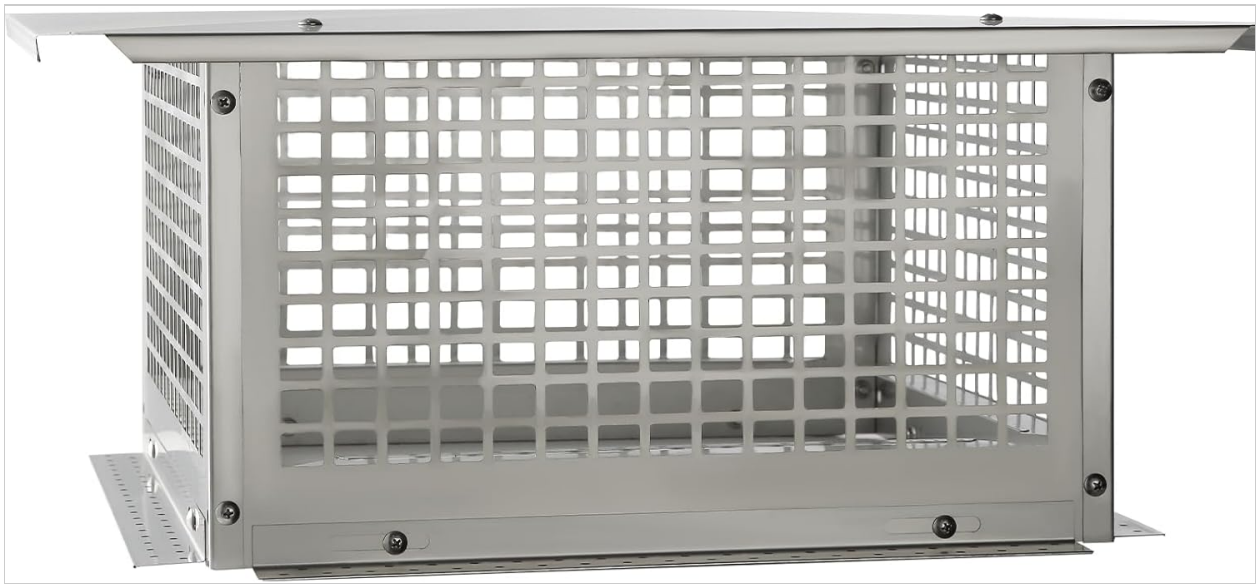


Image showing the complete set of accessories included with the VEVOR chimney cap, including the upper cover, bottom brackets, screws, and grid pieces.

4. SPECIFICATIONS

Attribute	Value
Model Number	SSRC-17*17
Material	304 Stainless Steel
Net Weight (including accessories)	3.7 kg (8.16 lbs)
Item Dimensions (L x W x H)	582 x 582 x 245 mm (22.91 x 22.91 x 9.65 inches)
Panel A Dimensions	610 x 610 x 85 mm (24.02 x 24.02 x 3.35 inches)
Panel B Dimensions	432 x 250 x 0.6 mm (17.01 x 9.84 x 0.02 inches)
Top Panel Dimensions	580 x 580 x 0.6 mm (22.83 x 22.83 x 0.02 inches)



*Diagram illustrating the key dimensions and specifications of the VEVOR SSRC-17*17 chimney cap, including overall size and material.*

5. INSTALLATION

The VEVOR chimney cap offers two primary installation methods: side fixed and bottom fixed. Both methods utilize pre-drilled holes and expansion screws for secure attachment.

2 STURDY STRUCTURES

Strong Wind Resistance, Not Easily Topped



Stainless Steel Mesh
Sturdier and More Durable than Wire



Expansion Screws
Deeply Embedded in the
Wall to Prevent Tipping

Illustration demonstrating the two installation methods: side fixed and bottom fixed, highlighting the pre-drilled holes and edge-folded design for easy securing.

Side Fixed Installation

1. **Position the Cap:** Place the chimney cap on the chimney flue, ensuring it is centered and level.
2. **Align Brackets:** Align the side mounting brackets with the chimney structure.
3. **Mark Drilling Points:** Mark the drilling points through the pre-drilled holes on the brackets onto the chimney structure.
4. **Drill Pilot Holes:** Drill pilot holes into the chimney structure at the marked points.
5. **Secure the Cap:** Secure the cap using the provided M5 x 10 screws and M5 nuts. For masonry chimneys, use the expansion screws to ensure a firm hold.

Bottom Fixed Installation

1. **Attach Bottom Brackets:** Place the bottom brackets onto the chimney flue.
2. **Position the Cap:** Position the chimney cap over the bottom brackets.
3. **Align Holes:** Align the pre-drilled holes on the cap with the bottom brackets.

4. **Secure Cap to Brackets:** Secure the cap to the bottom brackets using the M5 x 10 screws and M5 nuts.
5. **Secure Brackets to Chimney:** For masonry chimneys, use expansion screws to firmly attach the bottom brackets to the chimney wall.

The robust 304 stainless steel mesh and expansion screws ensure strong wind resistance and stability, preventing the cap from tipping even in adverse weather conditions.




Close-up view of the stainless steel mesh and an expansion screw, illustrating the sturdy construction designed for wind resistance and secure embedding into the wall.

6. OPERATION

Once installed, the VEVOR chimney cap operates passively to protect your chimney system. Its primary function is to prevent external elements and unwanted intrusions from entering the flue.

The stainless steel mesh acts as a barrier against birds, rodents, and other small animals, while the solid top cover and side panels deflect rain, snow, and falling leaves. This ensures a clear and unobstructed chimney, promoting efficient ventilation and reducing the risk of blockages.

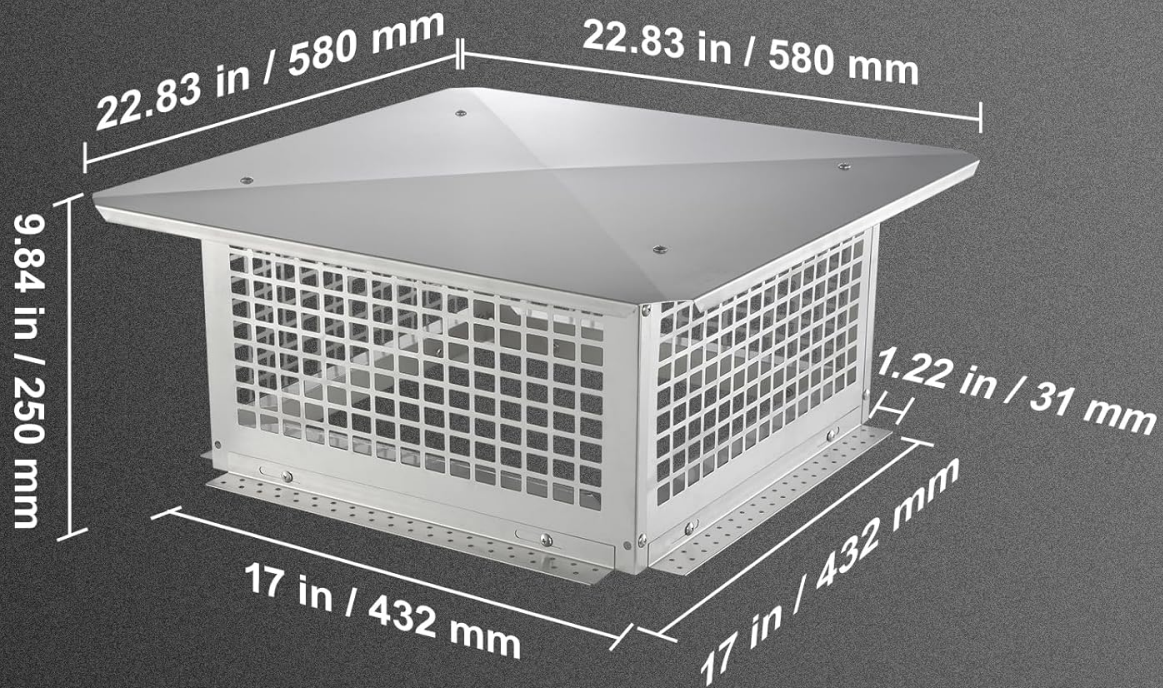

SPECIFICATIONS

Item Model Number

SSRC-17*17

Material

304 Stainless Steel

Net Weight

8.16 lb / 3.7 kg

Visual representation of the chimney cap preventing birds, animals, leaves, and snow from entering the chimney, ensuring a clear and clean flue.

7. MAINTENANCE

Regular inspection and cleaning are recommended to ensure optimal performance and longevity of your chimney cap.

- **Annual Inspection:** Visually inspect the cap at least once a year, preferably before the heating season, for any signs of damage, loose fasteners, or accumulated debris.
- **Cleaning:** Remove any leaves, twigs, or other debris that may have collected on or around the cap. A soft brush or cloth can be used to clean the stainless steel surface. Avoid abrasive cleaners that could scratch the finish.
- **Fastener Check:** Periodically check all screws and nuts to ensure they remain tight. Re-tighten if necessary.
- **Rust Prevention:** While made of 304 stainless steel, which is highly rust-resistant, occasional cleaning helps maintain its appearance and protective qualities.

Always exercise caution when performing maintenance at heights.

8. TROUBLESHOOTING

- **Cap appears loose:** Check all mounting screws and expansion bolts. Re-tighten any loose fasteners. Ensure the installation method chosen is appropriate for your chimney type and that all components are correctly aligned.
- **Debris accumulation:** If excessive leaves or debris accumulate, it may indicate surrounding trees are too close or that the cap needs more frequent cleaning. Clear debris regularly.
- **Water leakage:** Ensure the cap is properly seated and sealed. Check for any gaps between the cap and the chimney flue. Re-installation or additional sealing may be required.

9. WARRANTY AND SUPPORT

This VEVOR product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or visit the official VEVOR website.

For further assistance, please contact VEVOR customer support through their official channels.

Visit the VEVOR Store for more information.