

## Gillette BG3 exWE

# Gillette Intimate Trimmer I3 User Manual

Model: BG3 exWE | Brand: Gillette

### INTRODUCTION

The Gillette Intimate i3 trimmer is Gillette's first intimate zone trimmer, designed for easy and gentle intimate shaving. This cordless electric trimmer incorporates SkinFirst technology, featuring closely spaced blades and a sensitive skin comb to minimize the risk of nicks and cuts. Powered by Braun technology, this intimate trimmer for men provides up to 80 minutes of cordless operation on a single charge. Its waterproof design allows for use on both dry and wet skin. The package includes the trimmer, a charger, and a sensitive skin comb.



Image: The Gillette Intimate Trimmer I3 alongside its product packaging, showcasing the device and its accessories.

## SAFETY WARNINGS

**For your safety, please read and adhere to the following warnings:**

- Avoid using the device near water sources, such as bathtubs, showers, basins, or other vessels containing water, unless explicitly stated as waterproof for such use.
- Do not use this product on infants.
- Always follow the recommended cleaning and maintenance instructions provided in this manual to ensure safe and hygienic operation.
- Keep the device out of reach of children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

## SETUP

### Charging the Device

Before first use, fully charge your Gillette Intimate Trimmer I3. Connect the charger to the device and plug it into a power outlet. A full charge provides up to 80 minutes of cordless trimming. The charging indicator light will provide status.

### Attaching the Sensitive Skin Comb

The trimmer comes with a sensitive skin comb designed to minimize blade contact and enhance comfort. To attach, align the comb with the trimmer head and gently push until it clicks into place. Ensure it is securely fastened before use.



Image: The Gillette Intimate Trimmer I3 with the sensitive skin comb securely attached, ready for use.

## OPERATING INSTRUCTIONS

The Gillette Intimate Trimmer I3 is designed for precise and comfortable grooming of intimate areas. It can be used on dry or

wet skin.

1. **Prepare the Skin:** For optimal results and to minimize irritation, gently stretch the skin in the area you intend to trim. This helps to flatten the surface and ensure a smoother glide.
2. **Select Length Setting:** With the trimming head attached, choose your desired hair length setting using the sensitive skin comb.
3. **Turn On:** Press the power button to turn on the device.
4. **Trim Hair:** Gently guide the trimmer over the hair, following the contours of your body. Move the trimmer slowly and steadily for an even trim.
5. **Post-Trimming:** After trimming, turn off the device and proceed with cleaning as described in the Maintenance section.



Image: A visual guide illustrating the three key steps for using the trimmer: stretching the skin, trimming the hair, and cleaning the device.



**JUSQU'À  
80 MIN  
D'AUTONOMIE**



Image: A person demonstrating the use of the Gillette Intimate Trimmer I3 for body hair grooming, highlighting its ergonomic design.

## MAINTENANCE

Proper maintenance ensures the longevity and performance of your Gillette Intimate Trimmer I3.

### Cleaning the Trimmer

The trimmer is waterproof, allowing for easy cleaning under running water.

1. **Turn Off:** Ensure the trimmer is turned off before cleaning.
2. **Rinse:** Rinse the trimming head and comb under warm running water to remove hair clippings and debris.
3. **Dry:** Shake off excess water and allow the trimmer to air dry completely before storing or recharging.
4. **Lubrication (Optional):** Periodically, you may apply a small drop of light machine oil to the blades to maintain optimal cutting performance.





# ÉTANCHE



Image: The Gillette Intimate Trimmer I3 being used under running water in a shower, illustrating its waterproof capability for easy cleaning.

## TROUBLESHOOTING

If you encounter any issues with your Gillette Intimate Trimmer I3, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Hair buildup in blades; blades need lubrication.	Clean the trimming head thoroughly. Apply a drop of light machine oil to the blades.

Problem	Possible Cause	Solution
Battery life is shorter than expected.	Partial charge; old battery.	Ensure the trimmer is fully charged before each use. If the issue persists after prolonged use, the battery may be nearing the end of its lifespan.
Skin irritation after trimming.	Improper technique; sensitive skin.	Ensure skin is stretched during trimming. Use the sensitive skin comb. Consider using a pre-shave oil or post-shave balm.

## SPECIFICATIONS

Feature	Detail
Brand	Gillette
Model Number	BG3 exWE
Power Source	Battery Powered
Battery Life	Up to 80 minutes (cordless)
Special Feature	Waterproof
Blade Material	Stainless Steel
Color	Blue
Target Audience	Men
Package Dimensions	20.8 x 11.1 x 5.7 cm; 320 grams
Manufacturer	Procter & Gamble
Date First Available	July 31, 2023

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Gillette website. Keep your purchase receipt as proof of purchase for any warranty claims.

## Related Documents - BG3 exWE

[illegible]