

TELEFUNKEN T-11-400-W

Telefunken T-11-400-W Condenser Dryer User Manual

Model: T-11-400-W | Brand: TELEFUNKEN

INTRODUCTION

Thank you for choosing the Telefunken T-11-400-W Condenser Dryer. This appliance is designed to provide efficient and convenient drying for your laundry. To ensure safe and optimal performance, please read this user manual thoroughly before operating the dryer and keep it for future reference.

This 7 kg capacity condenser dryer features 15 programs, a delay start function, anti-crease protection, and reversible drum movements, all designed to simplify your laundry routine.

SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance.

General Safety

- This appliance is intended for household use only.
- Do not allow children to play with or operate the dryer.
- Ensure the dryer is placed on a stable, level surface.
- Do not install the dryer behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Never block the ventilation openings of the dryer.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items containing foam rubber (latex foam), shower caps, waterproof textiles, articles backed with rubber and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that will not damage them.

- Remove all objects from pockets such as lighters and matches.

Electrical Safety

- Connect the dryer to a grounded electrical outlet with the correct voltage and current rating.
- Do not use extension cords or adapters.
- Unplug the dryer before cleaning or performing any maintenance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

Installation Safety

- Ensure adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

SETUP

Unpacking and Placement

Carefully remove all packaging materials from the dryer. Inspect the appliance for any damage incurred during transit. Place the dryer on a firm, level floor. Ensure there is sufficient space around the appliance for proper ventilation.



Image: Front view of the Telefunken T-11-400-W Condenser Dryer with its dimensions clearly marked. The dryer measures 84.5 cm in height, 59.6 cm in width, and 52.3 cm in depth.



Image: A full front view of the Telefunken T-11-400-W Condenser Dryer, showcasing its white finish and the central loading door.

Leveling the Appliance

Use a spirit level to ensure the dryer is perfectly level. Adjust the adjustable feet at the bottom of the appliance as needed to achieve stability and prevent vibrations during operation.

Electrical Connection

Plug the dryer into a dedicated, grounded electrical outlet. Ensure the power supply matches the requirements specified on the appliance's rating label.

Drainage (Condenser Dryer)

As a condenser dryer, this model collects water in a removable container. You can either manually empty this container after each cycle or connect a drainage hose (if supplied or purchased separately) to a permanent drain for continuous drainage.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: A detailed view of the dryer's control panel, showing the LED display and various function buttons for delay start, drying time, drying level, delicates, anti-crease, and start/pause.

The control panel features an LED display for cycle information and various buttons for selecting options and starting/pausing the dryer.

Program Selection

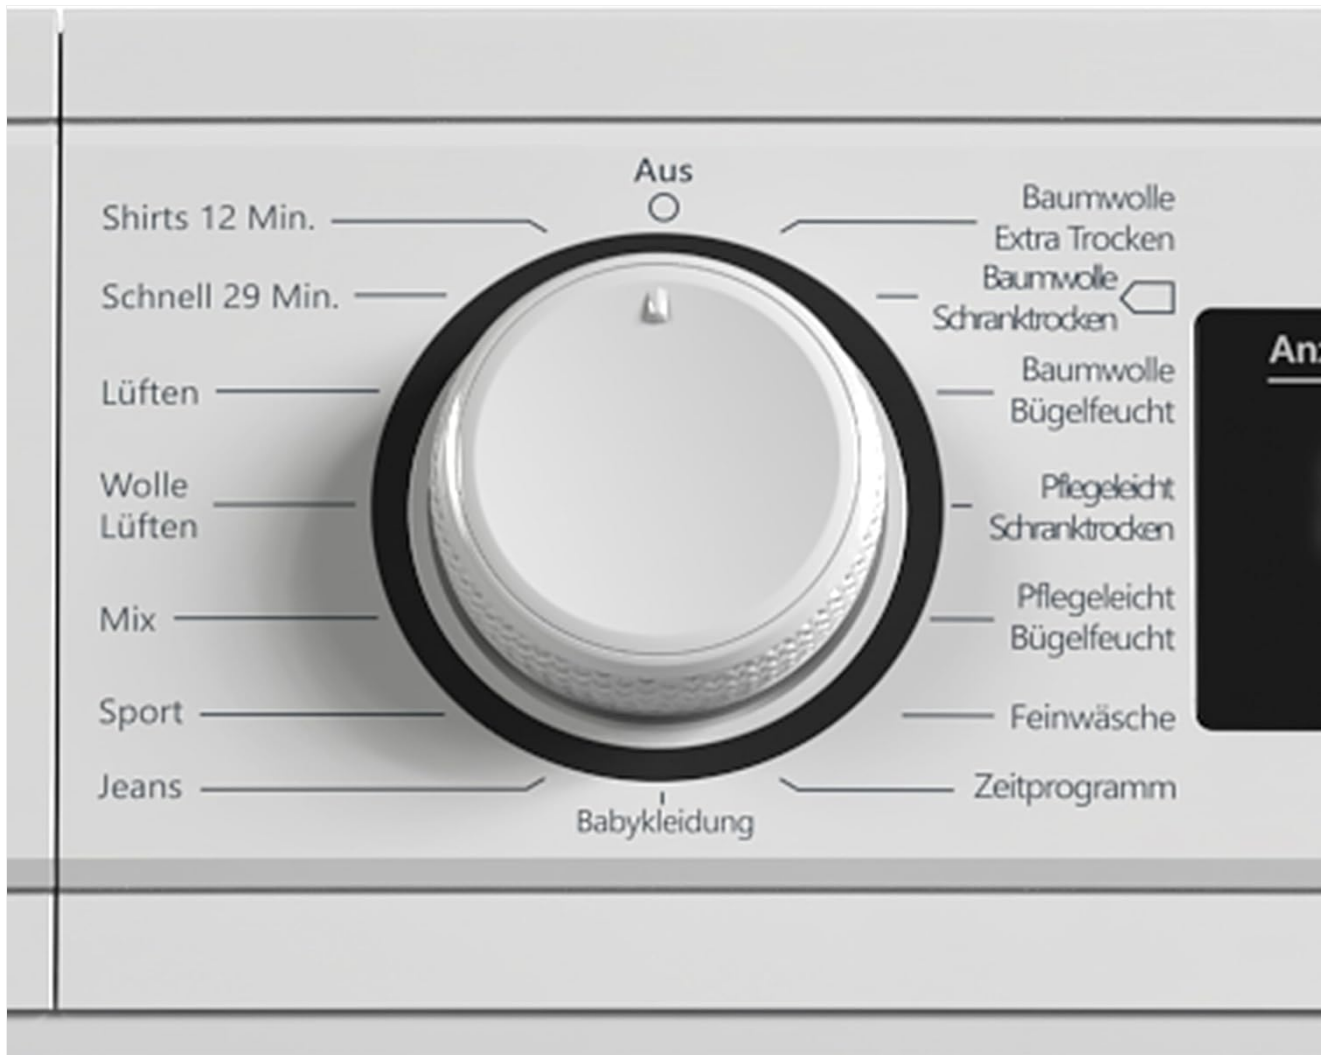


Image: A close-up of the program selection dial on the Telefunken T-11-400-W dryer, showing various drying programs such as Cotton, Easy Care, Delicates, Mix, Jeans, and Quick programs.

Turn the program selection dial to choose the desired drying program. The dryer offers 15 distinct programs:

- **Cotton Extra Dry:** For very thick cotton items that require thorough drying.
- **Cotton Cupboard Dry:** For cotton items that will be stored directly after drying.
- **Cotton Iron Dry:** For cotton items that will be ironed after drying.
- **Easy Care Cupboard Dry:** For synthetic or mixed fabrics that will be stored directly.
- **Easy Care Iron Dry:** For synthetic or mixed fabrics that will be ironed.
- **Delicates:** Gentle drying for sensitive fabrics.
- **Mix:** For mixed loads of cotton and synthetic items.
- **Baby Clothes:** Specific program for baby garments.
- **Timed Program:** Allows manual setting of drying time.
- **Jeans:** Optimized for drying denim items.
- **Refresh:** For airing out clothes without heat.
- **Quick 29 Min.:** A fast drying cycle for small loads.
- **Shirts/Blouses 12 Min.:** Quick drying for shirts and blouses.
- **Sport:** For sportswear.
- **Wool Refresh:** Gentle program for refreshing wool items.

Starting a Drying Cycle

1. Load the laundry into the drum, ensuring not to overload. The maximum capacity is 7 kg.

2. Close the dryer door firmly.
3. Select the appropriate program using the program dial.
4. Adjust any desired options (e.g., Delay Start, Drying Level) using the control buttons.
5. Press the **Start/Pause** button to begin the cycle.

Special Features

- **Delay Start:** Allows you to postpone the start of the drying cycle by a set number of hours.
- **Anti-crease:** Minimizes creasing by periodically tumbling the load after the main drying cycle.
- **Child Lock:** Prevents accidental changes to settings during operation. Activate/deactivate by pressing and holding the designated button(s) as indicated on the control panel.
- **Drum Lighting:** Illuminates the drum for better visibility when loading and unloading.
- **Reversible Drum Movements:** Helps to prevent tangling and ensures more even drying.
- **Remaining Time Indicator:** Displays the estimated time left for the current drying cycle.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dryer.

Cleaning the Lint Filter

The lint filter should be cleaned after every drying cycle to maintain optimal airflow and drying performance. Open the dryer door and locate the filter inside the drum opening. Remove the filter and gently wipe away accumulated lint. Reinsert the clean filter.



Image: The Telefunken T-11-400-W Condenser Dryer with its door open, revealing the interior drum and the location of the lint filter at the bottom of the door opening.

Emptying the Water Container

The water container collects condensed water during the drying process. It must be emptied after each cycle to prevent the dryer from stopping prematurely. The container is typically located at the top left of the appliance. Pull it out, empty the water, and push it back in until it clicks into place.

Cleaning the Condenser

The condenser should be cleaned periodically (e.g., monthly or every few cycles, depending on usage) to ensure efficient operation. Refer to the specific instructions in your full manual for accessing and cleaning the condenser unit, which is usually located behind a lower panel.

General Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents. Clean the door seal regularly to prevent lint buildup.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dryer does not start.	Power cord not plugged in; Door not closed properly; Child lock activated; Fuse blown.	Check power connection; Ensure door is fully latched; Deactivate child lock; Check household fuse/circuit breaker.
Clothes are not drying properly.	Lint filter clogged; Water container full; Overloaded; Incorrect program selected; Condenser dirty.	Clean lint filter; Empty water container; Reduce load size; Select appropriate program; Clean condenser.
Dryer is noisy.	Appliance not level; Foreign objects in drum; Load unbalanced.	Adjust leveling feet; Check drum for foreign objects; Redistribute laundry evenly.
Water leaks from the dryer.	Water container not inserted correctly; Drainage hose kinked or blocked (if connected).	Ensure water container is fully inserted; Check drainage hose for kinks or blockages.

SPECIFICATIONS

Detailed technical specifications for the Telefunken T-11-400-W Condenser Dryer:

Manufacturer	TELEFUNKEN
Model Identifier	T-11-400-W
Product Dimensions (H x W x D)	84.5 x 59.6 x 52.3 cm
Weight	30.5 Kilograms
Capacity	7 Kilograms
Annual Energy Consumption	504 kWh per year (Weighted) / 276 kWh per 100 cycles (Energy Label)
Noise Emission	65 dB(A)
Installation Type	Freestanding
Construction Type	Front-loader
Special Features	Drum lighting, Reversible drum movements, Anti-crease
Color	White
Material	Alloyed Steel, Plastic
Country of Origin	Turkey

Product Data Sheet and Energy Label

For detailed regulatory information, please refer to the official product data sheet and energy label:

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2023/2534 DER KOMMISSION in Bezug auf die Energieverbrauchskennzeichnung von Haushaltswäschetrocknern

Name oder Handelsmarke des Lieferanten: TELEFUNKEN

Anschrift des Lieferanten: Customer Support, PARKRING 6, 85748 GARCHING, DE

Modellkennung: T-11-400-W

Technologie des Wäschetrockners Elektrischer Kondensationswäschetrockner

Allgemeine Produktparameter:

Parameter	Wert		Parameter	Wert	
Nennkapazität (kg)	7,0		Abmessungen in cm	Höhe	85
				Breite	60
				Tiefe	53
Energieeffizienzindex (EEI)	175,8		Energieeffizienzklasse	G	
Kondensationseffizienz (%) (falls zutreffend)	81		Kondensationseffizienzklasse (falls zutreffend)	D	
Gewichteter Energieverbrauch in kWh pro Trocknungszyklus. Der tatsächliche Energieverbrauch hängt von der jeweiligen Nutzung des Geräts ab.	2,76				
Programmdauer (Stunden:Minuten)	Nennkapazität	2:05	Art	Frei stehend	
	halbe Nennkapazität	1:27			
Luftschallemissionen (dB(A) re 1 pW)	65		Luftschallemissionsklasse	C	
Aus-Zustand (falls zutreffend) (W)	0,50		Bereitschaftszustand (falls zutreffend) (W)	1,00	
Zeitvorwahl (W) (falls zutreffend)	4,00		vernetzter Bereitschaftsbetrieb (W) (falls zutreffend)	0,00	
Weblink zu Informationen über die Verfügbarkeit von Ersatzteilen für fachlich kompetente Reparateure und Endnutzer				https://de.aswo.com/	
Weblink zu Reparaturanweisungen für Endnutzer				https://support.vestel-germany.de/hc/de	
Weblink zu Richtbeträgen für die Preise vor Steuern				https://de.aswo.com/	
Mindestlaufzeit der vom Lieferanten angebotenen Garantie				24	

Weitere Angaben:

Weblink zur Website des Lieferanten, auf der die Informationen gemäß Anhang II Nummer 6 der Verordnung (EU) 2023/2533 der Kommission zu finden sind: <https://www.vestel-germany.de>

Das Modell wurde auf dem Unionsmarkt in Verkehr gebracht, und zwar ab dem 10.



EPREL-Eintragungsnummer 2244137

<https://eprel.ec.europa.eu/qr/2244137>

Lieferant: Vestel Holland B.V. Germany Branch Office (Hersteller)

Website:

Kundenbetreuung:

Name: Customer Support

Website:

E-Mail-Adresse: info@vestel-germany.de

Telefonnummer: +49 89 55295 0

Anschrift:
PARKRING 6
85748 GARCHING
Deutschland

Image: The official product data sheet for the Telefunken T-11-400-W, detailing its specifications, energy consumption, and other regulatory information. A QR code links to the EPREL database.

[View Product in EPREL Database](#)




TELEFUNKEN

T-11-400-W



276 kWh / 100

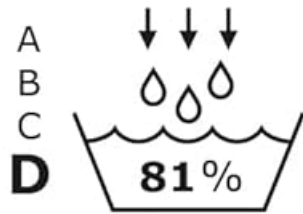

2023/2534

Image: The EU Energy Label for the Telefunken T-11-400-W Condenser Dryer, indicating an energy efficiency class of G, an energy consumption of 276 kWh per 100 cycles, a noise level of 65 dB, and a 7 kg capacity.

WARRANTY AND SUPPORT

Your Telefunken T-11-400-W Condenser Dryer comes with a user manual included in the box, providing detailed instructions and information.

For technical support, spare parts, or repair services, please refer to the following resources:

- General Support: <https://support.de.aswo.com/>
- Vestel Germany Support: <https://support.vestel-g.ermany.de/>
- ASWO Website: <https://www.aswo.com/>

Please retain your proof of purchase for warranty claims.