

IINE B53

IINE Wireless PC Controller User Manual

Model: B53 | Brand: IINE

1. INTRODUCTION

1.1 Product Overview

The IINE Wireless PC Controller (Model B53) is a versatile gaming controller designed for multi-platform compatibility, offering an enhanced gaming experience across various devices. It features advanced Hall Effect joysticks and linear triggers for precision and durability, along with customizable functions like macro programming and adjustable vibration.



Image: The IINE Wireless PC Controller shown with an attached phone holder and a separate Bluetooth adapter.



Image: Illustration highlighting the ergonomic design of the controller, emphasizing comfortable grip.

1.2 Package Contents

Please verify that all items are present in the package:

- Game Controller x 1
- Bluetooth Adapter x 1
- Phone Holder x 1
- USB Cable x 1
- User Manual x 1

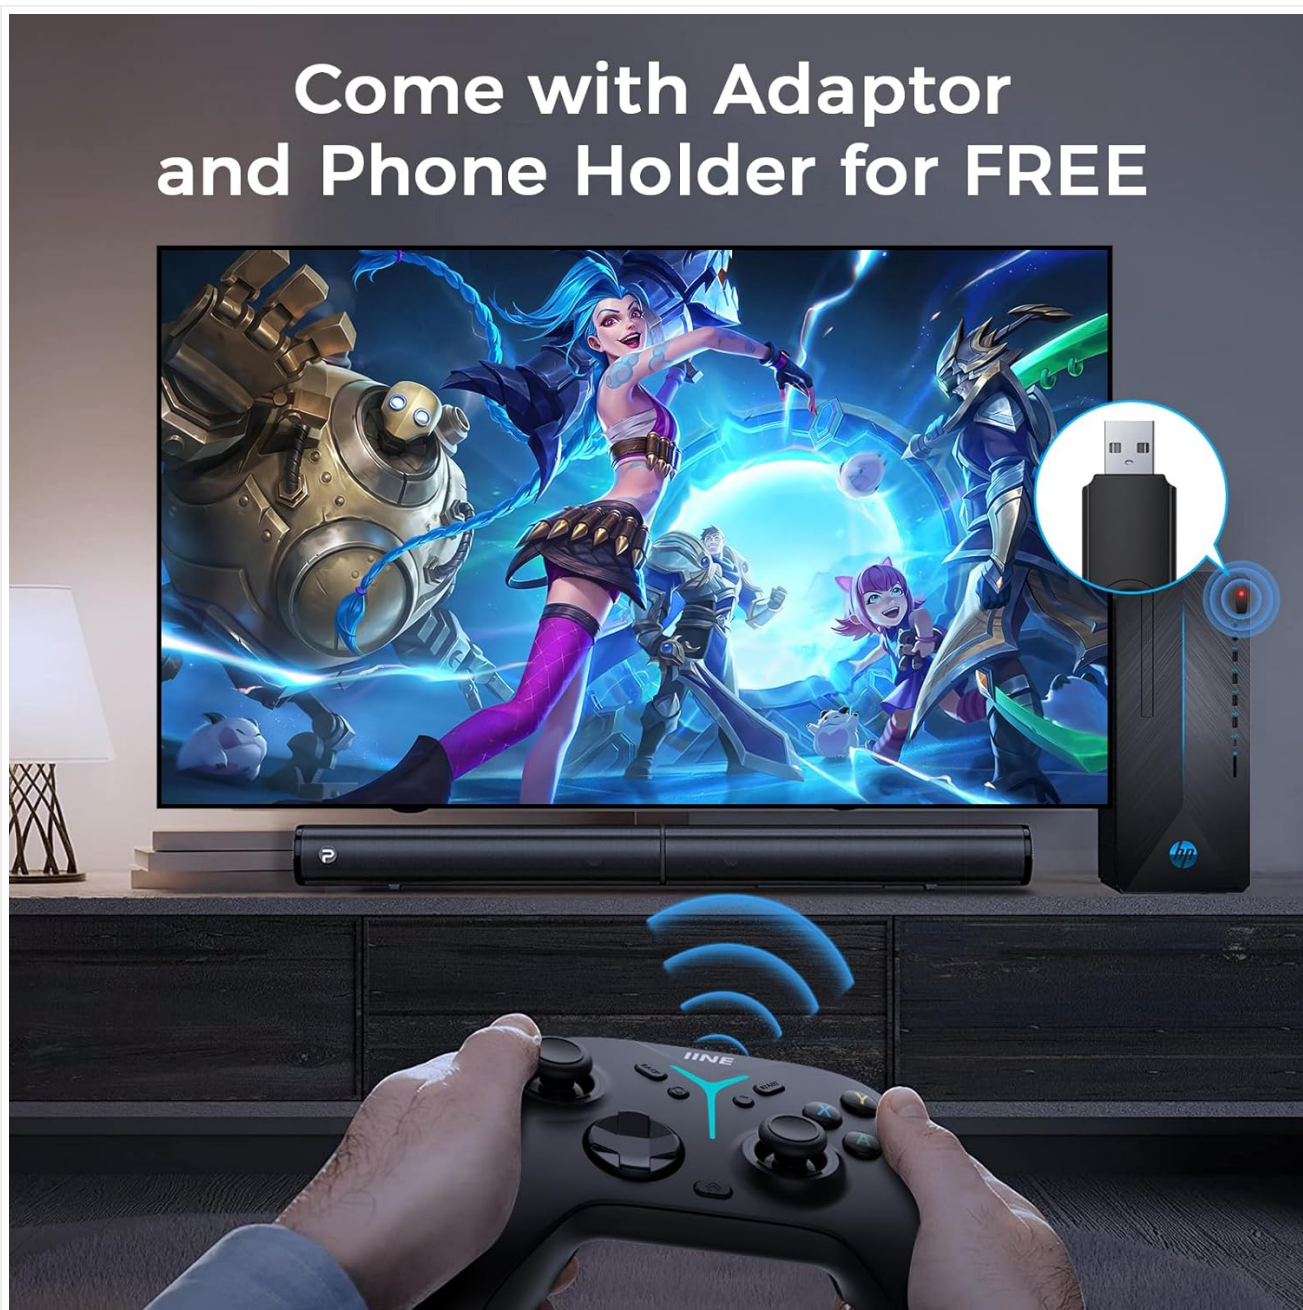


Image: The controller, Bluetooth adapter, and phone holder are displayed as included accessories.

2. SETUP

2.1 Charging the Controller

Before initial use, fully charge the controller using the provided USB cable. Connect the USB cable to the controller's charging port and a compatible USB power source.

- **Battery Capacity:** 860mAh
- **Runtime:** Approximately 10 hours
- **Full Charge Time:** Approximately 3-4 hours



Image: A cutaway view of the controller highlighting the internal 860mAh battery and its specifications.

2.2 Connecting the Controller

The controller supports both wireless and wired connections. Use the switch on the back of the controller to select the appropriate platform mode.



Image: A visual guide illustrating the controller's compatibility with Switch, Pad, PC, Phone, Android TV, TV Box, SteamDeck, and Tesla, and the platform selection switch.

2.2.1 Platform Selection

Use the physical switch located on the back of the controller to select one of the following modes:

- **PC/NS:** For PC and Nintendo Switch.
- **iOS:** For Apple mobile devices.
- **AN:** For Android devices.
- **TOUCH:** For specific touch-based platforms (e.g., Tesla, some mobile games).

Universal Compatibility



Back Switch, One-Key
to Switch Platform

Image: The controller's back switch is highlighted, showing the different platform modes (PC/NS, iOS, AN, TOUCH) and corresponding device icons.

2.2.2 Wireless Connection (Bluetooth Adapter)

For wireless connection to PC or other compatible devices, plug the included Bluetooth adapter into a USB port on your device. The controller will automatically attempt to pair. Ensure the controller is in the correct platform mode.

2.2.3 Wired Connection

Connect the controller directly to your device using the provided USB cable. This method is suitable for platforms that support wired input or when wireless connection is not desired.

3. OPERATING INSTRUCTIONS

3.1 Hall Effect Joysticks

The controller is equipped with Hall Effect joysticks, utilizing electromagnetic induction for input. This technology minimizes wear and tear, preventing stick drift and ensuring high precision and a long lifespan.

- **No Dead Zone:** Provides immediate response to input.

- **High Accuracy:** Precision over 0.01.

Hall Effect Joystick



Electromagnetic Induction
No dead zone & no drift



Implement Fine Operation
Accuracy over 0.01



Image: An exploded view showing the internal components and electromagnetic induction principle of the Hall Effect Joystick.

3.2 Hall Effect Linear Triggers

The linear triggers also use Hall Effect technology, offering precise and consistent input. They feature adjustable travel distances to suit different game genres.

- **Long Button Travel:** Suitable for racing games, allowing fine acceleration control.
- **Medium Button Travel:** Suitable for most games, offering a balanced response.
- **Short Button Travel:** Suitable for shooting games, enabling rapid firing.

Hall Effect Linear Trigger

0.1 mm high precision experience for different accelerator sizes



Long
Button Travel

Suitable for
racing games



Medium
Button Travel

Suitable for
most games



Short
Button Travel

Suitable for
shooting games

Struction chart for reference ONLY, The actual is more precise

Image: A visual representation of the three adjustable trigger travel settings: long, medium, and short, with their recommended game types.



UPGRADE HALL EFFECT TRIGGER

3 Trigger position adjustable, allow you to operate more precisely in different games



1. Shorter Gear

Suitable for Shooting games



2. Medium Gear

Suitable for most games
as you like



3. Longer Gear

Suitable for racing games

Image: A detailed view of the trigger mechanism, showing how the 3-position adjustment works for different gaming scenarios.

3.3 6-Axis Gyro Somatosensory

The integrated 6-axis gyro sensor allows for motion-based controls, enhancing immersion and precision in compatible games.

- **Visual Angle Adjust:** Control camera angles by tilting the controller.
- **Direction Control:** Steer or move characters using motion.
- **Aim Shooting:** Fine-tune aiming in shooting games.



Image: Three panels demonstrating the gyro sensor's use for visual angle adjustment, direction control in a racing game, and aim shooting in an FPS game.

3.4 Programmable Rear Buttons (M1, M2)

The controller features two programmable buttons (M1 and M2) on the back, allowing users to map complex actions or frequently used commands for improved operational efficiency.

Programmable Button on The Back

Using all skills in one button, improve the operational efficiency and convenience of games or applications



Image: A view of the controller's back, highlighting the M1 and M2 programmable buttons.

3.5 Turbo Function

The Turbo function allows for rapid, repeated input of a button press, reducing finger fatigue in games requiring fast button mashing.

- **Auto Turbo:** Continuously fires when activated, even without holding the button.
- **Manual Turbo:** Fires repeatedly only while the assigned button is held down.
- **Adjustable Rate:** Turbo speed can be adjusted between 5 and 20 presses per second.

Auto & Manual Turbo Function

Increase the firing rate in shooting games and reduce finger fatigue



Image: A visual demonstrating the effect of the Turbo function in a shooting game, showing rapid firing.

3.6 Vibration Adjustment

The controller features adjustable vibration intensity to suit personal preference and game feedback.

- **5 Speed Levels:** Adjust vibration intensity from 0% to 100%.
- **In-game Feedback:** Vibration enhances immersion for events like collisions, explosions, and fighting.



Image: A graphic illustrating the five adjustable vibration levels (0, 25, 50, 75, 100) and examples of in-game events that trigger vibration.

3.7 Left Joystick & D-Pad Function Switchable

The functionality of the left joystick and D-pad can be swapped on the fly, providing flexibility for different game control schemes.

- **PC Mode:** Double-click the **Back** button to switch.
- **NS Mode:** Double-click the **Screenshot** button to switch.



Image: A visual guide demonstrating the process of swapping the functions of the left joystick and D-pad, with examples of use in attaching and defending scenarios.

3.8 One Button Wake Up (Nintendo Switch)

When connected to a Nintendo Switch, the controller can wake the console from sleep mode by pressing the Home button.



Image: The controller's Home button is highlighted, showing its function to wake up a connected Nintendo Switch console.

3.9 KeyLinker App Customization

The controller supports the KeyLinker mobile application for advanced customization of various settings. The app allows for fine-tuning of joystick sensitivity, dead zones, vibration intensity, turbo frequency, key mapping, and RGB lighting.

- **Joystick Sensitivity & Dead Zone:** Adjust for precise control.
- **Vibration Intensity:** Customize feedback levels.
- **Turbo Frequency:** Set desired rapid-fire rates.
- **Key Mapping:** Remap buttons to suit your playstyle.
- **RGB Lighting:** Personalize the controller's illumination.



Image: Multiple screenshots of the KeyLinker app demonstrating options for joystick adjustment, key mapping, and RGB light settings.

3.10 Adjustable Lighting

The controller features adjustable RGB lighting for personalization. The lighting can be controlled directly on the controller or through the KeyLinker app.

- **Change Color:** Hold down the Turbo button + Left joystick.
- **Change Mode:** Hold down the Turbo button + double-click Left joystick (Static, Breathing).
- **Adjust Brightness:** Hold down the Turbo button + Left joystick.
- **Turn Off Light:** Double-press the Left joystick.



Image: A visual guide detailing the button combinations for changing color, mode, brightness, and turning off the controller's adjustable LED lights.

4. MAINTENANCE

4.1 General Care

To ensure the longevity of your controller, follow these guidelines:

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble the controller, as this may void the warranty.
- Store the controller in a safe place when not in use to prevent damage.

4.2 Battery Care

The controller contains a rechargeable 860mAh battery. To maximize battery life:

- Charge the controller fully before first use.
- Avoid completely draining the battery frequently.
- If storing for an extended period, charge the battery to approximately 50% and store in a cool, dry place.

5. TROUBLESHOOTING

5.1 Connectivity Issues

- **Controller not connecting:** Ensure the controller is charged and the correct platform mode is selected on the back switch. Try re-pairing or connecting via USB cable.
- **Bluetooth adapter issues:** Ensure the adapter is securely plugged into a working USB port. Try a different USB port.

5.2 Button/Joystick Malfunctions

- **Stick drift:** The Hall Effect joysticks are designed to prevent drift. If experiencing issues, try recalibrating through the KeyLinker app or performing a factory reset.
- **Rear button remapping issues:** Be aware that remapping rear buttons by holding them for 3 seconds can inadvertently trigger remapping mode. Avoid holding these buttons for extended periods during gameplay if they are mapped to actions that require continuous input. Mappings are subject to other button configurations.

5.3 App-Related Issues (KeyLinker)

- **App not connecting to controller:** Ensure Bluetooth is enabled on your mobile device and the controller is in a compatible mode.
- **Settings not saving:** After making changes in the app, ensure they are applied or saved to the controller's profile. Configurations are saved on the controller itself.

5.4 Specific Game Compatibility

- **Call of Duty Mobile:** This game may have limited controller support. The controller might work partially in 'Touch' mode (joysticks only) or require third-party remapper apps for full functionality. Android mode may not be recognized.

6. SPECIFICATIONS

Model	B53
ASIN	B0CD7QYSX1
Connectivity	Wireless (Bluetooth), Wired (USB-C)
Compatibility	PC, iPhone, Android, Switch/OLED, Steamdeck, Tesla, Pad
Joystick Type	Hall Effect
Trigger Type	Hall Effect Linear (3-position adjustable)
Buttons	Mechanical ABXY, Programmable Rear Buttons (M1, M2)
Sensor	6-Axis Gyro
Battery	860mAh rechargeable (1 AAA battery included for adapter, if applicable)
Runtime	Approx. 10 hours
Charge Time	Approx. 3-4 hours
Dimensions	8.07 x 7.76 x 3.27 inches (Package)
Weight	1.03 pounds (Item)
Manufacturer	WEUTOP
First Available	July 31, 2023

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The IINE Wireless PC Controller comes with a**12-month warranty service** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact IINE customer support. We offer**24-hour after-sales service** to assist you.

Refer to the product packaging or the official IINE website for the most current contact information.

Related Documents

	IINE Athena Wireless Controller: Setup, Features, and Usage Guide Comprehensive guide to the IINE Athena Wireless Controller (Model L969). Learn about button layout, compatibility, connection methods for Switch, PC, and mobile, advanced settings like macros and turbo fire, charging, maintenance, and troubleshooting.
	IINE Mini Retro Ananke Controller User Manual and Specifications Comprehensive guide for the IINE Mini Retro Ananke Controller, covering setup, connection, features, troubleshooting, and maintenance for Nintendo Switch, PC, and mobile devices.

Documents - IINE – B53




[pdf] User Manual
Asahi Pentax Program Plus Instruction Manual manualzilla manuals archive org details id 7076308 null text
D Neck strap ring 9 Exposure counter Y Film wind lever 9 Shutter release button 0 Shutter
auto lock ... 00m 9 0497 - 0503 0595 - 0.605 0.791 - 0810 0.985 - 1016 464 - 1538 1935 -
2070 2 **B53** - 3164 8 488 - 12.171 55 370 495 - 0505 0 593 - 0607 0 787 - 0 84 0.978 -
1.023 1.44...
lang:it score:30 filesize: 5.12 M page_count: 72 document date: 2021-06-08



[pdf] User Manual Instructions Safety Datasheet
160992A80X 202207 Instruction manual GBH 2 26 F GBH 25 10 1 MBGBH Rotary Hammer with SDS plus
Bosch Professionalo392543v21 202207bosch professional binary manualsmedia o392543v21 |||
Robert Bosch Power Tools GmbH 70538 Stuttgart GERMANY www.bosch-pt.com 1 609
92A 80X 2022.07 TAG / ... on Mauerwerk mit Hohlbohr-krone Stahl Holz GBH 2-25 GBH 2-
25 F GBH 2-26 GBH 2-26 F 3 611 **B53** 5.. 3 611 B54 6.. 3 611 BA3 0.. 3 611 BA4 0.. - - W
790 790 83...
lang:tl score:26 filesize: 10.06 M page_count: 243 document date: 2022-07-01

[pdf] User Manual Instructions Safety Datasheet Label

160992A9A9 202404 o458514v21 202404media bosch pt co in binary manualsmedia Instruction manual GBH 2-26 DFR GBH DRE RE 11 3 MBGBH Rotary Hammer with SDS plus Bosch Professionalo458514v21 202404o458514v21 sg 3 MBInstrucțiuni de utilizareGBH ProfessionalBosch Unelte Ciocan rotopercutor 880 W 0611253708 Sanitino roo458514v21 2024040611253708 instrucțiuni de utilizareo458514v21 202404data sanitino eu LABEL attc 120992 95567ec967f0 utilizare v 14da00a2media 3 MB 11 3 MBInstrucțiuni ProfessionalGBH plus Bosch hk ||| ||| Robert Bosch Power Tools GmbH 70538 Stuttgart GERMANY www.bosch-pt.com 1 609 92A 9A9 2024.04 TAG / 259 1 609 92A 9A9 GBH 2-26 Professional RE DRE DFR de Originalbetriebsanleitung en Original instructions fr Notice originale es Manual origin ||| Robert Bosch Power Tools GmbH 70538 Stuttgart GERMANY www.bosch-pt.com 1 609 92A 9A9 2024.04 TAG / 259 1 609 92A 9A9 GBH 2-26 Professional RE DRE DFR de Originalbetriebsanleitung en Original instructions fr Notice originale es Manual origin ||| Robert Bosch Power Tools GmbH 70538 Stuttgart GERMANY www.bosch-pt.com 1 609 92A 9A9 2024.04 TAG / ... Bohrrhammer Sachnummer Drehzahlsteuerung Drehstopp GBH 2-26 RE 3 611 B51 7.. - GBH 2-26 DRE 3 611 **B53** 7.. GBH 2-26 DFR 3 611 B54 7.. Bosch Power Tools 1 609 92A 9A9 15.04.2024 10 Deut... lang:tl score:22 filesize: 11.26 M page_count: 259 document date: 2024-04-15

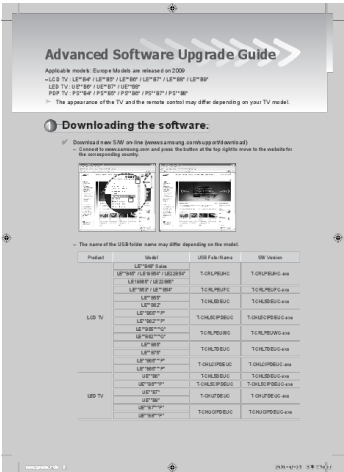

[pdf] Guide

6000 32 LED TV Samsung Support UKContentsFile.aspxorg center samsung file ContentsFile.aspx CDSite UNI UK OriginYN N ModelType ModelName UE32B6000VW CttFileID 2276599 CDCttType FM VPath 201002 20100227161042250 SW upgrade guide Europe UKUE32B6000 Assistance FRorg Europeorg FR ||| Advanced Software Upgrade Guide Applicable models: Europe Models are released on 2009 L CD TV : LE* ... Product LCD TV LED TV Model LE**B46* Seies LE**B45* / LE19B54* / LE22B54* LE19B65* / LE22B65* LE****B53*** / LE**B54* LE**B55* LE**B62* LE**B55***P* LE**B62***P* LE**B55***Q* LE**B62***Q* LE**B65* LE*... lang:en score:18 filesize: 16.22 M page_count: 116 document date: 2010-02-27



[pdf] Guide

Singer Sewing Machine 138K1 User Guide 8d24d787 32ca 43c4 c598 75a2b791f6f2 text archive org manualsonline id Su U i S lc . IvTi / 0 ILLUSTRATED LIST OF PARTS IOR SINGER MACHINE No. 138K1 *A Trademark .I I ... and Brass Plated. 20 INS rui I IONS I OK KI KK1N ; Clout in i led. New Code 849 850 851 852 **B53** 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 Old Cod T.M. X.C. Z.A. 7.B. Z.C. Z... lang:en score:18 filesize: 2.98 M page_count: 19 document date: 2020-09-27

N720 OpenLinux Hardware User Guide

Issue 1.4
Date 2019-03-25

Neoway Product Document



[\[pdf\]](#) Instructions Guide

Hardware User Guide N720 OpenLinux J Neoway V1 4 wless ru files GSM |||

N720 OpenLinux Hardware User Guide Issue 1.4 Date 2019-03-25 Neoway Product Document N720 OpenLinu ... China/India Cat4 TD-SCDMA: B34, B39 UMTS: B1, B8 GSM/GPRS/EDGE: 900/1800 MHz FDD-LTE: B1, B3, **B53**, B7, B8, B20 EA Europe Cat4 FDD-LTE: B403 GNSS1 support support support 1 GNSS optional fo...


lang:en **score:17** filesize: 3.15 M page_count: 94 document date: 2019-04-03

[\[pdf\]](#) User Manual Instructions

Istruzioni Di Montaggio Italiano English Deutsch Français Español Português Nederlands Polski Česky Română Magyar Русский Ελληνικά Türkçe Svenska Norsk Suomi ISTRUZIONI DI MONTAGGIO ASSEMBLY 205732 setup manual 1 images obi de PROD DE document 205 |||

Italiano English Deutsch Franais Espao Portuguese Nederlands Polski Cesky Romn Magyar Trke Svenska ... 1 superiore fig. 1 . Posizionare le colonnine C07 mantenendo l orientamento dei fori dell elemento **B53** verso il centro della scala e facendo in modo che la svasatura dell elemento rimanga verso l int...

lang:it **score:16** filesize: 2.23 M page_count: 64 document date: 2017-06-23

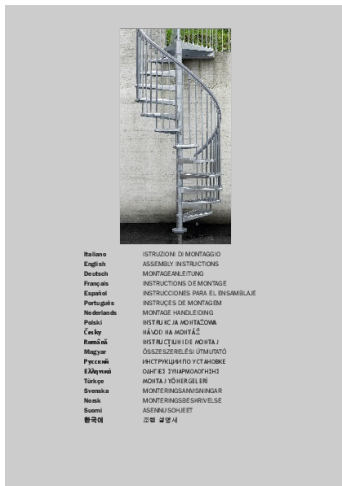



[\[pdf\]](#) Catalog

6721820567 001 DCL3634 fm bef8we rfjakv2fon4eessdmmgd dokument BOSCH aftrækspakke 60 100mm til skorsten B53 342141446 billigt! – WATTOO DK wattoo dk media catalog product files |||

FC-Set60-**B53** 1 87 55 124 60 125 3 4x 12 252 385 1 65 61 7738113233 75 4 155 102 196 155 196 92 2 5 500 9 01 // 100 62 125 44 10 65 40 11 60 350 60 100 158 i 14 6x 15 6x 60 A 13 500 385 8 SILICONE 156 60 6 80 0010031789-001 7738112534 A 8716111801 1....

lang:de **score:15** filesize: 1.94 M page_count: 12 document date: 2020-02-25

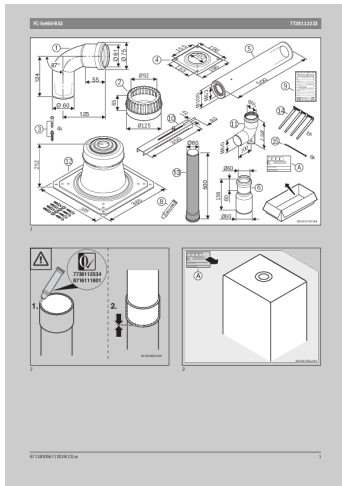

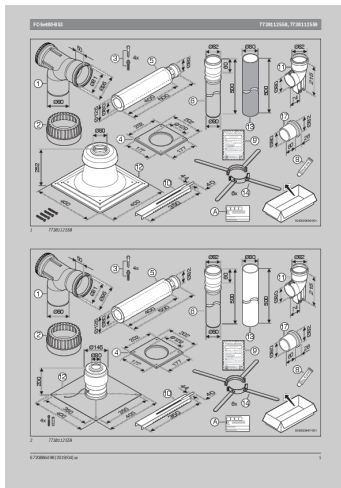


[pdf]

untitled Montageanleitung BOSCH Abgaszubehör FC Set80 B53 oben Grundbausatz Edelstahl d 80mm

7738112559 bomaim 6720886498 000 00 shkhelden de media 0a 94 83 1714666191 |||

FC-Set80-**B53** 7738112558, 7738112559 50 3 4x 5 82 80 82 60 500 81 95 1 80 2 252 400 1 7738112558 125 80 80 400 500 6 202 4 177 12 129202 177 44 10 400 350 80 01 // i 13 9 40 6x 14 A 80 500 80 82 11 74 17 26 60 8 0010020496-001 SILICONE 82 215 50 3 4x 5 82 80 ...

lang:de score:15 filesize: 3.06 M page_count: 12 document date: 2019-05-10

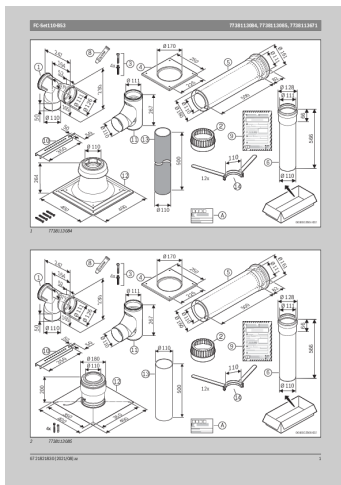

[pdf]

6721821830 002 DCL3703 fm bef8we Montageanleitung BOSCH Abgaszubehör FC Set110 B53 Grundbausatz Edelstahl d 110mm oben 7738113085 bomaim 000 00 shkhelden de media 45 38 f9 1714667609 |||

FC-Set110-**B53** 7738113084, 7738113085, 7738113671 66 566 50 247 1 164 52 87 165 110 50 10 350 111 126 230 SILICONE 8 4x 34 111 170 250 226 5 500 82 128 111 161 111 267 500 110 160 110 50 110 11 13 12 2 9 110 01 // i 12x 14 6 110 264 400 400 110 ...

lang:de score:15 filesize: 3.42 M page_count: 16 document date: 2021-09-13




[pdf] User Manual Instructions Safety Datasheet

160992A625 202201 Lektorat ManualBOSCH GBH 2 26 DFR PROFESSIONAL Fúrókalapács SDS Plus

0611254768EU BOSCH 0611254768 manualkamody cz soubory relatedfile EU manual |||

Robert Bosch Power Tools GmbH 70538 Stuttgart GERMANY www.bosch-pt.com 1 609 92A 625 2022.01 PS / ... sche Daten Bohrhämmer Sachnummer Drehzahlsteuerung GBH 2-26 RE 3 611 B51 7.. GBH 2-26 DRE 3 611 **B53** 7.. GBH 2-26 DFR 3 611 B54 7.. Bosch Power Tools 1 609 92A 625 11.01.2022 10 Deutsch...

lang:tl score:15 filesize: 5.65 M page_count: 261 document date: 2022-11-24

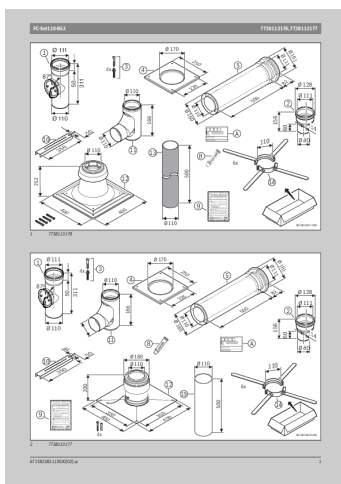


[pdf]

6721821831 001 DCL3704 fm sp8zle Montageanleitung BOSCH Abgaszubehör FC Set110 B53 Grundbausatz Kunststoff d 110mm 7738113176 bomaim 000 00 shkhelden de media e3 80 19 1714667832 |||

252 50 311 166 500 SILICONE 156 60 FC-Set110-**B53** 1 111 87 4x 3 4 110 170 250 226 110 160 110 50 10 110 350 110 11 13 8 12 7738113176,7738113177 161 111 5 500 82 128 111 2 A 110 6x 14 14 80 400 1 7738113176 400 110 9 01 // i 0010033057-001 1 111 87 ...

lang:de score:15 filesize: 3 M page_count: 12 document date: 2020-03-25

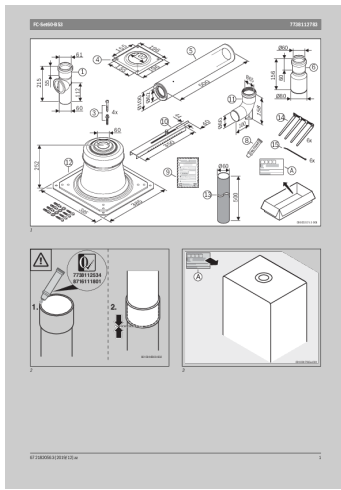


[pdf]

6721820563 001 DCL3630 fm bef8we Montageanleitung BOSCH Abgaszubehör FC Set60 B53 hinten

Grundbausatz d 60 7738112783 bomaim 000 00 shkhelden de media 3c a7 28 1714667482 |||

FC-Set60-**B53** 55 215 112 61 4 1 60 3 12 385 155 155 102 196 196 5 500 100 62 4x 44 10 40 60 350 60 65 11 100 8 385 9 01 // i 60 13 500 252 1 SILICONE 158 156 60 7738112783 60 6 80 14 6x 15 6x A 0010031741-001 7738112534 A 8716111801 1. 2. 0010016800-002 2 3 00...

lang:de **score:15** filesize: 1.94 M page_count: 12 document date: 2020-01-27

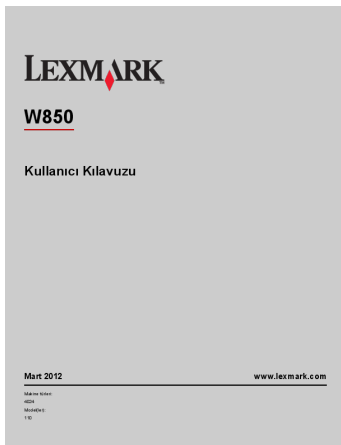


[pdf]

Kullanıcı Kılavuzu W850 v10622349 tr Lexmark International Inc Manuales y guías lexmark publications s 2007 w850 |||

W850 Kullanıcı Kılavuzu Mart 2012 Makine trleri: 4024 Model ler : 110 www.lexmark.com indekiler ... tement1, 2 139.7 x 215,9 mm 5,5 x 8,5 in Oficio Mxico 2 215.9 x 340,4 mm 8,5 x 13,4 in JIS **B53** 182 x 257 mm 7,17 x 10,1 in 1 A5 ve statementboyutlu kaitların her ikisi de yazıcı tepsileri...

lang:id **score:14** filesize: 4.98 M page_count: 216 document date: 2012-03-05

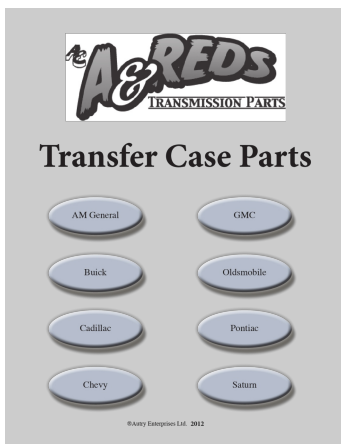


[pdf] User Manual

99 06 Chevy Silverado Repair Manual Pdf WIPER MANUALS GM Transfer Case CD Web1 areds |||

Transfer Case Parts AM General GMC Buick Oldsmobile Cadillac Pontiac Chevy Saturn Autry Ent ... 38 TC1225-142 TC3023-137 TC3023-138 2012 Autry Enterprises Ltd. MP3010 ILL A47 Bearing, thrust **B53** Bearing, caged open B55 Bearing, ball C57 Bearing, ball C58 Washer, spacer C59 Bearing, ball D...


lang:en **score:14** filesize: 3.59 M page_count: 88 document date: 2012-01-25

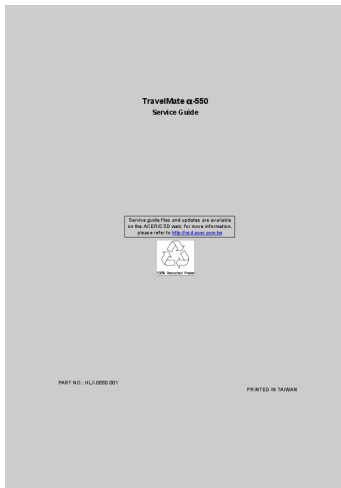

[\[pdf\]](#) User Manual Guide


a 550 book TravelMate α Service Guide tim id au This utility diskette is for the Acer notebook machine You Branch Offices and Regional Business Units may access our website aspire 1200 travelmate alpha 550 tim au laptops acer aspire |||

TravelMate -550 Service Guide Service guide files and updates are available on the ACER/CSD web; for ... B28 B29 B30 B31 B32 B33 B34 B35 B36 B37 B38 B39 B40 B41 B42 B43 B44 B45 B46 B47 B48 B49 B50 B51 B52 **B53** B54 B55 B56 B57 B58 B59 B60 B61 B62 B63 B64 B65 Signal S2 VS1 S2 A11 GND S2 10RD# S2 A9 S2 10WR... lang:en **score:13** filesize: 3.66 M page_count: 132 document date: 2001-12-21

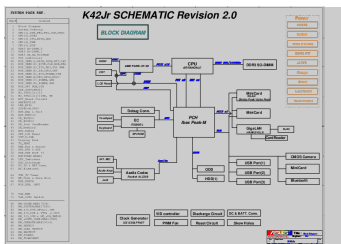

[\[pdf\]](#) Guide Diagram

K42JR MB R20 ER 1112 1822 Nic Wang Download Asus laptop Repair Guide PCB Layout Schematic Diagram ASUS Rev2 0 drive google file d 1ZTlywTDKZW7EEUFWZK4N0shjTlSiv8 view usp link ||| 5 SYSTEM PAGE REF. PAGE Content 1 Block Diagram 2 System Setting 3 CPU 1 _DMI,PEG,FDI,CLK,MISC 4 ... hm 2 150Ohm 2 150Ohm 2 1 R2312 1 R2317 1 R2316 1 1 1 GND CRT_B_PCH CRT_G_PCH CRT_R_PCH AA52 **AB53** AD53 CRT_BLUE CRT_GREEN CRT_RED 47 DDC_CLK_PCH 47 DDC_DATA_PCH V51 V53 CRT_DDC_CLK CRT_D... lang:de **score:13** filesize: 1.49 M page_count: 97 document date: 2019-01-14

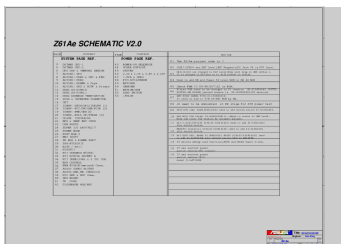

[\[pdf\]](#) Guide Diagram Label

z61ae v2 0 0609 1600 Allen Yu Download Asus laptop Repair Guide PCB Layout Schematic Diagram ASUS Z61Ae Rev2 diagram drive google file d 1Po0APi 5MckZ4uK5NOQos Y71EWN4CEu view usp link ||| 5 4 3 2 1 D D Z61Ae SCHEMATIC V2.0 PAGE Content PAGE Content Notice SYSTEM PAGE REF. P ... B187 B9 3VS 2 1 1 C735 0.1UF c0402 2 C736 0.1UF c0402 GND B133 B183 B77 B71 B121 B193 B41 **B53** B59 B:VSS2 B:VSS3 B:VSS4 B:VSS9 B:VSS11 B:VSS14 B:VSS18 B:VSS19 B:VSS22 B:VSS38 B:VSS39 B:VSS4... lang:en **score:12** filesize: 905.57 K page_count: 57 document date: 2019-01-20



[\[pdf\]](#) User Manual Specifications Guide

015 000040 04 6020 Series Tape Transport Technical Manual 197712 bitsavers informatik uni stuttgart de dg magtape NOTICE Data General Corporation DGC has prepared this manual for use by DGC personnel and custome ... ORT A73 8 B67 48 069 49 A75 1 A78 4 A79 19 STATUS SIGNALS FROM THE TRANSPORT B54 47 **B53** 46 B48 42 A71 9 B49 43 B11 30 B36 39 CLOCK AND COUNTER SIGNALS A63 13 A47 17 A8... lang:en **score:12** filesize: 4.94 M page_count: 94 document date: 2021-05-11

HDCA HARD DISK CONTROLLER REFERENCE MANUAL

MORROW




[pdf] User Manual Warranty

Morrow HDCA Hard Disk Controller Reference 198302 rev2 rescanned by Marcus Bennett HARD DISK CONTROLLER REFERENCE electronic mechanical magnetic optical chemical manual or otherwise without prior written permission of Inc DISCLAIMER No representations warranties express implied are made with respect to the contents hereof including but not limited warranty merchantability fitness for a particular purpose cpmarchives classiccmp org cpm mirrors s100computers Hardware Manuals HDCA HARD DISK CONTROLLER REFERENCE MANUAL ---- ----- Disk Jock- BDCA Controller Technical ... un 10 14:01:27 1982 048B CDDF04 048E D8 048F AF 0490 D351 0492 0680 0494 210000 0495 0497 D=**B53** 0499 D**B53** 049B D**B53** 049D 77 049E 23 049F D**B53** 04A 1 77 04A2 23 04A3 D**B53** 04A5 77 04A6 ... lang:en score:12 filesize: 4.13 M page_count: 97 document date: 2008-03-27

[pdf]

Ürün bilgisi VEGA 50707 TR Ayırma ve koruma cihazları Asiri gerilime karşı koruyucu cihazlar vega api sitecore DocumentDownload Handler documentContainerId 1005012 languageId 18 fileExtension softwareVersion documentGroupId version 28 03 2017 ||| rn bilgisi Airi gerilime karşı koruyucu cihazlar**B53**-19 B61-300, B61-300 FI B62-36G, B62-30W B63-32, B63-48 B81-35 Document ID: 50707 indekiler indekiler 1 rn tanimi..... lang:id score:11 filesize: 2.32 M page_count: 8 document date: 2021-08-24

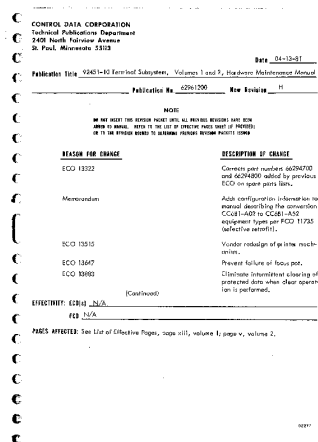



[pdf] User Manual Parts List

62961200H 92451 10 Terminal Subsystem Hardware Maintenance Manual Apr1981 bitsavers org cdc terminal informatik uni stuttgart de c CONTROL DATA CORPORATION C Technical Publications Department /,1 2401 North Fairview Avenue o S ... quipment type per FCO 11735 selective retrofit . CC6B 1-B03 equipments were converted to the CC6B1-**B53** equipment type per FCO 11735 selective retrofit . CC6B1-B CC6B1-B f 54 11735 55 117... lang:en score:11 filesize: 21.31 M page_count: 260 document date: 2020-02-21

[pdf] Diagram

Asus A6Rp Schematics s manuals Download Motherboard Free asus a6rp r2 0 schematics motherboard ||| 5 4 3 2 1 Yonah/RC410MD/IXP450 BLOCK DIAGRAM D D Yonah M 478 uFCPGA 2,3 CLOCK GEN. ICS95141 ... M_A_DQ60 M_A_DQ57 M_A_DQ59 M_A_DQ63 B111 B117 B95 B81 B87 B103 B47 B133 B183 B77 B71 B121 B193 B41 **B53** B59 B65 B:VDD2 B:VDD3 B:VDD5 B:VDD7 B:VDD9 B:VDD10 B:VSS1 B:VSS2 B:VSS3 B:VSS4 B:VSS9 B:VSS11 B... lang:i-klinton score:11 filesize: 960.14 K page_count: 51 document date: 2016-03-09

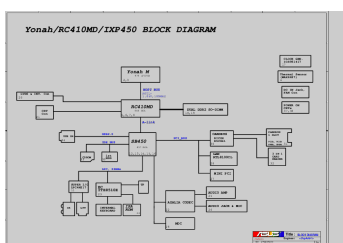

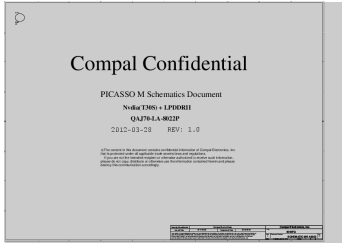


[pdf] Confidentiality Request Letter

Compal LA 8022P Schematics s manuals ACER Cell Service Manualv1mobile app 11201114721 Acer Iconia Tab A701 schematics t 1661070254 |||
A ZZZ0 PCB MB 1 2 3 B C D Compal Confidential PICASSO M Schematics Document Nvidia T30S LPDDR1 ... B38 A45 B40 A47 A48 B41 A49 B42 A50 B43 A51 B45 A53 B46 A54 A55 B47 A56 B48 A57 B50 A59 B51 B52 A62 **B53** B8 A10 TA10 TA11 TA12 TA13 TA14 TA15 TA16 TA17 TA18 TA19 TB10 TB11 TB12 TB13 TB14 TB15 TB16 TB1...
lang:en score:11 filesize: 1.38 M page_count: 39 document date: 2014-04-29




[pdf]

34149 TR Kapitel Trenn und Schutzgeraete vega api sitecore DocumentDownload Handler documentContainerId 1002761 languageId 18 fileExtension softwareVersion documentGroupId version 28 04 2020 |||
Ayrırma ve koruma cihazlari Uygulama alanı Bu cihazlar Ex direktiflerinin uygulanmasını n gren tm uyg ... taji ve ikarılabilir, kodlanmı klemensler sayesinde kolay kurulum 75 Ayırma ve koruma cihazlari **B53**-19/B61-300/B61-300 FI B62-36G/B62-30W Uygulama **B53**-19: letken lm sondalarinin airi gerilim gv...
lang:id score:11 filesize: 392.28 K page_count: 4 document date: 2021-07-01

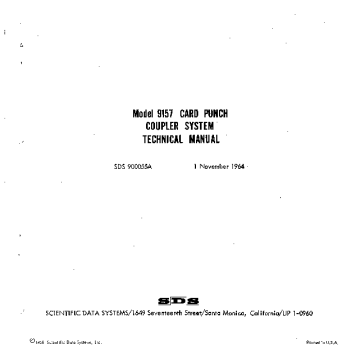


[pdf] User Manual Instructions Safety Datasheet

900055A 9157 Card Punch Coupler Technical Manual Nov64 bitsavers org sds 9xx periph textfiles .. J Model, 9157 CARD PUNCH COUPLER SYSTEM TECH.NICAL MANUAL SDS 900055A 1 November 1964 I81 Is ... RI39 856 I 39M Shl 21 B55 --.. r--:h2 29 854 -,.... Sh3 40 . . 853 39M 10 3 857 01 I f V **B53**- I R 8 ShQ - 852 I 38M s 7 5hl 21 IIR 851 38 M . -; t , - 29 rrB5- 38M RI 39 849 38M 8...
lang:en score:11 filesize: 3.6 M page_count: 97 document date: 2017-06-17

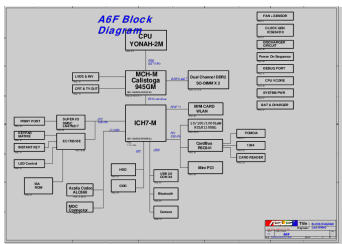


[pdf] Diagram

Asus A6F Schematics s manuals Download Motherboard Free asus a6f r1 1 schematics motherboard ||| 5 D C PRINT PORT PAGE 44 KEYPAD MATRIX PAGE 37 INSTANT KEY PAGE 37 B LED Control PAGE 37 ISA ROM PAG ... = LANES REVERSED CFG All are sampled with respect to the leading edge of the GMCH PWROK 001 = FSB**B53** 2:0 FSB Freq select 011 = FSB667 4:3 2 2 GND 7 MCH_CFG_19 0 = DMI X 2 5 DMI X 2 Selec...
lang:de score:11 filesize: 1.16 M page_count: 64 document date: 2014-06-15

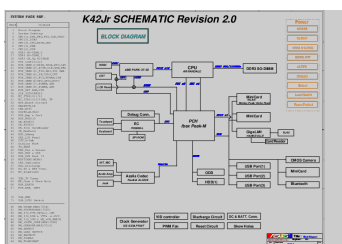

[pdf] Diagram

Asus K42Jr Schematics s manuals Download Motherboard Free asus k42jr r2 0 schematics motherboard ||| 5 SYSTEM PAGE REF. PAGE Content 1 Block Diagram 2 System Setting 3 CPU 1 _DMI,PEG,FDI,CLK,MISC 4 ... hm 2 150Ohm 2 150Ohm 2 1 R2312 1 R2317 1 R2316 1 1 1 GND CRT_B_PCH CRT_G_PCH CRT_R_PCH AA52 **AB53** AD53 CRT_BLUE CRT_GREEN CRT_RED 47 DDC_CLK_PCH 47 DDC_DATA_PCH V51 V53 CRT_DDC_CLK CRT_D...
lang:de score:11 filesize: 3.87 M page_count: 98 document date: 2015-11-03

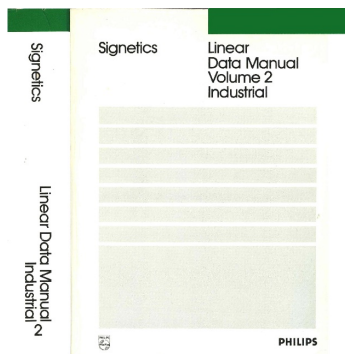


[pdf] User Manual Warranty

1989 Signetics Linear Data Manual Vol 2 Industrial bitsavers informatik uni stuttgart de components signetics dataBooks org

e-Q-n m:o---J. en Signetics Linear Data Manual Volume 2 Industrial --r- :::J CD Q - PHILIPS ... R CODE NE5212N NE5212D NE5212FE SA5212D SA5212N SA5212FE SE5212N SE5212FE December 7, 19BB 4-307 **B53**-1266 95294 Signetics Linear Products Transimpedance Amplifier 140MHz Product Specification ...

lang:en score:11 filesize: 87.92 M page_count: 1466 document date: 2017-07-22

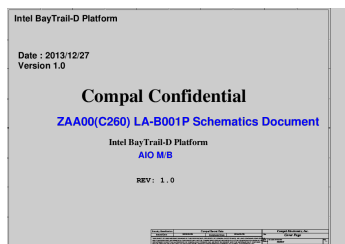


[pdf] Confidentiality Request Letter

Compal LA B001P Schematics s manuals Download Motherboard ZAA00 Free compal la b001p r1 0 schematics motherboard |||

A B C D E Intel BayTrail-D Platform 1 1 Date : 2013/12/27 Version 1.0 2 Compal Confidentialia ... VSS_BF16 BF24 B AC35 B2 A6 VSS_AC33 VSS_AG25 VSS_AC35 VSS_B2 9 OF 13VS VSS_SA_GB3562 AG36 B52 **B53** M28 VSS_AM40 VSS_AT16 AT19 VSS_M28 10 OF 13 VSS_AT19 AY32 VSS_AY22 VSS_BF24 BF38 VSS_AY32 ...

lang:en score:11 filesize: 1.56 M page_count: 49 document date: 2015-04-12

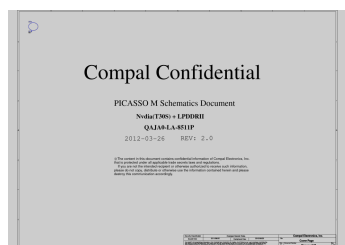


[pdf] Confidentiality Request Letter

Compal LA 8511P Schematics s manuals Download Tablet Acer Iconia Tab A510 Service and Disassembly Assembly Free compal la 8511p r2 0 schematics motherboard |||

A ZZZ0 PCB MB 1 2 3 B C D Compal Confidential PICASSO M Schematics Document Nvdia T30S LPDDR4 ... B38 A45 B40 A47 A48 B41 A49 B42 A50 B43 A51 B45 A53 B46 A54 A55 B47 A56 B48 A57 B50 A59 B51 B52 A62 **B53** B8 A10 TA10 TA11 TA12 TA13 TA14 TA15 TA16 TA17 TA18 TA19 TB10 TB11 TB12 TB13 TB14 TB15 TB16 TB1...

lang:en score:11 filesize: 1020.17 K page_count: 39 document date: 2015-11-13

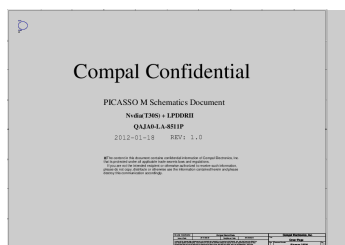


[pdf] Confidentiality Request Letter

Compal LA 8511P Schematics s manuals Download Tablet Acer Iconia Tab A510 Service and Disassembly Assembly Free compal la 8511p r1 0 schematics motherboard |||

A ZZZ0 PCB MB 1 2 3 B C D Compal Confidential PICASSO M Schematics Document Nvdia T30S LPDDR4 ... B38 A45 B40 A47 A48 B41 A49 B42 A50 B43 A51 B45 A53 B46 A54 A55 B47 A56 B48 A57 B50 A59 B51 B52 A62 **B53** B8 A10 TA10 TA11 TA12 TA13 TA14 TA15 TA16 TA17 TA18 TA19 TB10 TB11 TB12 TB13 TB14 TB15 TB16 TB1...

lang:en score:11 filesize: 843.66 K page_count: 39 document date: 2014-04-09

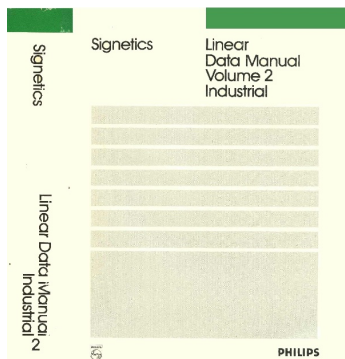


[pdf] User Manual Warranty

1989 Signetics Linear Data Manual Vol 2 Industrial bitsavers informatik uni stuttgart de components signetics dataBooks org


e n- Signetics o-m--. en Linear Data Manual Volume 2 Industrial :r:J-- oCD -, . oCJ - -:J 0_ _ Ne 1 V NON-INVERTING 3 INPUT y- 4 6 OUTPUT 5 --:--- TOP VIEW November 3, 1987 VEE 4-66 **B53**-0943 91256 Signetics linear Products High Slew Rate Operational Amplifier Product Specificati...

lang:en score:10 filesize: 86.66 M page_count: 1466 document date: 2017-07-25

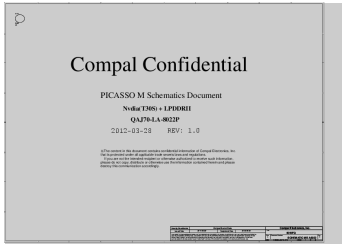


[\[pdf\]](#) Confidentiality Request Letter

Compal LA 8022P Schematics s manuals Acer THIS SHEET OF ENGINEERING DRAWING IS THE PROPRIETARY PROPERTY COMPAL ELECTRONICS INC AND CONTAINS Iconia Tab A701 schematics t 1547231348 mobilephone manualsonline app 11017504973
A ZZZ0 PCB MB 1 2 3 B C D Compal Confidential PICASSO M Schematics Document Nvidia T30S LPDDR4 ... B38 A45 B40 A47 A48 B41 A49 B42 A50 B43 A51 B45 A53 B46 A54 A55 B47 A56 B48 A57 B50 A59 B51 B52 A62 **B53** B8 A10 TA10 TA11 TA12 TA13 TA14 TA15 TA16 TA17 TA18 TA19 TB10 TB11 TB12 TB13 TB14 TB15 TB16 TB1...
lang:en **score:10** filesize: 1.38 M page_count: 39 document date: 2014-04-29

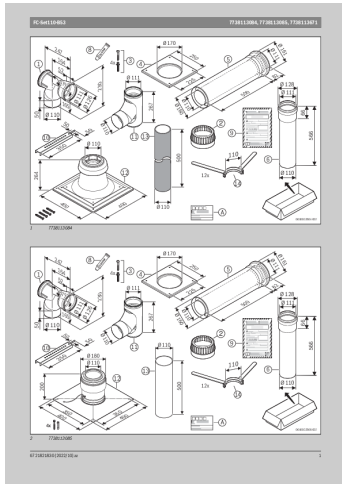


[\[pdf\]](#)

6721821830 DCL3703 fm fog8we token rb0a6qqks01nlrvpv8nqno09h0 junkers cz cs b boschtt documents file |||
FC-Set110-**B53** 7738113084, 7738113085, 7738113671 66 566 50 247 1 164 52 87 165 110 50 10 350 111 126 230 SILICONE 8 4x 34 111 170 250 226 5 500 82 128 111 161 111 267 500 110 160 110 50 110 11 13 12 2 9 110 01 // i 12x 14 6 110 264 400 400 110 ...
lang:de **score:10** filesize: 3.36 M page_count: 16 document date: 2022-10-25

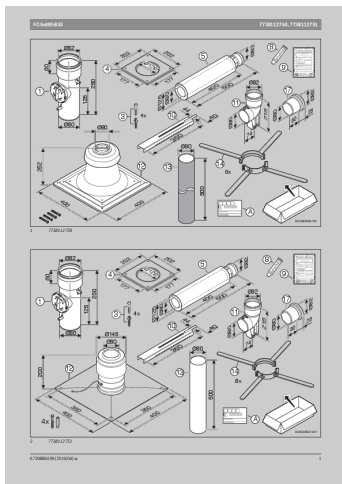

[\[pdf\]](#)


untitled Montageanleitung BOSCH Abgas Standardpaket BOPA FC12 S Schacht starr 80 10m RLA 7739619184 bomaim 6720886499 000 00 shkhelden de media 5c 6e 3e 1714666418 |||
252 60 125 250 FC-Set80-**B53** 82 1 80 7738112750, 7738112751 82 SILICONE 80 215 80 82 202 4 177 129 202 177 125 80 3 4x 80 44 10 350 80 5 400 500 82 11 40 74 8 9 01 // i 17 26 60 12 13 14 6x 500 200 60 125 250 400 1 7738112750 82 1 80 12 400 350 4x 2 7738112751...
lang:de **score:10** filesize: 2.76 M page_count: 12 document date: 2019-05-09

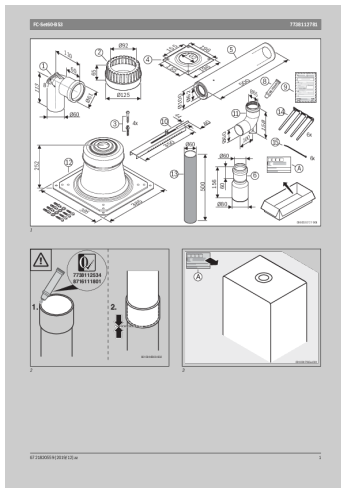

[pdf]

6721820559 001 DCL3628 fm bef8we token rb0a6qqks01nlrvp8nqno09h0 junkers cz cs b boschtt documents
file |||

252 FC-Set60-**B53** 110 1 60 87 113 60 12 61 65 7738112781 92 2 4 155 102 196 155 196
125 5 500 8 65 SILICONE 9 01 // i 100 62 60 3 4x 44 10 11 40 350 60 100 60 13 6 158 14
6x 15 6x A 500 156 60 385 385 1 80 0010031727-001 7738112534 A 8716111801 1. 2. ...
lang:de score:10 filesize: 1.91 M page_count: 12 document date: 2020-01-28

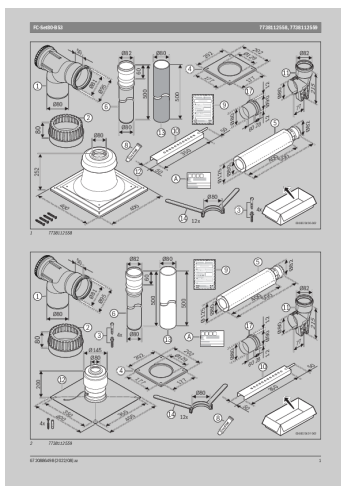


[pdf]

6720886498 003 DCL2093 fm bef8we token rb0a6qqks01nlrvp8nqno09h0 junkers cz cs b boschtt documents
file |||

FC-Set80-**B53** 7738112558, 7738112559 80 12 90 12 80 82 215 50 82 80 202 129202 82
60 500 4 177 11 177 81 95 1 17 500 80 6 2 80 80 01 // i 13 10 9 77 50 60 28 5 SILICONE 8
350 400 500 125 80 12 50 A 80 252 400 1 7738112558 80 400 3 4x 14 12x 0010020496-
002...


lang:de score:10 filesize: 3.73 M page_count: 12 document date: 2022-08-04

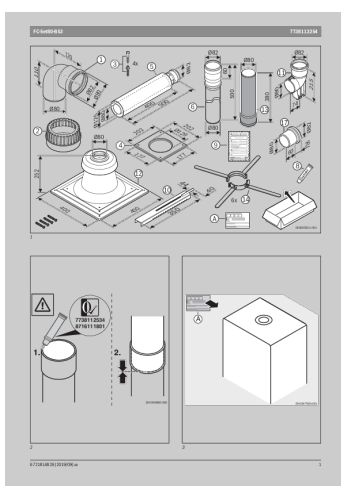

[pdf] Catalog


untitled 44 1 13 17 11 A 3 10 14 6 8 2 5 4 12 9 dxdknq40pytt3x9nwg9w wattoo dk media catalog product files |||
FC-Set80-**B53** 120 13 4x 5 82 7738113254 82 82 80 11 215 60 500 110 380 80 82 90 252
80 2 400 1 125 80 400 500 6 13 74 202 80 4 177 12 400 129202 177 80 9 01 // i 44 10 350
40 6x 14 A 80 17 26 60 8 0010030644-001 SILICONE 82 7738112534 A 8716111801 1. 2.
2 672...

lang:de score:10 filesize: 2.22 M page_count: 12 document date: 2019-12-06

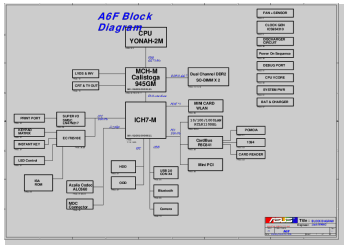


[pdf] User Manual Diagram

a6f 20 030306 hk Hawk Zhu ASUS A6F 1 Index of manual Ð½Ð¾ÑŒÐ±ÑŒÐ°Ð, asus 484869 ru ноутбуки |||
5 D C PRINT PORT PAGE 44 KEYPAD MATRIX PAGE 37 INSTANT KEY PAGE 37 B LED
Control PAGE 37 ISA ROM PAG ... = LANES REVERSED CFG All are sampled with
respect to the leading edge of the GMCH PWROK 001 = FSB**533** 2:0 FSB Freq select 011
= FSB667 4:3 2 2 GND 7 MCH_CFG_19 0 = DMI X 2 5 DMI X 2 Selec...
lang:de score:10 filesize: 1.15 M page_count: 63 document date: 2006-03-07

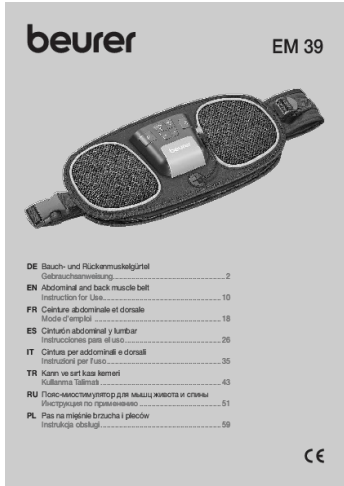

[pdf]

647 04 EM39 2019 12 IM1 BEU indd Инструкция по эксплуатации BEURER
b5388282f323f877981c92406373a6dd m fotosklad ru upload iblock b53
EM 39 DE Bauch- und Rckenmuskeltel
Gebrauchsanweisung..... 2 EN Abdominal and back muscle
belt Instruction for Use..... 10 FR Ceinture abdominale et
dorsale Mode d emploi
lang:de score:9 filesize: 779.68 K page_count: 68 document date: 2020-10-05

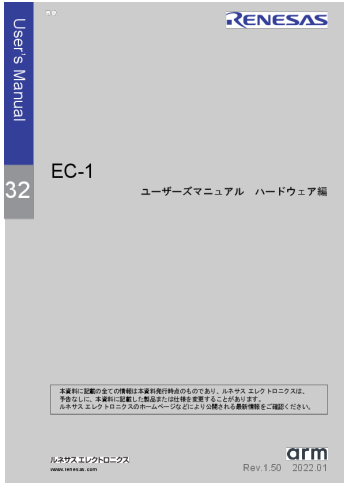

[pdf] User Manual

EC 1 Renesas Electronics Corporation 2021 02 01 — User s Manual 32 Rev 50 2022
r01uh0691jj0150 ec renesas document mah users manual hardware language ja r 1216011 |||
User s Manual EC-1 32 www.renesas.com Rev.1.50 2022.01 1. 2. 3. 4. 5. 6 ... -1
22.EtherCAT 22.3.16.2 1 DC_SYS_TIME A00D 0910h b63 b62 b61 b60 b59 b58 b57 b56
b55 b54 **b53** b52 b51 b50 b49 b48 SYSTIME 0 0 0 0 0 0 0 0 0 0 0 0 0 0 b47 b46 b45 b44
b...
lang:en score:9 filesize: 14.73 M page_count: 1347 document date: 2022-01-27




[pdf] Instructions

Asennusohje Kierreportaat Fontanot Pixima Steel Zink Ø 120 cm Taloon portaat fontanot pixima steel zink
asennusohje taloon media attachments |||

STEEL ZINK Italiano English Deutsch Franais Espaol Portugus Nederlands Polski Cesky Romn Magyar T ... 1 superiore fig. 1 . Posizionare le colonnine C07 mantenendo l orientamento dei fori dell elemento **B53** verso il centro della scala e facendo in modo che la svasatura dell elemento rimanga verso l int...

lang:it score:9 filesize: 960.64 K page_count: 64 document date: 2013-11-22

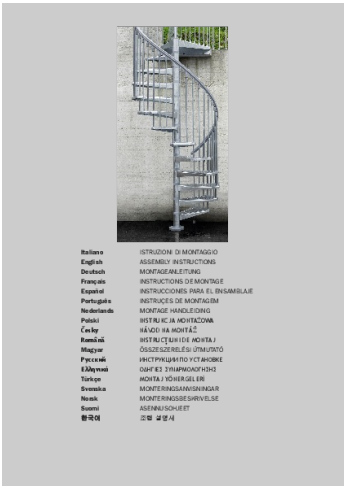

[pdf] Instructions

5d55dd85 3f2f 4cda ae25 e978a1052c84 media adeo marketplace LMFR 69864466 |||

Italiano English Deutsch Franais Espaol Portugus Nederlands Polski Cesky Romn Magyar Trke Svenska ... 1 superiore fig. 1 . Posizionare le colonnine C07 mantenendo l orientamento dei fori dell elemento **B53** verso il centro della scala e facendo in modo che la svasatura dell elemento rimanga verso l int...

lang:it score:9 filesize: 2.23 M page_count: 64 document date: 2017-02-08