

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vocal-Star](#) /

› [Vocal-Star VS-Phoenix Karaoke Machine User Manual](#)

## Vocal-Star VS-Phoenix

# Vocal-Star VS-Phoenix Karaoke Machine User Manual

Model: VS-Phoenix | Brand: Vocal-Star

## 1. INTRODUCTION

Thank you for purchasing the Vocal-Star VS-Phoenix Karaoke Machine. This all-in-one portable karaoke system is designed to provide exceptional audio performance and dynamic light effects for your entertainment needs. With its powerful 300W output, dual wireless microphones, and versatile connectivity options, the VS-Phoenix is perfect for parties, family gatherings, or casual singing sessions.

This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new karaoke machine. Please read it thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.



Figure 1.1: The Vocal-Star VS-Phoenix Karaoke Machine, showcasing its main unit, two wireless microphones, and a tablet demonstrating its use for karaoke.

## 2. SAFETY INFORMATION

To ensure safe operation and prolong the lifespan of your device, please observe the following safety precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, stoves, or other heat-producing appliances.
- Do not block any ventilation openings. Ensure proper airflow around the unit.
- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Clean the unit only with a dry cloth. Do not use liquid cleaners or aerosol cleaners.
- Ensure the unit is placed on a stable, flat surface to prevent it from falling.

## 3. PACKAGE CONTENTS

---

Please check the box for the following items:

- Vocal-Star VS-Phoenix Karaoke Machine
- 2 x Wireless Microphones
- Power Adapter
- User Manual (this document)

## 4. SETUP

---

### 4.1 Charging the Unit

Before first use, fully charge the VS-Phoenix. Connect the supplied power adapter to the DC IN port on the back of the unit and plug it into a wall outlet. The charging indicator light will illuminate. Once fully charged, the indicator may change color or turn off, depending on the model.

### 4.2 Powering On/Off

Press and hold the Power button located on the control panel to turn the unit ON or OFF.

### 4.3 Microphone Pairing

The included wireless microphones are pre-paired with the VS-Phoenix. Simply insert batteries (not included) into the microphones and turn them on. They should automatically connect to the karaoke machine. If connection issues occur, ensure the microphones are within range and have fresh batteries.

### 4.4 Connecting Audio Sources

The VS-Phoenix offers multiple ways to connect your audio source:

- **Bluetooth:** Turn on the VS-Phoenix and enable Bluetooth on your smartphone, tablet, or other device. Search for "VS-Phoenix" in your device's Bluetooth settings and pair.
- **AUX Input:** Connect an external audio device (e.g., MP3 player, TV) to the AUX IN port using a 3.5mm audio cable (not included).
- **USB/TF Card:** Insert a USB flash drive or TF (MicroSD) card containing MP3 audio files into the respective ports. The unit will automatically begin playing music.



Figure 4.1: Detailed view of the VS-Phoenix control panel, highlighting input ports and adjustment knobs.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

- **Master Volume:** Use the large rotary knob to adjust the overall volume of the music and microphones.
- **Mic Volume:** Adjust the volume of the microphones independently using the dedicated MIC VOL knob.
- **Echo Effect:** Use the ECHO knob to add or reduce the echo effect on the microphone vocals.
- **Bass & Treble:** Fine-tune the audio output using the BASS and TREBLE knobs to suit your preference.
- **EQ Presets:** Cycle through different equalizer presets (e.g., Jazz, Pop, Country) using the EQ button to optimize sound for various music genres.
- **Mode Button:** Press to switch between input modes (Bluetooth, AUX, USB, TF Card).
- **Playback Controls:** Use the Play/Pause, Previous, and Next buttons for media playback when using USB/TF card or Bluetooth.

### 5.2 Light Effects

The VS-Phoenix features dynamic LED light effects on the woofers and side panels to enhance your party atmosphere. The lights automatically synchronize with the music. There may be a dedicated button to cycle through different light modes or turn them off, depending on the model's specific features.



Figure 5.1: The VS-Phoenix demonstrating its vibrant light projection capabilities, illuminating the surrounding area.



Figure 5.2: Examples of the diverse light patterns and colors produced by the VS-Phoenix, creating a dynamic visual experience.

## **6. MAINTENANCE**

---

### **6.1 Cleaning**

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

### **6.2 Storage**

When not in use for extended periods, store the unit in a cool, dry place, away from direct sunlight and extreme

temperatures. Ensure the battery is partially charged (around 50%) before storing to maintain battery health.

## 6.3 Battery Care

The VS-Phoenix uses a Lithium-ion battery. To maximize battery life:

- Avoid fully discharging the battery frequently.
- Do not leave the unit plugged in constantly after it's fully charged.
- Recharge the battery at least once every 3 months if not used regularly.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power adapter not connected properly.	Charge the unit; Ensure power adapter is securely connected to both the unit and the wall outlet.
No sound from speaker	Volume too low; Incorrect input mode selected; Audio source not playing.	Increase Master Volume; Press MODE button to select correct input; Ensure your connected device is playing audio.
Microphone not working	Microphone batteries are low or dead; Microphone is off; MIC VOL is too low.	Replace microphone batteries; Turn on microphone; Increase MIC VOL knob.
Bluetooth connection unstable	Device is too far from the unit; Interference from other devices.	Move your device closer to the VS-Phoenix; Turn off other Bluetooth devices nearby.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	VS-Phoenix
Brand	Vocal-Star
Power Output	300W (Peak)
Connectivity	Bluetooth, AUX (3.5mm), USB, TF Card
Microphones	2 x Wireless Microphones
Speaker Size	2 x 6.5 inch woofers
Special Features	Portable design, LED light effects, Bass & Treble control, Echo effect, EQ presets
Power Source	Battery Powered (Lithium-ion) / AC Adapter

## 9. WARRANTY AND SUPPORT

Vocal-Star products are designed and manufactured to the highest quality standards. For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official Vocal-Star website. Please retain your proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact Vocal-Star customer support through their official channels. Do not attempt to repair the unit yourself.

---

© 2024 Vocal-Star. All rights reserved.  
This manual is subject to change without notice.