

Faber 131.0704.651

Faber 6L 1500W Digital Air Fryer Instruction Manual

Model: 131.0704.651

1. Important Safety Instructions

Please read this instruction manual carefully before using the appliance and save it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block the air inlet or outlet vents during operation.
- Never fill the basket with oil beyond the maximum level indicated, as this could create a fire hazard.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when removing the hot basket and food.

2. Product Overview

The Faber 6L 1500W Digital Air Fryer is designed for healthier cooking, utilizing 360° Rapid Air Technology to fry, bake, roast, toast, defrost, grill, and reheat food with significantly less oil.

COMPONENTS

- Main Unit with Digital Touch Panel
- Removable Non-Stick Frying Basket
- Cooking Rack/Crisper Plate
- Power Cord



Image: Front view of the Faber 6L Digital Air Fryer with food visible through the view window, illustrating the cooking process.



Image: A clear front view of the Faber 6L Digital Air Fryer, showcasing its sleek black design and digital control panel.



Image: The Faber 6L Digital Air Fryer with its non-stick frying basket partially pulled out, revealing the interior cooking space.

3. Setup

BEFORE FIRST USE

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.

PLACEMENT

- Place the air fryer on a stable, level, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.

- Do not place the appliance near flammable materials or heat sources.

4. Operating Instructions

BASIC OPERATION

1. Plug the power cord into a grounded wall outlet. The display will illuminate briefly.
2. Carefully pull the frying basket out of the air fryer.
3. Place the crisper plate inside the basket.
4. Place your ingredients into the frying basket. Do not exceed the MAX fill line.
5. Slide the frying basket back into the air fryer until it clicks into place.
6. Press the Power button to turn on the appliance.

TEMPERATURE AND TIME CONTROL

- Use the temperature control buttons (+ / -) to adjust the cooking temperature (typically 80°C to 200°C).
- Use the time control buttons (+ / -) to set the cooking time (typically 1 to 60 minutes).
- The air fryer will automatically start cooking after a few seconds if no preset is selected.

USING PRESET MENUS

The Faber Air Fryer features 8 preset menus for common dishes. To use a preset:

1. After turning on the appliance, press the Menu button repeatedly to cycle through the preset options.
2. Once the desired preset icon is selected, the air fryer will automatically set the optimal temperature and time.
3. You can manually adjust the temperature and time even after selecting a preset if needed.
4. The cooking process will begin automatically.



Image: Close-up of the digital touch control panel on the Faber Air Fryer, showing various preset cooking icons for different food types.

COOKING PROCESS

- During cooking, the air fryer's 360° Rapid Air Technology circulates hot air for even results.
- For some recipes, it may be necessary to shake the basket halfway through the cooking time to ensure even browning. Carefully pull out the basket, shake it, and slide it back in. The appliance will resume cooking.
- The integrated view window allows you to monitor your food without opening the basket, preserving heat and cooking efficiency.
- When the cooking time is complete, the air fryer will beep. Carefully pull out the basket and transfer the cooked food to a plate.



Image: A visual representation of the rapid air circulation technology, showing hot air evenly distributing around food for efficient cooking.

5. Maintenance

CLEANING

Clean the air fryer after every use.

1. Unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the exterior of the air fryer with a damp cloth.
3. Clean the non-stick frying basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. The non-stick coating ensures easy cleaning.
4. For stubborn food residue, soak the basket and plate in hot water with dish soap for about 10 minutes.
5. Do not use metal utensils or abrasive cleaning materials on the non-stick surfaces.
6. Wipe the interior of the appliance with a damp cloth.



Image: The detachable frying basket of the Faber Air Fryer, highlighting its ease of removal for cleaning.



Image: A hand cleaning the non-stick frying basket under running water, demonstrating the ease of cleaning due to its non-stick coating.

STORAGE

Ensure the appliance is clean and dry before storing. Store it in a cool, dry place.

6. Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overloaded; food not shaken.	Reduce the amount of food; shake the basket halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly; remove excess oil from ingredients.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil; increase temperature or cooking time.

7. Specifications

Technical specifications for the Faber 6L 1500W Digital Air Fryer.



Image: Diagram showing the dimensions of the Faber 6L Digital Air Fryer: 348mm width, 253mm depth, and 297mm height.

Feature	Detail
Model Name	131.0704.651
Capacity	6 Litres
Output Wattage	1500 Watts
Voltage	240 Volts
Control Method	Touch Control
Special Feature	Temperature Control, 8-Preset Menu, LED Display, View Window
Material	Acrylonitrile Butadiene Styrene (Outer), Non-stick (Inner)
Product Dimensions (D x W x H)	35.5D x 28W x 33.8H Centimeters
Item Weight	4.3 Kilograms
Color	Black
Air Frying Technology	Rapid Air Technology
Country of Origin	India

8. Warranty and Support

The Faber 6L 1500W Digital Air Fryer comes with a **2-year warranty** from the date of purchase, covering manufacturing defects under normal use.

CONTACT INFORMATION

For warranty claims, technical support, or any product-related inquiries, please contact Faber customer service:

- **Manufacturer:** Franke Faber India Pvt Ltd
- **Address:** 1086/1/2, SANASWADI, TAL - SHIRUR, PUNE - 412208, MAHARASHTRA, INDIA
- **Customer Service Contact:** 1800-209-3484

Please retain your purchase receipt as proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question