



[Manuals.plus](#) /

> [ONKRON](#) /

> ONKRON Mobile TV Stand on Wheels for 32-75 Inch TVs, max Load up to 132 lbs, Height Adjustable TV Stand Portable, VESA 200x200-600x400, Rolling TV Cart with Shelf/TV Moving Stand Black 32-75" / Up to 132 lbs / Black

ONKRON TS1571-B

ONKRON Mobile TV Stand User Manual

Model: TS1571-B | Brand: ONKRON

1. INTRODUCTION

Thank you for choosing the ONKRON Mobile TV Stand TS1571-B. This versatile and robust TV stand is designed to provide a portable and stable solution for your television, suitable for various environments including homes, offices, and commercial spaces. Its adjustable features and sturdy construction ensure a reliable and convenient viewing experience.

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new TV stand. Please read it thoroughly before beginning assembly and keep it for future reference.

2. SAFETY INFORMATION

Always prioritize safety during assembly and use. Failure to follow these instructions may result in property damage or personal injury.

- **Weight Capacity:** Do not exceed the maximum load capacity of **132 lbs (60 kg)** for the TV mount and **11 lbs (5 kg)** for the media shelf.
- **TV Size:** This stand is designed for TVs between **32 and 75 inches**. Ensure your TV's size and weight are within these limits.
- **VESA Compatibility:** Verify your TV's VESA mounting pattern is compatible (**200x200mm to 600x400mm**).
- **Stable Surface:** Always place the stand on a flat, stable, and level surface.
- **Lock Wheels:** Engage the wheel locking mechanism when the stand is stationary to prevent accidental movement.
- **Children and Pets:** Keep children and pets away from the stand during assembly and ensure the TV is securely mounted to prevent tipping.

- **Professional Assistance:** If you are unsure about any part of the assembly or installation, seek professional assistance.

3. PACKAGE CONTENTS

Before assembly, ensure all parts are present and undamaged. Refer to the image below for a visual representation of the included components and hardware.



Figure 3.1: Overview of all parts and hardware for the ONKRON Mobile TV Stand TS1571-B. This includes the base legs, vertical columns, TV mounting bracket, media shelf, wheels, and various screws, washers, and tools for assembly.

The package typically includes:

- Base Legs (2 pcs)
- Vertical Columns (2 pcs)

- TV Mounting Bracket
- Media Shelf
- Lockable Caster Wheels (4 pcs)
- Hardware Kit (various screws, washers, spacers, and wrenches)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

Assembly of the ONKRON Mobile TV Stand is straightforward. Follow the steps carefully. It is recommended to have two people for assembly, especially when mounting the TV.

Assembly Steps Overview:

1. Attach the base legs to the main column structure.
2. Install the lockable caster wheels onto the base.
3. Assemble the TV mounting bracket and attach it to the vertical columns.
4. Install the media shelf at your desired height.
5. Attach the TV mounting arms to the back of your television.
6. Carefully lift and hang the TV onto the stand's mounting bracket, securing it with the provided safety screws.



Figure 4.1: The ONKRON Mobile TV Stand supporting a large television, highlighting its compatibility with 32-75 inch TVs and a maximum load capacity of 132 lbs. The image also illustrates the VESA mounting range.

Visual Assembly Guide:

For a detailed visual guide on assembly and features, please watch the official product video below:

Video 4.1: Official ONKRON TS1571-B promotional video demonstrating key features, assembly steps, and various applications of the mobile TV stand. The video highlights its stability, adjustability, and ease of movement.

5. OPERATING INSTRUCTIONS

Height Adjustment:

The TV mount height can be adjusted to suit your viewing needs. The stand offers a height range from **39.3 inches (100 cm) to 57.6 inches (146.5 cm)**. To adjust, loosen the securing bolts on the vertical columns, slide the TV mount to the desired height, and re-tighten the bolts securely. Ensure both sides are adjusted evenly.



Figure 5.1: A child demonstrating the height adjustability of the media shelf on the ONKRON Mobile TV Stand. The shelf can be positioned at various heights along the main columns to accommodate different devices and user preferences.

Moving the Stand:

The stand is equipped with reinforced smooth-running wheels for easy mobility. To move the stand, ensure all four wheels are unlocked. Gently push or pull the stand to its new location. Always move the stand slowly and carefully, especially with a TV mounted.

Locking the Wheels:

Once the stand is in its desired position, engage the locking mechanism on each wheel by pressing down the lever. This will prevent the stand from moving accidentally, ensuring stability and safety.



Figure 5.2: Detailed view of the ONKRON Mobile TV Stand's features. This image highlights the sturdy media shelf with its load capacity, the versatile VESA mounting options, the 360-degree rotating and lockable wheels for safe and easy movement, and the integrated cable management system for a tidy setup.

Using the Media Shelf:

The steel media shelf can hold up to **11 lbs (5 kg)** and is ideal for placing devices such as gaming consoles, DVD players, or streaming boxes. The shelf's height is also adjustable along the main columns to suit your setup.

Cable Management:

The stand features a built-in cable management system within the vertical columns. Route your TV and device cables through these channels to maintain a clean and organized appearance, preventing tangles and potential hazards.

6. MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your ONKRON Mobile TV Stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Check Connections:** Periodically check all screws and bolts to ensure they are tight and secure. Re-tighten if necessary.
- **Wheel Inspection:** Inspect the wheels regularly for any debris or damage that might hinder smooth movement. Clean or replace if needed.
- **Load Check:** Always ensure the weight of your TV and devices does not exceed the specified maximum load capacities.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Stand wobbles or is unstable.	Loose connections; uneven floor; overloaded.	Ensure all bolts are tightened. Move to a level surface. Verify TV and shelf weight are within limits.
Difficulty moving the stand.	Wheels are locked; debris in wheels.	Unlock all wheels. Clean any debris from the casters.
TV does not fit the mount.	Incorrect VESA pattern; TV too large/heavy.	Verify your TV's VESA pattern is within 200x200-600x400mm. Check TV size (32-75 inches) and weight (max 132 lbs).
Media shelf is not stable.	Shelf not properly secured; overloaded.	Ensure the shelf is correctly installed and its securing screws are tight. Do not exceed the 11 lbs load capacity.

8. SPECIFICATIONS

- **Brand:** ONKRON
- **Model:** TS1571-B
- **TV Size Compatibility:** 32 - 75 inches
- **Maximum TV Load Capacity:** 132 lbs (60 kg)
- **VESA Compatibility:** 200x200mm, 300x200mm, 300x300mm, 400x200mm, 400x300mm, 400x400mm, 600x400mm
- **Height Adjustment Range:** 39.3 inches (100 cm) to 57.6 inches (146.5 cm)
- **Media Shelf Load Capacity:** 11 lbs (5 kg)

- **Material:** Alloy Steel
- **Item Weight:** 34.7 pounds (15.7 kg)
- **Package Dimensions:** 35.67 x 11.73 x 7.32 inches (90.6 x 29.8 x 18.6 cm)
- **Mounting Type:** Floor Mount
- **Color:** Black

9. WARRANTY AND SUPPORT

ONKRON products undergo multi-stage quality control to ensure safety and reliability. For any questions, concerns, or assistance with your ONKRON Mobile TV Stand, please contact our customer support team. Our experts are ready to help you.

For additional information or to download the official PDF user manual, please visit the ONKRON website or refer to the link provided with your purchase documentation.

Online User Manual (PDF): [Download Here](#)