



Manuals.plus /

› **Technical Precision** /

› Technical Precision Replacement Battery for Fuji/FUJICA/FUJIKARA FOTONEX 20 AUTO Film Camera User Manual

## Technical Precision AX-5ZKS-9

# Technical Precision Replacement Battery User Manual

Model: AX-5ZKS-9

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Technical Precision replacement battery, model AX-5ZKS-9. This battery is designed as a compatible power source for Fuji/FUJICA/FUJIKARA FOTONEX 20 AUTO film cameras. Please read this manual thoroughly before installation and operation to ensure optimal performance and safety.

## SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the battery and your device:

- Do not attempt to disassemble, open, or service the battery.
- Do not crush, puncture, short external contacts, or dispose of in fire or water.
- Do not expose the battery to temperatures above 60°C (140°F).
- Keep the battery away from children.
- If the battery leaks, avoid contact with skin and eyes. If contact occurs, rinse thoroughly with water and seek medical attention.
- Dispose of used batteries according to local regulations. Do not dispose of with household waste.
- Ensure correct polarity when installing the battery.

## PACKAGE CONTENTS

Your package should contain the following item:

- 1 x Technical Precision Replacement Battery (Model: AX-5ZKS-9)

## SETUP AND INSTALLATION

Follow these steps to install the replacement battery into your Fuji/FUJICA/FUJIKARA FOTONEX 20 AUTO film camera:

1. Ensure your camera is powered off before attempting battery installation.
2. Locate the battery compartment on your camera. This is typically on the bottom or side of the camera body.
3. Open the battery compartment cover. You may need to slide a latch or turn a knob.
4. Remove any old batteries, if present, and dispose of them properly.
5. Insert the new Technical Precision replacement battery, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the battery compartment. Incorrect insertion can prevent the camera from powering on or damage the battery/camera.
6. Close the battery compartment cover securely.



Figure 1: Representative image of a CR2 3V Lithium battery, similar to the replacement battery.

## OPERATING INSTRUCTIONS

Once the battery is correctly installed, your camera is ready for use:

- Power on your camera using its designated power switch.
- Monitor the camera's battery indicator, if available, to track the remaining power.
- The battery provides 3V power, suitable for the specified film camera model.
- When the battery is depleted, the camera may display a low battery warning or cease to function. Replace the battery as per the installation instructions.

## MAINTENANCE

Proper care will help extend the life and performance of your battery:

- **Storage:** Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** If the battery contacts become dirty, gently wipe them with a clean, dry cloth to ensure good electrical connection.
- **Disposal:** This is a primary (non-rechargeable) battery. Do not attempt to recharge it. Once depleted, dispose of it responsibly at a designated battery recycling facility.
- **Handling:** Avoid dropping the battery or subjecting it to strong impacts.

## TROUBLESHOOTING

If you encounter issues with your battery, consider the following:

- **Camera Not Powering On:**
  - Check if the battery is inserted with correct polarity (+/-).

- Ensure the battery compartment cover is fully closed.
- Verify the battery is not depleted. Try a new battery if unsure.
- Clean battery contacts in both the camera and on the battery.

- **Low Battery Warning Appears Quickly:**

- The battery may be nearing the end of its life. Replace with a new one.
- Ensure the battery is stored correctly when not in use.

If problems persist after following these steps, please contact customer support.

## SPECIFICATIONS

<b>Model Name</b>	AX-5ZKS-9
<b>Brand</b>	Technical Precision
<b>Compatibility</b>	Fuji/FUJICA/FUJIKARA FOTONEX 20 AUTO Film Camera
<b>Battery Type</b>	CR2 3V Lithium (Primary, Non-Rechargeable)
<b>Unit Count</b>	1.0 Count
<b>Special Feature</b>	High Efficiency, Instant On
<b>Manufacturer</b>	Technical Precision

## WARRANTY AND SUPPORT

For warranty information, please refer to the terms provided at the time of purchase or contact Technical Precision directly. If you require technical assistance or have questions not covered in this manual, please reach out to the seller or manufacturer's customer support.

You can often find contact information on the product packaging or the seller's online store page.